



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Tipper body (Henschel)</b>	<b>1</b>
1.1 Data	1
<b>2 Box body (Junge)</b>	<b>2</b>
2.1 Data	2
<b>3 Box body (Spier)</b>	<b>4</b>
3.1 Data	4
<b>4 Box body (Schmitz Cargobull)</b>	<b>6</b>
4.1 General information	6
4.2 Data	6
<b>5 Tail lift (Sörensen)</b>	<b>8</b>
5.1 General information	8
5.2 Data	9
<b>6 Tail lift (BÄR - Cargolift)</b>	<b>12</b>
6.1 General information	12
6.2 Data	13
<b>7 Tail lift (Palfinger)</b>	<b>15</b>
7.1 General information	15
7.2 Data	16
<b>8 Design double tube bar</b>	<b>17</b>
8.1 Safety information	17
<b>9 Hazard classification of high-voltage system</b>	<b>18</b>
<b>27 - Starter, current supply, CCS</b>	<b>19</b>
<b>1 Preparation for second battery</b>	<b>19</b>
1.1 System overview – preparation for second battery	19
1.2 Overview of fitting locations – preparation for second battery	20
1.3 Removing and installing second battery charging circuit relay J713	22
1.4 Notes on function of second battery charging circuit relay J713	23
<b>53 - Body - rear</b>	<b>24</b>
<b>1 Storage well liner and load compartment trim for rear lid</b>	<b>24</b>
1.1 Assembly overview - storage well liner	24
1.2 Removing and installing storage well liner	25
1.3 Removing and installing load compartment for rear lid	26
<b>2 Aluminium load compartment trim</b>	<b>29</b>
2.1 General notes	29
2.2 Assembly overview - aluminium load compartment trim	29
2.3 Removing and installing load compartment trim, aluminium	31
<b>3 Bracket and wing for single and twin tyres, tipper body</b>	<b>38</b>
3.1 Assembly overviews - wing bracket	38
3.2 Removing and installing wings	41
3.3 Removing and installing wing bracket	42
<b>61 - Convertible roof, hardtop, canopy</b>	<b>44</b>
<b>1 Hardtop</b>	<b>44</b>
1.1 Assembly overview - hardtop	44
1.2 Removing and installing hardtop	44
1.3 Renewing adhesive film	48
1.4 Renewing seals	49
1.5 Removing and installing gas strut	50



1.6	Removing and installing vent window	50
<b>66</b>	<b>- Exterior equipment</b>	<b>53</b>
<b>1</b>	<b>Tipper body (Henschel)</b>	<b>53</b>
1.1	Load bed	53
1.2	Hydraulic system	63
<b>2</b>	<b>Tipper body (Schoon)</b>	<b>72</b>
2.1	Load bed	72
2.2	Hydraulic system	75
<b>3</b>	<b>Box body (Junge)</b>	<b>82</b>
3.1	Box body, exterior	82
3.2	Box body, rear	82
<b>4</b>	<b>Box body (Spier)</b>	<b>87</b>
4.1	Box body, exterior	87
4.2	Box body, rear	90
<b>5</b>	<b>Box body (Schmitz Cargobull)</b>	<b>95</b>
5.1	Box body, exterior	95
5.2	Box body, rear	99
<b>6</b>	<b>Tail lift (Sørensen)</b>	<b>110</b>
6.1	Platform	110
6.2	Hydraulic system	115
<b>7</b>	<b>Tail lift (BÄR - Cargolift)</b>	<b>123</b>
7.1	Platform	123
7.2	Hydraulic system	127
<b>8</b>	<b>Tail lift (Palfinger)</b>	<b>137</b>
8.1	Platform	137
8.2	Hydraulic system	142
<b>9</b>	<b>Repairing box body</b>	<b>152</b>
9.1	Repairing plywood panel	152
9.2	Repairing sandwich panel	156
9.3	Repairing transparent roof	172
<b>10</b>	<b>Trim film and protective film</b>	<b>176</b>
10.1	Assembly overview - protective films	176
10.2	Renewing protective films	178
<b>11</b>	<b>Taxi roof sign preparation</b>	<b>183</b>
11.1	Removing and installing taxi roof sign preparation	183
<b>12</b>	<b>Taxi roof sign preparation</b>	<b>185</b>
12.1	Removing and installing taxi roof sign preparation	185
<b>13</b>	<b>Roof spoiler</b>	<b>187</b>
13.1	Removing and installing roof spoiler	187
<b>14</b>	<b>Mounting bracket for towing bracket</b>	<b>189</b>
14.1	Assembly overview - mounting bracket for towing bracket	189
14.2	Removing and installing mounting bracket for towing bracket	189
<b>15</b>	<b>Roof basket</b>	<b>191</b>
15.1	Assembly overview - roof basket	191
15.2	Removing and installing roof basket	193
<b>16</b>	<b>Storage box on drop-side</b>	<b>197</b>
16.1	Assembly overview - storage box on drop-side	197
16.2	Removing and installing storage box on drop-side	197
<b>17</b>	<b>Cross strut</b>	<b>199</b>
17.1	Assembly overview - cross strut	199
17.2	Removing and installing cross strut	201
<b>18</b>	<b>Storage box under drop-side</b>	<b>205</b>



18.1	Assembly overview - storage box bracket	205
18.2	Removing and installing bracket for storage box	208
<b>19</b>	<b>Side underbody guard</b>	<b>210</b>
19.1	Assembly overview - side underbody guard	210
19.2	Removing and installing side underbody guard	210
<b>20</b>	<b>Storage box</b>	<b>212</b>
20.1	Assembly overview - storage compartment	212
20.2	Removing and installing storage compartment	212
<b>21</b>	<b>Ladder carrier</b>	<b>214</b>
21.1	Assembly overview - ladder carrier	214
21.2	Removing and installing ladder carrier	216
<b>22</b>	<b>Roof carrier system with securing device</b>	<b>219</b>
22.1	Assembly overview - roof carrier system with securing device	219
22.2	Removing and installing roof carrier system with securing device	219
<b>23</b>	<b>Easy Entry, right rear wing door</b>	<b>221</b>
23.1	Assembly overview - Easy Entry, right rear wing door	221
23.2	Removing and installing Easy Entry, right rear wing door	221
<b>24</b>	<b>Underbody guard (protection package)</b>	<b>225</b>
24.1	Assembly overview - underbody guard (protection package)	225
24.2	Removing and installing underbody guard (protection package)	227
<b>25</b>	<b>Roof ventilator</b>	<b>231</b>
25.1	Assembly overview - roof ventilator	231
25.2	Removing and installing roof ventilator	231
<b>26</b>	<b>Ladder support</b>	<b>235</b>
26.1	Assembly overview - ladder support	235
26.2	Removing and installing ladder support	236
<b>27</b>	<b>Design double tube bar</b>	<b>240</b>
27.1	Assembly overview - design double tube bar	240
27.2	Removing and installing design double tube bar	242
27.3	Installation instructions - design double tube bar	244
<b>28</b>	<b>Load compartment partition</b>	<b>252</b>
28.1	Assembly overview - load compartment partition	252
28.2	Removing and installing locking device	252
28.3	Removing and installing grille	253
28.4	Removing and installing frame	254
<b>29</b>	<b>Loading edge protection</b>	<b>256</b>
29.1	Assembly overview - loading edge protection	256
29.2	Removing and installing loading edge protection	257
<b>30</b>	<b>Loading edge protection</b>	<b>262</b>
30.1	Removing and installing loading edge protection	262
<b>31</b>	<b>Load compartment cover, aluminium</b>	<b>263</b>
31.1	Assembly overview - load compartment cover	263
31.2	Removing and installing load compartment cover	263
31.3	Removing and installing gas strut	265
31.4	Removing and installing hinge for load compartment cover	266
<b>32</b>	<b>Protective grille for rear window</b>	<b>268</b>
32.1	Assembly overview - protective grille for rear window	268
32.2	Removing and installing protective grille for rear window	268
32.3	Removing and installing retaining bracket	269
<b>33</b>	<b>Rail system for load bed</b>	<b>271</b>
33.1	Assembly overview - rail system	271
33.2	Removing and installing cross bars	273
33.3	Removing and installing retaining brackets for cross bars	273



33.4	Removing and installing guide rails	274
<b>34</b>	<b>Side bar</b>	<b>277</b>
34.1	Assembly overview - side bars	277
34.2	Removing and installing side bar	279
34.3	Removing and installing bracket for side bar	281
34.4	Removing and installing step panel	282
<b>35</b>	<b>Fuel tank skid plate</b>	<b>284</b>
35.1	Assembly overview - fuel tank skid plate	284
35.2	Removing and installing underbody guard for fuel tank	284
<b>36</b>	<b>Bumper trim</b>	<b>286</b>
36.1	Assembly overview - bumper trim	286
36.2	Removing and installing bumper trim	286
<b>37</b>	<b>Towing bracket (for Australia only)</b>	<b>289</b>
37.1	Assembly overview - towing bracket	289
37.2	Removing and installing towing bracket	289
<b>38</b>	<b>Roof load carrier</b>	<b>292</b>
38.1	Assembly overview - roof rails/cross bars	292
38.2	Assembly overview - ladder holder	293
38.3	Assembly overview - loading roller with holder	294
38.4	Removing and installing roof rails	295
38.5	Removing and installing cross bars	296
38.6	Removing and installing ladder holder	297
38.7	Removing and installing loading roller with holder	298
<b>39</b>	<b>Skid plate</b>	<b>300</b>
39.1	Assembly overview – skid plate	300
39.2	Removing and installing skid plate	300
<b>68</b>	<b>Interior equipment</b>	<b>303</b>
<b>1</b>	<b>Box body (Junge)</b>	<b>303</b>
1.1	Removing and installing fastening rail	303
1.2	Removing and installing securing strap recesses	304
1.3	Removing and installing pull strap	305
<b>2</b>	<b>Box body (Spier)</b>	<b>307</b>
2.1	Removing and installing fastening rail	307
2.2	Removing and installing securing strap recess	309
2.3	Pull strap	310
<b>3</b>	<b>Box body (Schmitz Cargobull)</b>	<b>311</b>
3.1	Removing and installing roof cross strut	311
3.2	Removing and installing fastening rail	313
3.3	Removing and installing pull strap	315
<b>4</b>	<b>Equipment</b>	<b>317</b>
4.1	Universal floor	317
4.2	Roof carrier in load compartment	321
4.3	Removing and installing grab handle, A-pillar	323
4.4	Partition panel (Holland DOKA)	324
<b>5</b>	<b>Box body (Plus)</b>	<b>331</b>
5.1	Assembly overview - box body (Plus)	331
5.2	Removing and installing seat bench padding	336
5.3	Removing and installing upper partition	337
5.4	Removing and installing lower partition	338
5.5	Removing and installing connection to side panel	339
5.6	Removing and installing side panel	340
5.7	Removing and installing sliding door step	343
5.8	Removing and installing front and rear bench trim	344



5.9	Removing and installing bench seat	346
5.10	Removing and installing floor items	347
5.11	Removing and installing headliner	348
5.12	Removing and installing roof items	349
<b>6</b>	<b>Tool cabinet</b>	<b>351</b>
6.1	Assembly overview - tool cabinet	351
6.2	Removing and installing tool cabinet	353
<b>7</b>	<b>Fastening rails</b>	<b>359</b>
7.1	Assembly overview - fastening rails	359
7.2	Removing and installing fastening rail	360
<b>8</b>	<b>Load bed covering, wood</b>	<b>365</b>
8.1	Assembly overview - load bed covering, wood	365
8.2	Removing and installing load bed covering, wood	365
<b>9</b>	<b>C-pillar partition</b>	<b>369</b>
9.1	Assembly overview - C-pillar partition	369
9.2	Removing and installing C-pillar partition	370
<b>10</b>	<b>Rear window protective grille</b>	<b>377</b>
10.1	Assembly overview - rear window protective grille	377
10.2	Removing and installing rear window protective grille	377
<b>11</b>	<b>Toolbox</b>	<b>379</b>
11.1	Assembly overview - tool box	379
11.2	Removing and installing toolbox	379
<b>12</b>	<b>Wheel housing trim</b>	<b>381</b>
12.1	Assembly overview - wheel housing trim	381
12.2	Removing and installing wheel housing trim	381
<b>13</b>	<b>Stowage cases on wing door</b>	<b>383</b>
13.1	Assembly overview - stowage cases	383
13.2	Removing and installing stowage cases	384
13.3	Removing and installing brackets for stowage cases	384
<b>14</b>	<b>Floor ventilation, load bed</b>	<b>386</b>
14.1	Assembly overview - floor ventilation	386
14.2	Removing and installing floor ventilation	386
<b>15</b>	<b>High load floor with drawers</b>	<b>388</b>
15.1	Assembly overview - high load floor with drawers	388
15.2	Removing and installing load floor, upper part	390
15.3	Removing and installing load floor, lower part	391
15.4	Removing and installing frame for drawers	393
<b>16</b>	<b>Storage compartment on wheel housing</b>	<b>395</b>
16.1	Assembly overview - storage compartment on wheel housing	395
16.2	Removing and installing storage compartment	395
<b>17</b>	<b>Protective grille on wing door</b>	<b>397</b>
17.1	Assembly overview - protective grille on wing door	397
17.2	Removing and installing protective grille	397
<b>69</b>	<b>Passenger protection</b>	<b>399</b>
<b>1</b>	<b>Seat belts</b>	<b>399</b>
1.1	Removing and installing front three-point seat belt, bench seat (Holland-DOKA)	399
1.2	Removing and installing belt buckle, bench seat (Holland-DOKA)	400
<b>70</b>	<b>Trim, insulation</b>	<b>403</b>
<b>1</b>	<b>Interior trims</b>	<b>403</b>
1.1	Removing and installing bench seat trim (Holland DOKA)	403
<b>72</b>	<b>Seat frames</b>	<b>404</b>



<b>1</b>	<b>Bench seats</b> .....	<b>404</b>
1.1	Removing and installing bench seat (Holland DOKA) .....	404
<b>74</b>	<b>Seat - padding, covers</b> .....	<b>406</b>
<b>91</b>	<b>Communication</b> .....	<b>407</b>
<b>1</b>	<b>Aerial systems</b> .....	<b>407</b>
1.1	Removing and installing roof aerial R295 .....	407
<b>2</b>	<b>Aerial systems</b> .....	<b>409</b>
2.1	Removing and installing roof aerial R295 .....	409
<b>94</b>	<b>Lights, bulbs, switches - exterior</b> .....	<b>411</b>
<b>1</b>	<b>Tipper body (Henschel)</b> .....	<b>411</b>
1.1	Lights .....	411
1.2	Electrical system, general .....	413
<b>2</b>	<b>Tipper body (Schoon)</b> .....	<b>419</b>
2.1	Electrics .....	419
<b>3</b>	<b>Box body (Junge)</b> .....	<b>425</b>
3.1	Removing and installing tail light MX3/MX4 .....	425
3.2	Removing and installing rear fog light L46/L47 .....	426
3.3	Removing and installing number plate light X4/X5 .....	427
3.4	Removing and installing additional brake light M25 .....	428
3.5	Removing and installing upper marker lights .....	429
3.6	Removing and installing side marker light M33/M34/M37/M38/M39/M40 with bracket .....	429
3.7	Removing and installing lower marker light .....	430
<b>4</b>	<b>Box body (Spier)</b> .....	<b>432</b>
4.1	Removing and installing tail light MX3/MX4 .....	432
4.2	Removing and installing number plate light X4/X5 .....	433
4.3	Removing and installing high-level brake light .....	434
4.4	Removing and installing upper marker lights .....	434
4.5	Removing and installing side marker light M33/M34/M37/M38/M39/M40 .....	435
<b>5</b>	<b>Box body (Schmitz Cargobull)</b> .....	<b>438</b>
5.1	Removing and installing tail light cluster .....	438
5.2	Removing and installing number plate light .....	439
5.3	Removing and installing high-level brake light .....	441
5.4	Removing and installing rear upper marker light .....	442
5.5	Removing and installing front upper marker light .....	443
5.6	Removing and installing side marker light .....	443
<b>6</b>	<b>Tail lift (Sørensen)</b> .....	<b>446</b>
6.1	Removing and installing hazard warning light M115/M116 .....	446
6.2	Removing and installing foot switch F558 .....	447
6.3	Removing and installing tail lift operating unit EX56 .....	447
6.4	Removing and installing tilt angle sensor .....	448
<b>7</b>	<b>Tail lift (BÄR - Cargolift)</b> .....	<b>451</b>
7.1	Removing and installing hazard warning light M115/M116 .....	451
7.2	Removing and installing foot switch F556/F557 .....	452
7.3	Removing and installing operating unit EX56 .....	453
7.4	Removing and installing foot switch unit F558 .....	454
<b>8</b>	<b>Tail lift (Palfinger)</b> .....	<b>458</b>
8.1	Removing and installing hazard warning light .....	458
8.2	Removing and installing foot controls .....	459
8.3	Removing and installing tilt switch .....	459
8.4	Removing and installing angle sensor .....	460
8.5	Removing and installing control box .....	461



<b>9</b>	<b>Roof spoiler elevated side light</b> .....	<b>464</b>
9.1	Removing and installing roof spoiler elevated side light .....	464
<b>10</b>	<b>Cross strut/tarpaulin lighting</b> .....	<b>466</b>
10.1	Removing and installing cross strut/tarpaulin lighting .....	466
<b>11</b>	<b>Cross strut/tarpaulin wiring harness</b> .....	<b>467</b>
11.1	Removing and installing cross strut/tarpaulin wiring harness .....	467
<b>12</b>	<b>LED rotating light</b> .....	<b>468</b>
12.1	Removing and installing LED rotating light .....	468
<b>96</b>	<b>- Lights, bulbs, switches - interior</b> .....	<b>470</b>
<b>1</b>	<b>Box body (Junge)</b> .....	<b>470</b>
1.1	Removing and installing load area illumination switch E481 .....	470
1.2	Removing and installing interior lighting .....	470
<b>2</b>	<b>Box body (Spier)</b> .....	<b>472</b>
2.1	Removing and installing load area illumination switch E481 .....	472
2.2	Removing and installing interior lighting .....	472
<b>3</b>	<b>Box body (Schmitz Cargobull)</b> .....	<b>474</b>
3.1	Removing and installing interior lighting .....	474
<b>4</b>	<b>Tail lift (Sörensen)</b> .....	<b>476</b>
4.1	Tail lift switch E629 .....	476
<b>5</b>	<b>Tail lift (BÄR - Cargolift)</b> .....	<b>477</b>
5.1	Tail lift switch E629 .....	477
<b>6</b>	<b>Tail lift (Palfinger)</b> .....	<b>478</b>
6.1	Tail lift switch .....	478
<b>7</b>	<b>Controls</b> .....	<b>479</b>
7.1	Overview of fitting locations - controls in dash panel, Taxi .....	479
7.2	Removing and installing interior light switch (taxi) E115 .....	479
7.3	Removing and installing taxi sign switch E138 .....	480
7.4	Removing and installing alarm system off switch E217 .....	480
7.5	Removing and installing hands-free system button E487 .....	480
<b>8</b>	<b>Anti-theft alarm</b> .....	<b>481</b>
8.1	Assembly overview - treble horn H2 .....	481
8.2	Removing and installing treble horn H2 .....	481
<b>9</b>	<b>LED spot lights</b> .....	<b>484</b>
9.1	Assembly overview - LED spot lights .....	484
9.2	Removing and installing LED spot lights .....	485
<b>10</b>	<b>Cigarette lighter, socket</b> .....	<b>488</b>
10.1	Assembly overview - DC/AC converter/socket .....	488
10.2	Removing and installing DC/AC converter with socket, 12 V - 230 V U13 .....	489
10.3	Overview of fitting locations - 230 V components .....	492
10.4	Assembly overview - exterior socket, 230 V, 110 V U8 .....	493
10.5	Assembly overview - interior socket, 230 V, 110 V U11 .....	494
10.6	Assembly overview - 220 V automatic personnel protection circuit breaker S59 .....	495
10.7	Removing and installing interior socket, 230 V, 110 V U11 .....	496
10.8	Removing and installing 220 V automatic personnel protection circuit breaker S59 .....	501
10.9	Removing and installing exterior socket, 230 V, 110 V U8 .....	502
10.10	Removing and installing battery charger, 230 V or 110 V/12 V A10 .....	504
10.11	Removing and installing DC/AC converter with socket, 12 V-230 V U13 .....	509
<b>97</b>	<b>- Wiring</b> .....	<b>512</b>
<b>1</b>	<b>Control units</b> .....	<b>512</b>
1.1	Removing and installing special vehicle control unit J608 .....	512
<b>2</b>	<b>Control units</b> .....	<b>515</b>



2.1 Removing and installing special vehicle control unit J608 ..... 515