



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when handling refrigerants	2
1.6 Safety precautions for working on vehicles with auxiliary/supplementary heater	3
<b>2 Identification</b>	<b>5</b>
2.1 Identification of heater and air conditioning unit	5
<b>3 General information</b>	<b>6</b>
3.1 Type plates	6
3.2 Notes concerning odours in air conditioned vehicles	6
<b>4 Repair notes</b>	<b>8</b>
4.1 Rules for cleanliness	8
4.2 General repair instructions	8
4.3 Contact corrosion	9
4.4 Nuts and bolts	9
4.5 Routing and attachment of lines	9
4.6 Checking cooling output	10
4.7 Working on refrigerant circuit	11
4.8 Refrigerant circuit seals	12
<b>5 Technical data</b>	<b>13</b>
5.1 Refrigerant capacity	13
5.2 Refrigerant oil capacities	13
5.3 Oil distribution	13
<b>80 - Heating</b>	<b>15</b>
<b>1 Heater</b>	<b>15</b>
1.1 Assembly overview – heater unit	15
1.2 Removing and installing flow rate limiter	19
<b>85 - Ventilation</b>	<b>21</b>
<b>1 Roof blower</b>	<b>21</b>
1.1 Assembly overview - roof blower	21
1.2 Removing and installing roof blower	21
1.3 Removing and installing roof ventilator V3	22
1.4 Removing and installing rear fresh air blower control unit J391	24
1.5 Dismantling and assembling roof blower	25
<b>2 Roof blower air duct</b>	<b>27</b>
2.1 Overview of fitting locations - air ducts and air distribution	27
2.2 Removing and installing ventilation grille	27
2.3 Removing and installing air duct	28
2.4 Removing and installing vents	30
<b>87 - Air conditioning system</b>	<b>31</b>
<b>1 Overview of fitting locations - air conditioning system</b>	<b>31</b>
1.1 Overview of fitting locations - components not located in passenger compartment	31
1.2 Overview of fitting locations - components located in front section of passenger compartment	32
<b>2 Refrigerant circuit</b>	<b>37</b>
2.1 System overview - refrigerant circuit	37



---

2.2	Assembly overview - refrigerant lines .....	38
2.3	Removing and installing refrigerant circuit pressure sender G805 .....	40
2.4	Removing and installing refrigerant line with internal heat exchanger .....	42
2.5	Removing and installing expansion valve .....	45
2.6	Removing and installing condenser .....	48
2.7	Separating and connecting refrigerant lines on condenser .....	50
2.8	Removing and installing desiccant bag or cartridge .....	52
2.9	Removing and installing evacuating and charging valves on low and high-pressure side ..	53
2.10	Commissioning air conditioning system after filling refrigerant circuit .....	55
2.11	Removing and installing refrigerant line from air conditioner compressor to evaporator ..	55
2.12	Removing and installing refrigerant line from air conditioner compressor to condenser ..	59
2.13	Removing and installing refrigerant line from evaporator to air conditioner compressor ..	62
2.14	When is it necessary to purge the refrigerant circuit with refrigerant .....	66
<b>3</b>	<b>Air conditioner compressor .....</b>	<b>68</b>
3.1	Assembly overview - air conditioner compressor .....	68
3.2	Removing air conditioning compressor from and installing on bracket .....	72
3.3	Removing refrigerant lines from and installing to air conditioner compressor .....	74
3.4	Removing and installing air conditioner compressor .....	76
3.5	Checking high-pressure safety valve on air conditioner compressor .....	79
3.6	Removing and installing air conditioner compressor regulating valve N280 .....	80
<b>4</b>	<b>Control motors .....</b>	<b>84</b>
4.1	Overview of fitting locations – front control motors .....	84
4.2	Assembly overview - front control motors .....	89
4.3	Assembly overview - flap control .....	92
4.4	Removing and installing temperature flap VX27 .....	93
4.5	Removing and installing defroster flap VX47 .....	95
4.6	Removing and installing air recirculation flap VX52 .....	97
4.7	Removing and installing front left temperature flap VX34 .....	99
4.8	Removing and installing front right temperature flap VX35 .....	100
4.9	Removing and installing fresh air and air recirculation flap VX96 .....	102
4.10	Removing and installing air distribution flap VX33 .....	104
4.11	Removing and installing air distribution flap adjustment unit .....	105
<b>5</b>	<b>Front heater and air conditioning unit .....</b>	<b>108</b>
5.1	Assembly overview – heater and air conditioning unit .....	108
5.2	Assembly overview – evaporator housing .....	113
5.3	Removing and installing evaporator .....	115
5.4	Checking auxiliary air heater element Z35 .....	115
5.5	Removing and installing auxiliary air heater element Z35 .....	116
5.6	Removing and installing heater and air conditioning unit .....	118
5.7	Removing and installing holder for heater and air conditioning unit .....	124
5.8	Dismantling and assembling heater and air conditioning unit .....	127
5.9	Removing and installing air distribution housing .....	128
5.10	Removing and installing dust and pollen filter .....	130
5.11	Removing and installing fresh air blower V2 .....	132
5.12	Removing and installing fresh air blower control unit J126 .....	133
5.13	Removing and installing heat exchanger .....	134
5.14	Removing and installing coolant pipes on heat exchanger .....	136
5.15	Removing and installing evaporator temperature sensor G308 .....	140
5.16	Removing and installing condensation drain .....	141
5.17	Checking condensation drain .....	143
<b>6</b>	<b>Air duct .....</b>	<b>144</b>
6.1	Overview of fitting locations - air ducts and air distribution in passenger compartment .....	144
6.2	Removing and installing driver side footwell vents .....	148
6.3	Removing and installing front passenger side footwell vents .....	148
6.4	Removing and installing rear footwell vent .....	150

---



6.5	Removing and installing air ducts .....	152
6.6	Removing and installing forced ventilation for passenger compartment .....	155
6.7	Checking forced ventilation for passenger compartment .....	158
6.8	Removing and installing fresh air intake .....	159
6.9	Removing and installing cover for fresh air intake .....	161
6.10	Removing and installing air intake duct .....	162
6.11	Removing and installing air duct for defroster vent .....	162
6.12	Removing and installing air duct for centre dash panel vent .....	163
<b>7</b>	<b>Operating and display unit .....</b>	<b>164</b>
7.1	Overview of operating and display unit .....	164
7.2	Removing and installing operating and display unit .....	164
<b>8</b>	<b>Other controlling and regulating components .....</b>	<b>165</b>
8.1	Removing and installing sunlight penetration photosensor G107 .....	165
8.2	Removing and installing ambient temperature sensor G17 .....	166
8.3	Removing and installing humidity sender for air conditioning system G260 .....	166
8.4	Removing and installing left vent temperature sender G150 .....	166
8.5	Removing and installing right vent temperature sender G151 .....	167
8.6	Removing and installing footwell vent temperature sender G192 .....	167
8.7	Removing and installing vehicle interior temperature sensor G1090 .....	169
8.8	Removing and installing heater and air conditioning system control unit J979 .....	170