



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair instructions	3
3.1 Rules for cleanliness	3
3.2 General repair instructions	3
3.3 Contact corrosion	3
3.4 Gaskets and seals	4
3.5 Nuts and bolts	4
3.6 Routing and attachment of lines	5
4 Technical data	6
4.1 Allocation gearbox - engine	6
4.2 Capacities	6
5 Overview - power transmission	7
6 Electrical components	9
6.1 Overview of fitting locations – electrical components, clutch mechanism	9
6.2 Overview of fitting locations - electrical components, gearbox	9
30 - Clutch	10
1 Clutch mechanism	10
1.1 Assembly overview - pedal cluster	10
1.2 Assembly overview - clutch hydraulics	11
1.3 Assembly overview - clutch release mechanism	12
1.4 Removing and installing clutch pedal	13
1.5 Removing and installing over-centre spring	14
1.6 Removing and installing mounting bracket	16
1.7 Removing and installing clutch master cylinder	19
1.8 Removing and installing clutch slave cylinder together with release bearing	20
1.9 Removing and installing pipe/hose line for clutch mechanism	21
1.10 Removing and installing bleeder	23
1.11 Bleeding clutch mechanism	24
1.12 Removing and installing clutch position sender G476	26
1.13 Checking clutch master cylinder and clutch slave cylinder	27
1.14 Removing and installing bearing bush	28
2 Clutch	29
2.1 Assembly overview - clutch	29
2.2 Determining make of clutch	29
2.3 Removing and installing clutch	31
34 - Controls, housing	36
1 Selector mechanism	36
1.1 Assembly overview – gear knob and cover	36
1.2 Assembly overview - selector mechanism	37
1.3 Removing and installing gear knob	39
1.4 Removing and installing selector mechanism	41
1.5 Adjusting selector mechanism	43
1.6 Checking selector mechanism	46
1.7 Removing and installing support bracket	46



1.8	Removing and installing cable locking mechanism	48
1.9	Removing and installing gear lever	49
2	Removing and installing gearbox	52
2.1	Specified torques for gearbox	52
2.2	Removing gearbox	53
2.3	Installing gearbox	59
3	Assembly overview – assembly mountings	61
4	Transporting gearbox	62
5	Gear oil	64
35 - Gears, shafts		65
1	Input shaft	65
2	Output shaft	66
39 - Final drive - differential		67
1	Oil seals	67