



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when using test instruments and measuring equipment during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair notes	7
3.1 Rules for cleanliness	7
3.2 General information	7
3.3 Foreign objects in engine	7
3.4 Contact corrosion	8
3.5 Routing and attachment of lines	8
3.6 Checking vacuum system	8
10 - Removing and installing engine	10
1 Removing and installing motor	10
1.1 Removing motor	10
1.2 Separating engine and gearbox	18
1.3 Securing engine on engine and gearbox support	22
1.4 Installing engine	23
2 Assembly mountings	27
2.1 Assembly overview - assembly mountings	27
2.2 Removing and installing engine mounting	29
2.3 Removing and installing gearbox mountings	30
2.4 Removing and installing pendulum support	31
2.5 Supporting engine in installation position	32
2.6 Adjusting assembly mountings	37
2.7 Checking adjustment of assembly mountings	39
3 Engine cover panel	41
3.1 Removing and installing engine cover	41
13 - Crankshaft group	42
1 Cylinder block (pulley end)	42
1.1 Assembly overview – cylinder block, pulley end	42
1.2 Assembly overview – sealing flange, pulley end	44
1.3 Removing and installing poly-V belt	44
1.4 Removing and installing tensioner for poly V-belt	45
1.5 Removing and installing vibration damper	46
1.6 Removing and installing engine support	47
1.7 Renewing crankshaft oil seal - belt pulley end	49
1.8 Removing and installing sealing flange, pulley end	52
2 Cylinder block, gearbox end	53
2.1 Assembly overview - cylinder block, gearbox end	53
2.2 Removing and installing flywheel	55
2.3 Removing and installing sealing flange on gearbox side	57
2.4 Removing and installing adapter plate	68
2.5 Removing and installing intermediate plate	69



3	Crankshaft	70
3.1	Renewing needle bearing in crankshaft	70
3.2	Crankshaft dimensions	72
3.3	Measuring axial clearance of crankshaft	72
4	Pistons and conrods	75
4.1	Assembly overview - pistons and conrods	75
4.2	Removing and installing pistons	78
4.3	Checking pistons and cylinder bores	80
4.4	Separating new conrod	83
4.5	Checking radial clearance of conrods	83
4.6	Removing and installing oil spray jets	84
4.7	Setting piston to TDC position	85
15	- Cylinder head, valve gear	88
1	Cylinder head	88
1.1	Assembly overview - cylinder head	88
1.2	Assembly overview - camshaft housing	89
1.3	Removing and installing cylinder head	92
1.4	Removing and installing camshaft housing	96
1.5	Checking compression	99
2	Toothed belt drive	102
2.1	Assembly overview - toothed belt cover	102
2.2	Assembly overview - toothed belt	102
2.3	Removing and installing toothed belt guard	104
2.4	Removing and installing toothed belt	106
2.5	Checking valve timing	109
2.6	Preassembling and installing valve timing tool	112
2.7	Adjusting valve timing	121
2.8	Removing toothed belt from camshaft	131
3	Valve gear	134
3.1	Assembly overview - valve gear	134
3.2	Removing and installing camshaft oil seal	136
3.3	Removing and installing camshaft adjuster	143
3.4	Removing and installing cam actuator N583/N595	151
3.5	Removing and installing exhaust camshaft control valve 1 N318	153
3.6	Removing and installing valve stem seals	154
3.7	Removing and installing holder for oil seal	160
3.8	Checking control valve	163
3.9	Removing and installing oil seal on holder	163
3.10	Removing and installing inlet camshaft control valve 1 N727	165
4	Inlet and exhaust valves	167
4.1	Checking valve guides	167
4.2	Checking valves	168
4.3	Valve dimensions	168
17	- Lubrication	169
1	Sump, oil pump	169
1.1	Assembly overview - sump/oil pump	169
1.2	Engine oil:	172
1.3	Removing and installing sump	172
1.4	Removing and installing oil pump	174
1.5	Removing and installing oil level and oil temperature sender G266	176
2	Engine oil cooler	178
2.1	Assembly overview - engine oil cooler	178
2.2	Removing and installing engine oil cooler	178



3	Crankcase ventilation	180
3.1	Assembly overview - crankcase breather system	180
3.2	Removing and installing oil separator	181
4	Oil filter, oil pressure switch	185
4.1	Assembly overview - oil pressure switches/oil pressure control	185
4.2	Removing and installing oil pressure sender G10	185
4.3	Checking oil pressure and oil pressure switch	187
4.4	Removing and installing oil pressure regulating valve N428	187
5	Oil circuit	189
5.1	Assembly overview - oil circuit	189
5.2	Removing and installing oil supply line	191
5.3	Removing and installing oil return line for turbocharger	192
19	- Cooling	194
1	Cooling system/coolant	194
1.1	Connection diagram - coolant hoses	194
1.2	Checking cooling system for leaks	196
1.3	Draining and adding coolant	198
2	Coolant pump, regulation of cooling system	205
2.1	Assembly overview - coolant pump, thermostat	205
2.2	Assembly overview - electric coolant pump	206
2.3	Assembly overview - coolant temperature sender	207
2.4	Checking coolant pump	208
2.5	Removing and installing coolant pump	211
2.6	Removing and installing toothed belt pulley for coolant pump	214
2.7	Removing and installing coolant temperature sender G62	217
2.8	Removing and installing engine outlet coolant temperature sender G82	218
2.9	Removing and installing radiator outlet coolant temperature sender G83	219
2.10	Removing and installing engine temperature regulation module GX33	221
2.11	Removing and installing charge air cooling pump V188	223
3	Coolant pipes	226
3.1	Assembly overview - coolant pipes	226
3.2	Removing and installing coolant pipes	227
4	Radiator, radiator fan	238
4.1	Assembly overview - radiator/radiator fan	238
4.2	Assembly overview - radiator cowl and radiator fan	240
4.3	Removing and installing radiator	240
4.4	Removing and installing cooler for charge air cooling circuit	242
4.5	Removing and installing radiator cowl	244
4.6	Removing and installing radiator fan V7	245
21	- Turbocharging/supercharging	247
1	Turbocharger	247
1.1	Assembly overview - turbocharger	247
1.2	Removing and installing turbocharger	249
1.3	Removing and installing connection for turbocharger	253
1.4	Removing and installing charge pressure control module GX34	254
2	Charge air system	256
2.1	Assembly overview - charge air system	256
2.2	Checking charge air cooler for leaks	258
2.3	Removing and installing charge air cooler	263
2.4	Removing and installing charge pressure sender GX26	265
2.5	Checking charge air system for leaks	266
2.6	Removing and installing air pipe	269



24 - Mixture preparation - injection	270
1 Injectors	270
1.1 Assembly overview - fuel rail with injectors	270
1.2 Removing and installing fuel rail	271
1.3 Removing and installing injectors	273
1.4 Cleaning injectors	277
2 Air filter	280
2.1 Assembly overview – air filter housing	280
2.2 Removing and installing air filter housing	282
2.3 Removing and installing air guide on lock carrier	282
3 Intake manifold	284
3.1 Assembly overview - intake manifold	284
3.2 Removing and installing intake manifold	286
3.3 Cleaning throttle valve module GX3	289
3.4 Removing and installing throttle valve module GX3	289
3.5 Removing and installing intake connecting pipe	291
4 Senders and sensors	293
4.1 Removing and installing fuel pressure sender G247	293
4.2 Checking fuel pressure sender G247	294
4.3 Removing and installing intake manifold sender GX9	297
4.4 Removing and installing exhaust gas pressure sensor 1 G450	298
4.5 Removing and installing air mass measurement module GX35	299
5 Engine control unit	301
5.1 Removing and installing engine control unit J623	301
6 High-pressure pump	302
6.1 Assembly overview - high-pressure pump	302
6.2 Removing and installing high-pressure pump	303
6.3 Removing and installing high-pressure pipe	304
7 Lambda probe	306
7.1 Assembly overview - Lambda probe	306
7.2 Removing and installing Lambda probe 1 before catalytic converter GX10	306
7.3 Removing and installing Lambda probe 1 after catalytic converter GX7	308
26 - Exhaust system	311
1 Exhaust pipes and silencers	311
1.1 Assembly overview - silencers	311
1.2 Separating exhaust pipes from silencers	313
1.3 Removing and installing front silencer	314
1.4 Removing and installing centre silencer	315
1.5 Removing and installing rear silencer	316
1.6 Aligning exhaust system free of stress	317
1.7 Checking exhaust system for leaks	318
1.8 Installation position of clamp	318
2 Emission control	319
2.1 Assembly overview - emission control	319
2.2 Removing and installing catalytic converter	321
2.3 Removing and installing particulate filter	324
28 - Ignition system	325
1 Ignition system	325
1.1 Assembly overview - ignition system	325
1.2 Removing and installing ignition coils	327
1.3 Removing and installing knock sensor 1 G61	329
1.4 Removing and installing engine speed sender G28	330



1.5	Removing and installing inlet camshaft position sender G1002	331
1.6	Removing and installing exhaust camshaft position sender G1003	332