



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair notes	7
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of lines	8
3.5 Unterdrucksystem prüfen	8
20 - Fuel supply system	9
1 Fuel	9
1.1 Assembly overview - fuel tank	9
1.2 Emptying fuel tank	11
1.3 Removing and installing fuel tank	14
2 Fuel delivery unit, fuel gauge sender	18
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	18
2.2 Removing and installing fuel delivery unit, fuel gauge sender	18
2.3 Removing and installing fuel gauge sender G	20
3 Plug-in connectors	22
3.1 Separating plug-in connectors	22
4 Activated charcoal filter system	25
4.1 Assembly overview – activated charcoal filter system	25
4.2 Removing and installing activated charcoal filter	25
4.3 Checking fuel tank breather	26
5 Accelerator pedal	33
5.1 Assembly overview - accelerator module	33
5.2 Removing and installing accelerator pedal module GX2	33
6 Kraftstoffpumpe	35
6.1 Checking fuel system pressurisation pump G6	35
6.2 Removing and installing fuel pump control unit J538	40