



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on the SCR system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	6
3.5 Checking vacuum system	6
20 - Fuel supply system	7
1 Procedure in event of misfuelling	7
2 Fuel	14
2.1 Assembly overview - fuel tank	14
2.2 Emptying fuel tank	16
2.3 Removing and installing fuel tank	20
2.4 Removing and installing misfuelling prevention device	23
2.5 Deactivating misfuelling prevention device	24
3 Fuel delivery unit, fuel gauge sender	25
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	25
3.2 Removing and installing fuel delivery unit, fuel gauge sender	25
3.3 Removing and installing fuel gauge sender G	27
4 Plug-in connectors	29
4.1 Separating plug-in connectors	29
5 Fuel filter	32
5.1 Assembly overview - fuel filter	32
5.2 Removing and installing fuel filter	33
5.3 Drain water from fuel filter	35
6 Accelerator pedal	37
6.1 Assembly overview - accelerator module	37
6.2 Removing and installing accelerator pedal module GX2	37
7 Fuel pump	39
7.1 Removing and installing fuel pump control unit J538	39
8 Senders and sensors	40
8.1 Removing and installing water separator sender G63	40