

001 - Fuse assignment	1-32
1. Fuse assignment	1
2. Connection and distribution box 1	2
3. Battery, Starter, Alternator, Battery monitor control unit, Connection and distribution box 2	3
4. Second battery, Special vehicle control unit, Battery monitor control unit 2, Relay and fuse carrier A for special vehicles, Relay and fuse carrier J for special vehicles	4
5. Fuel pressure regulating valve, Coolant valve for cylinder head, Piston cooling jet control valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4, Relay and fuse carrier 1	5
6. Relay and fuse carrier 1, Relay and fuse carrier 2, Heated windscreen	6
7. Relay and fuse carrier 3, Windscreen wiper motor	7
8. Power steering control unit, Fuse holder B, Relay and fuse carrier 4	8
9. Left horn, Front left headlight, Front right headlight, Brake servo, Fuse holder B, Gearbox oil cooling pump	9
10. ABS control unit, Auxiliary heater control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	10
11. Fuse holder B, Auxiliary air heater element	11
12. Clutch position sender, Fuse holder B	12
13. Oil level and oil temperature sender, Fuse holder B, Auxiliary pump for heating	13
14. Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 2, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Exhaust camshaft control valve 1, Valve for oil pressure control, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Fuse holder B, Charge air cooling pump	14
15. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Particulate sensor, NOx sender 3, Control unit for NOx sender, Control unit for NOx sender 2, Fuse holder B	15
16. Fuel pump control unit, Control unit 2 for break-in protection, Control unit 3 for break-in protection, Fuse holder B	16
17. Fuse and relay carrier	17
18. Front left lumbar support adjustment switch, Front right lumbar support adjustment switch, Fuse carrier 1, Fuse carrier 2	18
19. Delivery unit for reducing agent metering system, Rear fresh air blower control unit, Control unit for reducing agent heater, Fuse holder C, Reducing agent tank, Parking lock actuator	19
20. Heater and air conditioning system control unit, Fuse holder C	20
21. Voltage converter, Driver door control unit, Fuse holder C	21
22. Airbag control unit, Interface for entry and start system, Control unit 4 for break-in protection, Control unit 5 for break-in protection, Control unit for wireless connection of seat occupied sensors, Steering column lock control element, Fuse holder C	22
23. Interior light relay, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Dash panel insert, Navigation system interface, Rear overhead view camera, Storage compartment with interface for mobile telephone, Transmission and reception stabilisation control unit, Fuse holder C, USB connection 1	23
24. Contact strip in left sliding door, Contact strip in left B-pillar, Front passenger door control unit, All-wheel drive control unit, Power latching control unit for rear left door, Left sliding door relay, Fuse holder C	24
25. Contact strip in right sliding door, Contact strip in right B-pillar, Trailer detector control unit, Rear lid control unit, Power latching control unit for rear right door, Control unit 1 for information electronics, Right sliding door relay, Fuse holder C	25
26. Selector mechanism, Fresh air blower control unit, Data bus diagnostic interface, Fuse holder C, Selector lever position display	26
27. Operating unit for lighting, Electromechanical parking brake button, Operating unit 1 for driver and convenience functions, Anti-theft alarm sensor, Air humidity, rain and light sensor, Vehicle interior temperature sensor, Tyre Pressure Monitoring System control unit, Remote control receiver for auxiliary coolant heater, Fuse holder C, Diagnostic connection, Front interior light	27
28. Steering column electronics control unit, Display unit for front information display and operating unit control unit, Fuse holder C, Diagnostic connection	28
29. Adaptive cruise control unit, Parking aid control unit, Front camera for driver assist systems, Fuse holder C, 12 V socket, 12 V socket 3, 12 V socket 4, USB charging socket 1	29
30. Reversing light switch, Pressure sender for refrigerant circuit, Alarm horn, Fuse holder C, Rear window wiper motor, Automatic anti-dazzle interior mirror, Heated rear window	30
31. Onboard supply control unit, Engine/motor control unit	31
32. Engine/motor control unit	32
002 - Earthing concept	33-50
1. Earthing concept	33
2. ABS control unit, Battery monitor control unit, Power steering control unit, Brake servo	34
3. Mechatronic unit for dual clutch gearbox, Left fog light bulb, Front left headlight, Left turn signal repeater bulb. Heater coolant shut-off valve. Relay and fuse carrier 3. Windscreen wiper	35

motor, Auxiliary hydraulic pump 1 for gearbox oil	
4. Oil level and oil temperature sender, Adaptive cruise control unit, Control unit 2 for break-in protection, Control unit 3 for break-in protection, Air conditioner compressor, Auxiliary pump for heating	36
5. Bonnet contact switch, Bonnet contact switch 2, Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit, Fuse holder B, Relay and fuse carrier 1	37
6. Rear left parking aid sender, Rear centre left parking aid sender, Rear right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit, Engine/motor control unit, Radiator fan	38
7. Pressure sender for refrigerant circuit, Alarm horn, Auxiliary heater control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	39
8. Starter button, Vehicle interior temperature sensor, Control unit for electronic steering column lock, Interface for entry and start system, Heater and air conditioning system control unit, 12 V socket, 12 V socket 4, Parking lock actuator, Auxiliary air heater element	40
9. Selector mechanism, Hazard warning light switch, Operating unit for lighting, Electromechanical parking brake button, Operating unit 1 for driver and convenience functions, Anti-theft alarm sensor, Air humidity, rain and light sensor, Front camera for driver assist systems, USB charging socket 1, Rear interior light 2, Selector lever position display, Automatic anti-dazzle interior mirror	41
10. Turn signal switch, Driver exterior door handle, Driver door control unit, Onboard supply control unit, Steering column electronics control unit, Diagnostic connection 2, Driver door lock unit, Front interior light	42
11. Alarm system off switch, Taxi alarm active button, Passive Taxi alarm button, Taximeter, Two-way radio loudspeaker, Fuse holder C, Diagnostic connection	43
12. Front passenger exterior door handle, Switch module 2 in dash panel, next to steering wheel, Mirror taximeter, Fresh air blower control unit, Front passenger door control unit, Remote control receiver for auxiliary heater, Front passenger door lock unit, Luggage compartment light, Glove compartment light, Luggage compartment light 2	44
13. Rear left exterior door handle switch, Rear left interior door handle switch, Left sliding door control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Left sliding door relay, Storage compartment with interface for mobile telephone, Transmission and reception stabilisation control unit, USB connection 1, Rear interior light, Rear interior light 3, Rear interior light 4	45
14. Voltage converter, Operating unit with manual release mechanism for left sliding door, Front left lumbar support adjustment switch, Rear left central locking lock unit, Contact strip in left sliding door, Contact strip in left B-pillar, Fuel delivery unit, All-wheel drive control unit, Fuel pump control unit, Metering pump, Front left seat heating, Heated backrest for front left seat	46
15. Tank flap release, Front right lumbar support adjustment switch, Rear right central locking lock unit, Rear right exterior door handle switch, Rear right interior door handle switch, Contact strip in right sliding door, Contact strip in right B-pillar, Delivery unit for reducing agent metering system, Power latching control unit for rear right door, Right sliding door relay, 12 V socket 3, Front right seat heating, Heater for reducing agent line (heater circuit 2), Heated backrest for front right seat	47
16. Tyre Pressure Monitoring System control unit, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Control unit 4 for break-in protection, Control unit 5 for break-in protection, Left tail light cluster, Relay and fuse carrier J for special vehicles, Luggage compartment light	48
17. Rear lid lock unit, Protective diode, Trailer detector control unit, Multifunction unit control unit, Rear overhead view camera, Trailer socket, Rear window wiper motor, Power latching for rear lid, Rear lid release motor, Left number plate light, Right number plate light	49
18. Rear lid handle release button, Interior light relay, Rear lid control unit, Right tail light cluster, High-level brake light bulb, Heated rear window	50
003 - Dash panel insert	51-53
1. Dash panel insert	51
2. Immobiliser reader coil, Ambient temperature sensor, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Fuse holder C	52
3. Fuel delivery unit, Fuel gauge sender for auxiliary fuel tank, Data bus diagnostic interface, Dash panel insert	53
005 - Airbag systems	54-65
1. Airbag systems	54
2. Key-operated switch to deactivate airbag on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Onboard supply control unit, Fuse holder C, Diagnostic connection	55
3. Front left crash sensor. Airbaa control unit	56

4. Front right crash sensor, Airbag control unit, Control unit for wireless connection of seat occupied sensors	57
5. Airbag control unit, Steering column electronics control unit, Emergency call module control unit and communication unit, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1	58
6. Airbag control unit, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter	59
7. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Centre crash sensor for X/Y axis, Airbag control unit, Front passenger side curtain airbag igniter	60
8. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	61
9. Airbag control unit	62
10. Airbag control unit, Igniter for central airbag for occupant collision protection, driver side	63
11. Seat occupied sensor on front passenger side, Airbag control unit, Data bus diagnostic interface, Side airbag igniter on driver side	64
12. Front passenger side belt switch, Side airbag igniter on front passenger side	65
007 - Brake system	66-73
1. Brake system	66
2. ABS control unit, Fuse holder B, Fuse holder C	67
3. ABS control unit, Onboard supply control unit, Brake servo	68
4. ABS control unit, Brake servo	69
5. Clutch position sender, ABS control unit, Engine/motor control unit, Brake servo	70
6. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Left parking brake motor, Right parking brake motor	71
7. ABS control unit	72
8. Electromechanical parking brake button	73
011 - 2.0l diesel engine , DTRC,DTRE,DTRF	74-102
1. 2.0l diesel engine , DTRC,DTRE,DTRF	74
2. Battery, Starter, Alternator, Battery monitor control unit, Connection and distribution box 1, Connection and distribution box 2	75
3. Fuse holder B, Fuse and relay carrier	76
4. Fuse holder B	77
5. Fuse holder C, Relay and fuse carrier 1	78
6. Engine/motor control unit	79
7. Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	80
8. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	81
9. Lambda probe 1 before catalytic converter, Air mass measurement module, Exhaust gas temperature sender 4, Engine/motor control unit	82
10. Control unit for NOx sender, Control unit 2 for NOx sender, Particulate sensor, Engine/motor control unit	83
11. Accelerator pedal module, NOx sender 3, Engine/motor control unit	84
12. Engine/motor control unit, Exhaust flap control unit	85
13. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	86
14. Steering column electronics control unit, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2), Heater 2 for reducing agent tank (heater circuit 3)	87
15. Engine/motor control unit, Control unit for reducing agent heater, Reducing agent tank	88
16. Delivery unit for reducing agent metering system, Engine/motor control unit	89
17. Engine/motor control unit	90
18. Engine/motor control unit, Brake servo, Heater element for crankcase breather, Radiator fan	91
19. Data bus diagnostic interface, Engine/motor control unit, Valve for oil pressure control, Auxiliary pump for heating	92
20. Data bus diagnostic interface, Engine/motor control unit, Coolant regulating valve	93
21. Exhaust gas recirculation valve 2, Charge pressure control module, Engine/motor control unit, Piston cooling jet control valve	94
22. Throttle valve module, Exhaust gas recirculation valve 1, Engine speed sender, Engine/motor control unit	95
23. Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	96
24. Fuel pressure sender, Exhaust gas temperature sender 3, Inlet camshaft position sender, Coolant temperature sender for charge air cooler, Engine/motor control unit	97
25. Oil pressure sender. Charge pressure sender. Fuel pressure sender for low pressure. Pressure	98

differential sender for particulate filter, Engine/motor control unit	
26. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	99
27. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	100
28. Fuel delivery unit, Fuel gauge sender for auxiliary fuel tank, Fuel pump control unit, Dash panel insert	101
29. Tank flap release, Onboard supply control unit	102
012 - 1.5l petrol engine , DPBC	103-125
1. 1.5l petrol engine , DPBC	103
2. Battery, Starter, Alternator, Battery monitor control unit, Connection and distribution box 2, Fuse holder C, Connection and distribution box 1	104
3. Fuse holder B	105
4. Fuse holder B	106
5. Gearbox neutral position sender, Engine/motor control unit	107
6. Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	108
7. Accelerator pedal module, Engine/motor control unit	109
8. Clutch position sender, ABS control unit, Engine/motor control unit	110
9. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Brake servo	111
10. Engine/motor control unit	112
11. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	113
12. Engine/motor control unit, Gearbox oil cooling pump	114
13. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	115
14. Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	116
15. Throttle valve module, Knock sensor 1, Engine/motor control unit, Fuel metering valve	117
16. Engine temperature regulation module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	118
17. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	119
18. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	120
19. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit, Charge air cooling pump	121
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	122
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	123
22. Fuel delivery unit, Fuel pump control unit, Dash panel insert	124
23. Tank flap release, Onboard supply control unit	125
013 - Dual clutch gearbox 0GC , (0IJ)	126-131
1. Dual clutch gearbox 0GC , (0IJ)	126
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	127
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	128
4. Mechatronic unit for dual clutch gearbox, Interface for entry and start system	129
5. Selector mechanism, Onboard supply control unit, Parking lock actuator, Selector lever position display	130
6. Data bus diagnostic interface	131
014 - All-wheel drive , (1X1)	132-133
1. All-wheel drive , (1X1)	132
2. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C, All-wheel drive coupling pump	133
015 - Radiator fan	134-135
1. Radiator fan	134
2. Engine/motor control unit, Fuse holder B, Connection and distribution box 1, Radiator fan	135
016 - Electromechanical power steering	136-139
1. Electromechanical power steering	136
2. Power steering control unit, Fuse holder B	137
3. Onboard supply control unit	138
4. Data bus diagnostic interface	139

017 - Parking aid (PDC) , (7X1),(7X2),(7X5)	140-145
1. Parking aid (PDC) , (7X1),(7X2),(7X5)	140
2. Parking aid control unit, Data bus diagnostic interface, Fuse holder C	141
3. Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	142
4. Front right parking aid sender, Front centre right parking aid sender, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	143
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear left park assist steering sender, Parking aid control unit	144
6. Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit	145
018 - USB charging sockets , (U9A),(U9B),(U9C)	146-147
1. USB charging sockets , (U9A),(U9B),(U9C)	146
2. Onboard supply control unit, Control unit 1 for information electronics, Fuse holder C, USB charging socket 1, USB connection 1	147
019 - Tyre Pressure Monitoring System , (7K1),(7K3)	148-149
1. Tyre Pressure Monitoring System , (7K1),(7K3)	148
2. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Fuse holder C	149
020 - Adaptive cruise control , (8T3),(8T6),(8T7),(8T8),(QK1)	150-152
1. Adaptive cruise control , (8T3),(8T6),(8T7),(8T8),(QK1)	150
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	151
3. Adaptive cruise control unit	152
021 - Preparation for trailer coupling , (1D7)	153-155
1. Preparation for trailer coupling , (1D7)	153
2. Trailer detector control unit, Fuse holder C	154
3. Trailer detector control unit, Onboard supply control unit, Dash panel insert, Brake servo	155
022 - Trailer coupling , (1D1),(1D2)	156-159
1. Trailer coupling , (1D1),(1D2)	156
2. Trailer detector control unit, Fuse holder C	157
3. Trailer detector control unit, Onboard supply control unit, Dash panel insert, Brake servo	158
4. Trailer detector control unit, Trailer socket	159
023 - DC/AC converter with socket , (9Z3),(9Z6)	160-161
1. DC/AC converter with socket , (9Z3),(9Z6)	160
2. Voltage converter, Data bus diagnostic interface, Fuse holder C, Interior socket, 230 V, 110 V	161
024 - Anti-theft alarm system , (7AL),(7AS)	162-163
1. Anti-theft alarm system , (7AL),(7AS)	162
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder C	163
025 - Reversing camera (Rear Assist) , (KA2)	164-165
1. Reversing camera (Rear Assist) , (KA2)	164
2. Data bus diagnostic interface, Control unit 1 for information electronics, Reversing camera, Fuse holder C	165
026 - Window wash/wipe system, heated washer jets, headlight washer system	166-170
1. Window wash/wipe system, heated washer jets, headlight washer system	166
2. Fuse holder B, Fuse holder C, Relay and fuse carrier 3, Windscreen wiper motor	167
3. Onboard supply control unit, Relay and fuse carrier 3	168
4. Onboard supply control unit, Washer pump, Rear window wiper motor	169
5. Heater and air conditioning system control unit, Left washer jet heater element, Right washer jet heater element	170
027 - Windscreen heater , (4GX)	171-172
1. Windscreen heater , (4GX)	171
2. Heater and air conditioning system control unit, Relay and fuse carrier 2, Relay and fuse carrier 4, Heated windscreen	172
028 - Second battery , (8FV)	173-174
1. Second battery , (8FV)	173
2. Second battery, Special vehicle control unit, Battery monitor control unit 2, Relay and fuse carrier A for special vehicles, Relay and fuse carrier J for special vehicles, Connection and distribution box 2	174
029 - Auxiliary air heater (PTC) , (7E6)	175-176
1. Auxiliary air heater (PTC) , (7E6)	175
2. Fuse holder B, Relay and fuse carrier 1, Auxiliary air heater element	176
030 - Auxiliary heater with remote control , (9M9)	177-180
1. Auxiliary heater with remote control , (9M9)	177
2. Roof aerial, Remote control receiver for auxiliary heater, Fuse holder B, Fuse holder C, Metering pump	178
3. Auxiliary heater control unit, Data bus diagnostic interface, Control unit 1 for information electronics. Heater coolant shut-off valve	179

4. Auxiliary heater control unit	180
031 - Climatronic , (9AK),(3JC)	181-191
1. Climatronic , (9AK),(3JC)	181
2. Air humidity, rain and light sensor, Fuse holder C	182
3. Vehicle interior temperature sensor, Fresh air blower control unit, Rear fresh air blower control unit, Heater and air conditioning system control unit, Roof ventilator	183
4. Pressure sender for refrigerant circuit, Onboard supply control unit, Heater and air conditioning system control unit	184
5. Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Heater and air conditioning system control unit	185
6. Heater and air conditioning system control unit, Defroster flap, Rear temperature flap	186
7. Heater and air conditioning system control unit, Front left temperature flap, Front right temperature flap	187
8. Footwell vent temperature sender, Evaporator temperature sensor, Heater and air conditioning system control unit, Air distribution flap	188
9. Heater and air conditioning system control unit, Air distribution flap, Fresh air and air recirculation flap, Air recirculation flap control motor	189
10. Heater and air conditioning system control unit	190
11. Air conditioner compressor	191
032 - Automatic air conditioning system , (KH6)	192-197
1. Automatic air conditioning system , (KH6)	192
2. Heater and air conditioning system control unit, Fuse holder C	193
3. Pressure sender for refrigerant circuit, Fresh air blower control unit, Onboard supply control unit, Heater and air conditioning system control unit	194
4. Evaporator temperature sensor, Heater and air conditioning system control unit, Defroster flap, Air recirculation flap control motor	195
5. Heater and air conditioning system control unit, Front left temperature flap	196
6. Air conditioner compressor	197
033 - Mobile telephone systems , (9IJ),(9ZX)	198-201
1. Mobile telephone systems , (9IJ),(9ZX)	198
2. Control unit 1 for information electronics, Transmission and reception stabilisation control unit, Fuse holder C	199
3. Onboard supply control unit, Interface for entry and start system, Control unit 4 for break-in protection, Control unit 5 for break-in protection, Transmission and reception stabilisation control unit	200
4. Storage compartment with interface for mobile telephone, LTE aerial 2, Transmission and reception stabilisation control unit	201
034 - Radio navigation system	202-210
1. Radio navigation system	202
2. Control unit 1 for information electronics, Rear left wide band loudspeaker, Rear right wide band loudspeaker, Fuse holder C	203
3. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker	204
4. Data bus diagnostic interface, Control unit 1 for information electronics, Rear overhead view camera	205
5. Control unit 1 for information electronics, Storage compartment with interface for mobile telephone, LTE aerial 2, Transmission and reception stabilisation control unit	206
6. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB connection 1	207
7. Operating unit 1 for driver and convenience functions, Onboard supply control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB charging socket 1	208
8. Control unit 1 for information electronics, Front left bass loudspeaker, Front right bass loudspeaker, Driver side exterior mirror, Passenger side exterior mirror	209
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Front interior light	210
035 - Halogen headlights , (8ID),(8WH)	211-215
1. Halogen headlights , (8ID),(8WH)	211
2. Onboard supply control unit, Fuse holder C	212
3. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	213
4. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	214
5. Hazard warning light switch, Operating unit for lighting, Onboard supply control unit	215
036 - LED headlights , (8IY),(8WH)	216-219
1. LED headlights . (8IY).(8WH)	216

2. Onboard supply control unit, Left fog light bulb, Left turn signal repeater bulb	217
3. Onboard supply control unit, Front left headlight, Front right headlight	218
4. Hazard warning light switch, Rear left vehicle level sender, Onboard supply control unit, Right fog light bulb, Right turn signal repeater bulb	219
037 - Interface for external use , (IS4)	220-222
1. Interface for external use , (IS4)	220
2. Multifunction unit control unit, Fuse holder C	221
3. Multifunction unit control unit, Onboard supply control unit, Data bus diagnostic interface	222
038 - Data bus network	223-237
1. Data bus network	223
2. Data bus diagnostic interface, Fuse holder C	224
3. Data bus diagnostic interface, Diagnostic connection	225
4. Steering column electronics control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	226
5. Voltage converter, Alternator, Pressure sender for refrigerant circuit, Vehicle interior temperature sensor, Fresh air blower control unit, Auxiliary heater control unit, Battery monitor control unit, Rear fresh air blower control unit, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface	227
6. ABS control unit, Parking aid control unit, All-wheel drive control unit, Data bus diagnostic interface	228
7. Power steering control unit, Data bus diagnostic interface, Brake servo	229
8. Selector mechanism, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil, Parking lock actuator	230
9. Airbag control unit, Front passenger door control unit, Data bus diagnostic interface, Rear lid control unit	231
10. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Heater and air conditioning system control unit, Dash panel insert	232
11. Trailer detector control unit, Driver door control unit, Data bus diagnostic interface	233
12. Data bus diagnostic interface, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Rear overhead view camera	234
13. Particulate sensor, NOx sender 3, Adaptive cruise control unit, Control unit for reducing agent heater, Front camera for driver assist systems	235
14. Control unit for NOx sender, Control unit for NOx sender 2, Interface for entry and start system, Control unit 4 for break-in protection, Control unit 5 for break-in protection, Front left headlight, Front right headlight	236
15. Control unit 2 for break-in protection, Control unit 3 for break-in protection	237
039 - Emergency call module , (NZ3),(NZ4)	238-242
1. Emergency call module , (NZ3),(NZ4)	238
2. Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	239
3. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	240
4. Emergency call module control unit and communication unit, Front interior light	241
5. Emergency call module control unit and communication unit, Roof aerial, LTE aerial 1	242
040 - Front camera for driver assist systems , (6I1),(6I2),(6I6),(QK1)	243-245
1. Front camera for driver assist systems , (6I1),(6I2),(6I6),(QK1)	243
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	244
3. Adaptive cruise control unit, Front camera for driver assist systems, Windscreen heater for lane departure warning	245
041 - Automatic anti-dazzle interior mirror , (4L6)	246-248
1. Automatic anti-dazzle interior mirror , (4L6)	246
2. Onboard supply control unit, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	247
3. Driver door control unit, Automatic anti-dazzle interior mirror	248
042 - Interior lights	249-255
1. Interior lights	249
2. Control unit 1 for information electronics, Fuse holder C, Front interior light	250
3. Emergency call module control unit and communication unit, Front interior light	251
4. Glove compartment light switch, Operating unit for lighting, Onboard supply control unit, Front interior light, Luggage compartment light, Glove compartment light, Luggage compartment light 2	252
5. Front interior light, Rear interior light, Automatic anti-dazzle interior mirror	253
6. Front interior light, Rear interior light 2, Rear interior light 3	254
7. Rear interior light 4	255
043 - Front left seat	256-259
1. Front left seat	256
2. Front left lumbar support adjustment switch. Emergency call module control unit and communication	257

unit, Fuse carrier 1, Front left lumbar support adjustment motor, Front left lumbar support height adjustment motor, Front left seat heating	
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Heated backrest for front left seat	258
4. Airbag control unit, Side airbag igniter on front passenger side, Igniter for central airbag for occupant collision protection, driver side	259
044 - Front right seat	260-263
1. Front right seat	260
2. Front right lumbar support adjustment switch, Heater and air conditioning system control unit, Fuse carrier 2, Front right lumbar support adjustment motor, Front right lumbar support height adjustment motor, Front right seat heating	261
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side, Heated backrest for front right seat	262
4. Airbag control unit, Side airbag igniter on driver side, Igniter for central airbag for occupant collision protection, driver side	263
045 - Tail light clusters , (8SA)	264-267
1. Tail light clusters , (8SA)	264
2. Reversing light switch, Onboard supply control unit, Left tail light cluster, Fuse holder C	265
3. Onboard supply control unit, Right tail light cluster	266
4. Hazard warning light switch, Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light	267
046 - Tail light clusters with LEDs , (8SK)	268-271
1. Tail light clusters with LEDs , (8SK)	268
2. Reversing light switch, Onboard supply control unit, Left tail light cluster, Fuse holder C	269
3. Onboard supply control unit, Right tail light cluster	270
4. Hazard warning light switch, Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light	271
047 - Interior lighting, Camper and Multivan , (F4L)	272-276
1. Interior lighting, Camper and Multivan , (F4L)	272
2. Onboard supply control unit, Interior light relay, Fuse holder C, Front interior light	273
3. Button for exterior lighting, Interior light relay, Right luggage compartment light, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	274
4. Interior light relay, Left interior light, Rear left interior light	275
5. Interior light relay, Right interior light, Rear right interior light	276
048 - Multifunction steering wheel , (2FB),(2FD),(2FM)	277-280
1. Multifunction steering wheel , (2FB),(2FD),(2FM)	277
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	278
3. Tiptronic switch in steering wheel to shift down, Multifunction steering wheel control unit, Control unit for steering wheel contact detection, Heated steering wheel	279
4. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	280
049 - Taxi equipment , (F4E)	281-288
1. Taxi equipment , (F4E)	281
2. Special vehicle control unit, Taxi roof sign, Dash panel insert, Fuse holder C	282
3. Taximeter, Special vehicle control unit	283
4. Reader unit for taxi charge system, Mirror taximeter, Special vehicle control unit	284
5. Switch module 2 in dash panel, next to steering wheel, Special vehicle control unit	285
6. Alarm system off switch, Taxi alarm active button, Passive Taxi alarm button, Special vehicle control unit	286
7. Suppression filter for digital two-way radio, Onboard supply control unit, Special vehicle control unit, Two-way radio, Two-way radio loudspeaker, 2-way radio unit microphone	287
8. Digital two-way radio, Two-way radio aerial	288
050 - Roof ventilator , (3JC)	289-290
1. Roof ventilator , (3JC)	289
2. Rear fresh air blower control unit, Emergency call module control unit and communication unit, Fuse holder C, Roof ventilator	290
051 - 12 V sockets , (7B0),(7B2),(7B3),(7B6)	291-292
1. 12 V sockets , (7B0),(7B2),(7B3),(7B6)	291
2. Fuse holder C, 12 V socket, 12 V socket 3, 12 V socket 4	292
052 - Steering column electronics	293-295
1. Steering column electronics	293
2. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Fuse holder C	294
3. Ignition/starter switch, Immobiliser reader coil, Onboard supply control unit, Steering column electronics control unit. Dash panel insert	295



053 - Entry and start authorisation , (4I6),(4I7),(4K5),(4K6)	296-304
1. Entry and start authorisation , (4I6),(4I7),(4K5),(4K6)	296
2. Starter button, Interface for entry and start system, Fuse holder C	297
3. Interface for entry and start system	298
4. Interface for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	299
5. Onboard supply control unit, Interface for entry and start system	300
6. Driver exterior door handle, Front passenger exterior door handle, Driver door control unit, Front passenger door control unit, Interface for entry and start system	301
7. Data bus diagnostic interface, Control unit for electronic steering column lock, Dash panel insert	302
8. Control unit 2 for break-in protection, Control unit 3 for break-in protection	303
9. Control unit 4 for break-in protection, Control unit 5 for break-in protection	304
054 - Door control units, driver side	305-312
1. Door control units, driver side	305
2. Driver door control unit, Fuse holder C, Left window regulator motor, Driver door lock unit	306
3. Central switch for window regulators in driver door, Central locking button, Driver door control unit	307
4. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	308
5. Driver door control unit, Driver side exterior mirror	309
6. Driver exterior door handle, Driver door control unit, Onboard supply control unit, Interface for entry and start system, Automatic anti-dazzle interior mirror	310
7. Side airbag crash sensor on driver side, Airbag control unit, Control unit 1 for information electronics, Blind Spot Monitor control unit 2, Front left bass loudspeaker	311
8. Control unit 1 for information electronics	312
055 - Door control units, passenger side	313-318
1. Door control units, passenger side	313
2. Front passenger door control unit, Fuse holder C, Front passenger door lock unit, Front passenger side window regulator motor	314
3. Window regulator switch in front passenger door, Front passenger door control unit, Passenger side exterior mirror	315
4. Front passenger door control unit, Passenger side exterior mirror	316
5. Front passenger exterior door handle, Front passenger door control unit, Data bus diagnostic interface, Interface for entry and start system, Blind Spot Monitor control unit	317
6. Side airbag crash sensor on front passenger side, Airbag control unit, Control unit 1 for information electronics, Front right bass loudspeaker	318
056 - Lane change assist , (7Y1)	319-321
1. Lane change assist , (7Y1)	319
2. Data bus diagnostic interface, Blind Spot Monitor control unit, Fuse holder C	320
3. Blind Spot Monitor control unit 2, Driver side exterior mirror, Passenger side exterior mirror	321
057 - Wing doors, heated rear windows, rear window wiper , (3RD),(3RE)	322-326
1. Wing doors, heated rear windows, rear window wiper , (3RD),(3RE)	322
2. Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	323
3. Rear lid lock unit, Protective diode, Onboard supply control unit, Rear window wiper motor, Rear lid release motor	324
4. Rear lid handle release button, Onboard supply control unit, Interface for entry and start system, High-level brake light bulb, Luggage compartment aerial for entry and start system, Left number plate light, Right number plate light, Heated rear window	325
5. Rear overhead view camera	326
058 - Rear lid , (3RC),(3RJ)	327-331
1. Rear lid , (3RC),(3RJ)	327
2. Data bus diagnostic interface, Control unit 1 for information electronics, Interface for entry and start system, Luggage compartment aerial for entry and start system, Fuse holder C	328
3. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear window wiper motor, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	329
4. Onboard supply control unit, High-level brake light bulb, Rear overhead view camera, Left number plate light, Right number plate light	330
5. Rear lid control unit, Power latching for rear lid, Heated rear window	331
059 - Power latching system for left sliding door , (5Q2),(5Q7)	332-335
1. Power latching system for left sliding door , (5Q2),(5Q7)	332
2. Rear left central locking lock unit, Contact strip in left sliding door, Contact strip in left B-pillar, Onboard supply control unit, Left sliding door relay, Fuse holder C	333
3. Operating unit with manual release mechanism for left sliding door, Rear left interior door handle switch. Contact strip in left sliding door. Contact strip in left B-pillar. Onboard supply	334

control unit, Power latching control unit for rear left door	
4. Rear left exterior door handle switch	335
060 - Power latching system for right sliding door , (5R2),(5R7)	336-339
1. Power latching system for right sliding door , (5R2),(5R7)	336
2. Rear right central locking lock unit, Contact strip in right sliding door, Contact strip in right B-pillar, Onboard supply control unit, Right sliding door relay, Fuse holder C	337
3. Operating unit with manual release mechanism for right sliding door, Rear right interior door handle switch, Contact strip in right sliding door, Contact strip in right B-pillar, Onboard supply control unit, Power latching control unit for rear right door	338
4. Rear right exterior door handle switch	339
801 - - Fitting locations: Earth points - 1	340-350
1. Earth points	340-350
1.1 Earth points in front part of vehicle	341-343
1.1.1 Front from left	341
1.1.2 Front from right	342
1.1.3 1.5l petrol engine, DPBC	343
1.2 Earth points in middle part of vehicle	344-347
1.2.1 Front left of interior	345
1.2.2 Front right of interior	345
1.2.3 Front middle of interior	346
1.2.4 Front of roof	347
1.3 Earth points in rear part of vehicle	348-350
1.3.1 Left luggage compartment	348
1.3.2 Right of luggage compartment	349-350
802 - Fitting locations: Fuses - 1	351-375
1. Fuses	351-375
1.1 Connection and distribution box 1 -SX1-, from August 2020	352-353
1.1.1 Fitting location of connection and distribution box 1 -SX1-, from August 2020	352-353
1.1.2 Fuse assignment of connection and distribution box 1 -SX1-, from August 2020	354
1.2 Fuse holder B -SB-, from August 2020	354-357
1.2.1 Fitting location of fuse holder B -SB-, from August 2020	354-355
1.2.2 Fuse assignment for fuse holder B -SB-, from August 2020	356-357
1.3 Fuse holder C -SC-, from August 2020	358-365
1.3.1 Fitting location of fuse holder C -SC-, left-hand drive models, from August 2020	359
1.3.2 Fitting location of fuse holder C -SC-, right-hand drive models, from August 2020	360-361
1.3.3 Fuse assignment for fuse holder C -SC-, from August 2020	362-365
1.4 Individual fuses on fuse holder B -SB-, from August 2020	366-367
1.4.1 Fitting location of relay and fuse carrier 1 -SR1- and relay and fuse carrier 4 -SR4-, from August 2020	366
1.4.2 Fuse assignment of relay and fuse carrier 1 -SR1- and relay and fuse carrier 4 -SR4-, from August 2020	367
1.5 Individual fuses on fuse holder C -SC-, from August 2020	368-370
1.5.1 Fitting location of individual fuses, left-hand drive models, from August 2020	368-369
1.5.2 Fitting location of individual fuses, right-hand drive models, from August 2020	370
1.5.3 Fuse assignment for single fuses, from August 2020	371
1.6 Individual TAXI fuses, from August 2020	371-372
1.6.1 Fitting location of individual TAXI fuses, from August 2020	371
1.6.2 Fuse assignment of individual TAXI fuses, from August 2020	372
1.7 Connection and distribution box 2 -SX2-, from August 2020	373-375
1.7.1 Fitting location of connection and distribution box 2 -SX2-, from August 2020	373-374
1.7.2 Fuse assignment of connection and distribution box 2 -SX2-, from August 2020	375
803 - Fitting locations: Relays - 1	376-386
1. Relays	376-386
1.1 Relays on fuse holder B -SB-, from August 2020	377
1.1.1 Relays on fuse holder B -SB-, from August 2020	377
1.2 Relays on fuse holder C -SC-, from August 2020	378-380
1.2.1 Relays on fuse holder C -SC-, left-hand drive models, from August 2020	379
1.2.2 Relays on fuse holder C -SC-, right-hand drive models, from August 2020	380
1.3 Relay on fuse holder B -SB-, from August 2020	381
1.3.1 Relays on relay and fuse carrier 1 -SR1-, from August 2020	381
1.4 Relay on fuse holder C -SC-, from August 2020	382-384
1.4.1 Relay on fuse holder C -SC-, left-hand drive vehicle, from August 2020	382-383
1.4.2 Relay on fuse holder C -SC-, right-hand drive vehicle, from August 2020	384
1.5 Relay for sliding doors	385-386
1.5.1 Left sliding door relay	385
1.5.2 Right sliding door relay	386

804 - Fitting locations: front part of vehicle - 1	387-406
1. Fitting location: front part of vehicle	387-406
1.1 Front, view from front	392
1.1.1 Front, view from front	392
1.2 Front, view from left	393-394
1.2.1 Front, view from left	393-394
1.3 Front, view from right	395-396
1.3.1 Front, view from right	395-396
1.4 1.5l petrol engine, DPBC	397-400
1.4.1 1.5l petrol engine, DPBC, from front	397
1.4.2 1.5l petrol engine, DPBC, from top	398
1.4.3 1.5l petrol engine, DPBC, from right side	399
1.4.4 1.5l petrol engine, DPBC, from rear	400
1.5 2.0l diesel engine, DTRC, DTRE, DTRF	401-403
1.5.1 2.0l diesel engine, DTRC, DTRE, DTRF, from front	402
1.5.2 2.0l diesel engine, DTRC, DTRE, DTRF, from top	402
1.5.3 2.0l diesel engine, DTRC, DTRE, DTRF, from rear	403
1.6 Manual gearbox	404
1.6.1 Manual gearbox, 0C9	404
1.7 Dual clutch gearbox	405-406
1.7.1 Dual clutch gearbox, 0GC	405-406
805 - Fitting locations: middle part of vehicle - 1	407-450
1. Fitting locations: middle part of vehicle	407-450
1.1 At front of interior	415-435
1.1.1 Front left of interior, LHD models	416-417
1.1.2 Front left of interior, RHD models	418-419
1.1.3 Left footwell, LHD models	420
1.1.4 Right footwell, RHD models	421
1.1.5 Front right of interior, LHD models	422-423
1.1.6 Front right of interior, RHD models	424
1.1.7 Dash panel, LHD models	425
1.1.8 Dash panel, RHD models	426
1.1.9 Steering wheel	427
1.1.10 Steering column	427-428
1.1.11 Front centre console, LHD models	429
1.1.12 Front centre console, RHD models	430
1.1.13 Left front seat	431-432
1.1.14 Right front seat	433-434
1.1.15 Seats, seat row 2	435
1.1.16 Seats, seat row 3	435
1.2 Rear interior	436-437
1.2.1 Rear interior, view from left	437
1.2.2 Rear interior, view from right	437
1.3 Roof	438-440
1.3.1 Roof, part 1	439
1.3.2 Roof, part 2	439-440
1.4 Doors	441-445
1.4.1 Front left door	441-442
1.4.2 Front right door	443-444
1.4.3 Rear left door	445
1.4.4 Rear right door	446
1.5 Heater and air conditioning unit	446-448
1.5.1 Climatronic, KC0, KH7, part 1	447
1.5.2 Climatronic, KC0, KH7, part 2	448
1.6 Connector assignments	449-450
1.6.1 Onboard supply control unit -J519-	449-450
806 - Fitting locations: rear part of vehicle - 1	451-457
1. Fitting locations: rear part of vehicle	451-457
1.1 Rear lid	452
1.1.1 Rear lid	452
1.2 wing doors	453
1.2.1 wing doors	453
1.3 Rear bumper	454
1.3.1 Rear bumper	454
1.4 Rear side, view from left	455
1.4.1 Rear side. view from left	455

1.5 Rear side, view from right	456-457
1.5.1 Rear side, view from right	456-457
807 - Fitting locations: vehicle underbody - 1	458-461
1. Fitting locations: vehicle underbody	458-461
1.1 Underbody	458-461
1.1.1 Underbody	458-459
1.1.2 Underbody, for models with diesel engine	460-461
808 - Fitting locations: special vehicles - 1	462-470
1. Fitting locations: special vehicles	462-470
1.1 Special vehicle TAXI, from August 2020	462-470
1.1.1 Fitting location of TAXI engine compartment, from August 2020	463
1.1.2 Fitting location of individual TAXI fuses, from August 2020	464
1.1.3 Fuse assignment of individual TAXI fuses, from August 2020	465
1.1.4 Fitting location of TAXI front left, from August 2020	466
1.1.5 Fitting location of TAXI centre console and roof at front, from August 2020	467
1.1.6 Fitting location of TAXI front right, from August 2020	468
1.1.7 Fitting location of TAXI roof at rear, from August 2020	469-470