



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	3
1.3 Notes on installing .....	4
1.4 Tightening torques .....	5
1.5 Assembly mountings .....	5
1.6 Aligning engine and gearbox .....	6
1.7 Renewing engine carrier rubber mounting .....	7
1.8 Additional information and removal instructions for vehicles with air conditioner .....	7
<b>13 - Crankshaft group</b> .....	<b>9</b>
<b>1 Dismantling and assembling engine</b> .....	<b>9</b>
1.1 Dismantling and assembling engine .....	9
1.2 Removing and installing ribbed belt .....	24
1.3 Removing and installing toothed belt .....	25
<b>2 Removing and installing sealing flange and flywheel/drive plate</b> .....	<b>29</b>
2.1 Removing and installing sealing flange and flywheel/drive plate .....	29
2.2 Renewing crankshaft oil seal - pulley end - .....	32
2.3 Removing and installing drive plate .....	33
2.4 Subsequent marking of ignition timing notch .....	35
<b>3 Removing and installing crankshaft</b> .....	<b>36</b>
3.1 Removing and installing crankshaft .....	36
3.2 Crankshaft dimensions .....	38
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>39</b>
4.1 Dismantling and assembling pistons and conrods .....	39
4.2 Piston and cylinder dimensions .....	45
<b>15 - Cylinder head, Valve gear</b> .....	<b>46</b>
<b>1 Removing and installing cylinder head</b> .....	<b>46</b>
1.1 Removing and installing cylinder head .....	46
1.2 Removing and installing cylinder head .....	50
1.3 Checking compressions .....	51
<b>2 Servicing valve gear</b> .....	<b>52</b>
2.1 Servicing valve gear .....	52
2.2 Reworking valve seats .....	58
2.3 Removing and installing camshaft oil seal .....	60
2.4 Removing and installing camshaft .....	61
2.5 Checking hydraulic bucket tappets .....	63
2.6 Checking valve guides .....	63
2.7 Renewing valve guides .....	64
2.8 Renewing valve stem seals .....	64
<b>17 - Lubrication</b> .....	<b>66</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>66</b>
1.1 Removing and installing parts of the lubrication system .....	66
1.2 Checking oil pressure and oil pressure switch .....	73



<b>19 - Cooling system</b> . . . . .	<b>75</b>
<b>1 Removing and installing parts of cooling system</b> . . . . .	<b>75</b>
1.1 Removing and installing parts of cooling system . . . . .	75
1.2 Parts of cooling system body side . . . . .	76
1.3 Parts of cooling system - engine side . . . . .	79
1.4 Dismantling and assembling coolant pump . . . . .	83
1.5 Draining and filling cooling system . . . . .	85
1.6 Checking radiator fan run-on . . . . .	86
<b>20 - Fuel supply system</b> . . . . .	<b>88</b>
<b>1 Removing and installing parts of fuel supply system</b> . . . . .	<b>88</b>
1.1 Removing and installing parts of fuel supply system . . . . .	88
1.2 Removing and installing fuel tank with attachments >09.89 . . . . .	89
1.3 Removing and installing, dismantling and assembling pump reservoir >09.89 . . . . .	93
1.4 Removing and installing fuel tank with attachments and fuel filter 10.89 > . . . . .	96
1.5 Servicing fuel delivery unit 10.89...07.91 . . . . .	101
1.6 Safety precautions when working on the fuel supply system . . . . .	105
1.7 Rules for cleanliness . . . . .	105
<b>2 Servicing fuel supply system</b> . . . . .	<b>106</b>
2.1 Servicing fuel supply system . . . . .	106
2.2 Adjusting throttle cable . . . . .	106
2.3 Removing and installing fuel delivery unit 10.89 > . . . . .	107
2.4 Dismantling and assembling fuel delivery unit 10.89...07.91 . . . . .	108
2.5 Checking fuel pump(s) . . . . .	109
2.6 Checking fuel pump run-on . . . . .	113
2.7 Removing and installing parts of the activated charcoal filter system . . . . .	115
2.8 Checking activated charcoal filter shut-off valve . . . . .	116
<b>21 - Charging</b> . . . . .	<b>117</b>
<b>1 Charge air system with G-charger</b> . . . . .	<b>117</b>
1.1 Charge air system with G-charger . . . . .	117
1.2 Removing and installing parts of the charge air system . . . . .	117
1.3 Checking charge air system for leaks . . . . .	124
1.4 Checking boost pressure . . . . .	128
<b>26 - Exhaust system</b> . . . . .	<b>130</b>
<b>1 Removing and installing parts of exhaust system</b> . . . . .	<b>130</b>
1.1 Removing and installing parts of exhaust system . . . . .	130