



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
<b>10 - Removing and installing engine</b>	<b>3</b>
<b>1 Removing and installing engine</b>	<b>3</b>
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Notes on installing	6
1.4 Tightening torques	7
1.5 Assembly mountings	8
1.6 Aligning engine and gearbox	9
1.7 Renewing engine carrier rubber mounting	10
1.8 Additional information and removal instructions for vehicles with air conditioner	10
<b>13 - Crankshaft group</b>	<b>12</b>
<b>1 Dismantling and assembling engine</b>	<b>12</b>
1.1 Dismantling and assembling engine	12
1.2 Removing and installing ribbed belt	31
1.3 Checking valve timing	32
1.4 Adjusting valve timing	33
<b>2 Removing and installing sealing flanges and flywheel/drive plate</b>	<b>39</b>
2.1 Removing and installing sealing flanges and flywheel/drive plate	39
2.2 Renewing crankshaft oil seal - vibration damper end -	41
2.3 Removing and installing drive plate	43
<b>3 Removing and installing crankshaft</b>	<b>45</b>
3.1 Removing and installing crankshaft	45
<b>4 Dismantling and assembling pistons and conrods</b>	<b>48</b>
4.1 Dismantling and assembling pistons and conrods	48
4.2 Piston and cylinder dimensions	54
<b>15 - Cylinder head, Valve gear</b>	<b>55</b>
<b>1 Removing and installing cylinder head</b>	<b>55</b>
1.1 Removing and installing cylinder head	55
1.2 Removing and installing cylinder head cover	62
1.3 Installing cylinder head	64
1.4 Checking compressions	65
<b>2 Servicing valve gear</b>	<b>66</b>
2.1 Servicing valve gear	66
2.2 Reworking valve seats	72
2.3 Removing and installing camshafts	73
2.4 Checking hydraulic bucket tappets	76
2.5 Checking valve guides	77
2.6 Renewing valve guides	77
2.7 Renewing valve stem seals	78
<b>17 - Lubrication</b>	<b>80</b>
<b>1 Removing and installing parts of the lubrication system</b>	<b>80</b>
1.1 Removing and installing parts of the lubrication system	80
1.2 Dismantling and assembling oil filter housing	86
1.3 Dismantling and assembling oil pump	89



1.4	Checking oil pressure and oil pressure switch . . . . .	92
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>93</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>93</b>
1.1	Removing and installing parts of cooling system . . . . .	93
1.2	Parts of cooling system body side . . . . .	94
1.3	Parts of cooling system engine side . . . . .	97
1.4	Dismantling and assembling coolant thermostat housing . . . . .	101
1.5	Draining and filling cooling system . . . . .	104
1.6	Removing and installing radiator and radiator fan . . . . .	106
1.7	Removing and installing coolant pump . . . . .	107
1.8	Checking coolant continued circulation pump and radiator fan run-on . . . . .	109
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>110</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>110</b>
1.1	Removing and installing parts of fuel supply system . . . . .	110
1.2	Removing and installing fuel tank with attachments and fuel filter . . . . .	111
1.3	Safety precautions when working on the fuel supply system . . . . .	116
1.4	Rules for cleanliness . . . . .	116
1.5	Adjusting throttle cable . . . . .	117
1.6	Removing and installing fuel delivery unit . . . . .	119
1.7	Checking fuel pump . . . . .	120
1.8	Removing and installing parts of the activated charcoal filter system . . . . .	124
1.9	Checking fuel tank breather . . . . .	126
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>128</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>128</b>
1.1	Removing and installing parts of exhaust system . . . . .	128
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments . . . . .	129
1.3	Silencer with mountings . . . . .	131
<b>2</b>	<b>Exhaust gas recirculation system . . . . .</b>	<b>132</b>
2.1	Exhaust gas recirculation system . . . . .	132
2.2	Checking exhaust gas recirculation valve with temperature sensor . . . . .	134
<b>3</b>	<b>Secondary air system . . . . .</b>	<b>136</b>
3.1	Secondary air system . . . . .	136
3.2	Function . . . . .	136
3.3	Removing and installing parts of the secondary air system . . . . .	137
3.4	Checking combi-valve . . . . .	140
3.5	Checking secondary air pump motor . . . . .	140
3.6	Checking change-over valve . . . . .	141
3.7	Removing and installing combi-valve and secondary air pump motor . . . . .	142