



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Notes on installing	5
1.4 Tightening torques	6
1.5 Assembly mountings	6
1.6 Aligning engine and gearbox	7
1.7 Renewing engine carrier rubber mounting	8
1.8 Additional information and removal instructions for vehicles with air conditioner	8
13 - Crankshaft group	9
1 Dismantling and assembling engine	9
1.1 Dismantling and assembling engine	9
1.2 Removing and installing ribbed belt	20
1.3 Removing and installing toothed belt	22
2 Removing and installing sealing flange and flywheel/drive plate	25
2.1 Removing and installing sealing flange and flywheel/drive plate	25
2.2 Renewing crankshaft oil seal - pulley end -	28
2.3 Removing and installing drive plate	29
3 Removing and installing crankshaft	32
3.1 Removing and installing crankshaft	32
3.2 Crankshaft dimensions	34
4 Dismantling and assembling pistons and conrods	35
4.1 Dismantling and assembling pistons and conrods	35
4.2 Piston and cylinder dimensions	41
15 - Cylinder head, Valve gear	42
1 Removing and installing cylinder head	42
1.1 Removing and installing cylinder head	42
1.2 Removing and installing cylinder head	46
1.3 Checking compressions	47
2 Servicing valve gear	48
2.1 Servicing valve gear	48
2.2 Reworking valve seats	55
2.3 Removing and installing camshaft oil seal	57
2.4 Removing and installing camshaft	58
2.5 Checking hydraulic bucket tappets	59
2.6 Checking valve guides	60
2.7 Renewing valve guides	60
2.8 Renewing valve stem seals	61
17 - Lubrication	63
1 Removing and installing parts of the lubrication system	63
1.1 Removing and installing parts of the lubrication system	63
1.2 Checking oil pressure and oil pressure switch	70



19 - Cooling system	72
1 Removing and installing parts of cooling system	72
1.1 Removing and installing parts of cooling system	72
1.2 Parts of cooling system body side	73
1.3 Parts of cooling system - engine side	76
1.4 Dismantling and assembling coolant pump	79
1.5 Draining and filling cooling system	81
1.6 Checking radiator fan run-on	82
20 - Fuel supply system	84
1 Removing and installing parts of fuel supply system	84
1.1 Removing and installing parts of fuel supply system	84
1.2 Removing and installing fuel tank with its attachments	85
1.3 Safety precautions when working on the fuel supply system	89
1.4 Rules for cleanliness	89
1.5 Adjusting throttle cable	90
1.6 Removing and installing fuel delivery unit	90
1.7 Checking fuel pump	91
1.8 Removing and installing parts of the activated charcoal filter system	96
26 - Exhaust system	98
1 Removing and installing parts of exhaust system	98
1.1 Removing and installing parts of exhaust system	98