



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working with pyrotechnic components	1
1.2 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.3 Additional safety regulations for side airbag	3
1.4 Additional safety instructions for curtain airbag	4
1.5 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.6 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.7 Checking airbag securing parts after an accident	7
1.8 Accident without airbag triggering	7
1.9 Safety instructions for airbag	7
1.10 Checking seat belts	8
1.11 Check belt webbing	8
1.12 Checking inertia reel (locking mechanism)	9
1.13 Visually checking belt buckle	10
1.14 Check operation of belt buckle	10
1.15 Checking belt relays, and buckle tongues	10
1.16 Checking securing parts and anchorage points after an accident	10
1.17 Checking child seat anchors after an accident	11
1.18 Safety instructions for automatic anti-dazzle interior mirror	11
2 Repair notes	12
2.1 Contact corrosion	12
2.2 Routing and attachment of lines	12
68 - Interior equipment	13
1 Compartments, covers and trims	13
1.1 Removing and installing glove compartment	13
1.2 Removing and installing button for glove compartment	15
1.3 Removing and installing lower airbag unit cover on front passenger side	16
1.4 Removing and installing outer vent trim	18
1.5 Removing and installing centre vent trim	20
1.6 Removing and installing dash panel centre trim	22
1.7 Removing and installing dash panel compartment	23
1.8 Removing and installing centre dash panel compartment	25
1.9 Removing and installing outer loudspeaker trim	25
1.10 Removing and installing windscreen vent trim	26
1.11 Removing and installing fuse box cover	28
1.12 Removing and installing roof gallery storage compartment	28
1.13 Removing and installing roof console and spectacles holder	30
2 Equipment	31
2.1 Assembly overview - sun visor	31
2.2 Removing and installing grab handle	31
2.3 Removing and installing sun visor	36
3 Step insert	39
3.1 Assembly overview - front step insert	39
3.2 Assembly overview - sliding door step	39
3.3 Assembly overview - Sliding door step seal	41
3.4 Removing and installing front step insert	41
3.5 Removing and installing sliding door step	43
4 On inside	46
4.1 Assembly overview - manual anti-dazzle interior mirror	46



4.2	Assembly overview - interior mirror with rain and light sensor G397	47
4.3	Removing and installing manual anti-dazzle interior mirror	48
4.4	Repairing interior mirror retaining plate	48
4.5	Removing and installing interior mirror with rain and light sensor G397	50
4.6	Rain and light sensor G397	51
69	Passenger protection	58
1	Seat belts	58
1.1	Installation location overview - front seat belts and anchorage points	58
1.2	Assembly overview - front three-point seat belt	60
1.3	Assembly overview - rear seat belts	61
1.4	Removing and installing front belt inertia reel	61
1.5	Removing and installing front belt height adjuster	62
1.6	Removing and installing belt end anchor	64
1.7	Removing and installing front belt buckle	65
1.8	Removing and installing belt inertia reel for double bench seat	66
1.9	Removing and installing belt anchor for double bench seat	66
1.10	Removing and installing outer belt buckle, double bench seat	67
1.11	Removing and installing inner belt buckle, double bench seat	67
1.12	Removing and installing outer belt anchor for double bench seat	69
1.13	Removing and installing inner belt anchor for double bench seat	69
2	Airbag system	72
2.1	Overview of fitting locations - airbag system	72
3	Airbag control unit	73
3.1	Assembly overview - airbag control unit	73
3.2	Removing and installing airbag control unit J234	73
4	Driver's airbag	76
4.1	Removing and installing airbag unit on driver side	76
4.2	Removing and installing steering wheel	79
4.3	Removing and installing return spring with slip ring	80
5	Front passenger side airbag	81
5.1	Removing and installing airbag unit on front passenger side	81
6	Side airbag	84
6.1	Removing and installing side airbags on driver and front passenger sides	84
7	Curtain airbag	87
7.1	Removing and installing curtain airbag in front seat area	87
8	Airbag crash sensors	91
8.1	Removing and installing front side airbag crash sensor	91
70	Trim, insulation	94
1	Door trims	94
1.1	Removing and installing front door trim, driver side	94
1.2	Removing and installing comfort arm rest in front door	96
1.3	Removing and installing comfort arm rest in front door	98
1.4	Removing and installing rear right wing door trim	100
1.5	Removing and installing rear left wing door trim	102
1.6	Removing and installing cab door trim	104
1.7	Removing and installing sliding door trim	105
2	Dash panel	108
2.1	Removing and installing dash panel	108
2.2	Removing and installing foot well trim	110
2.3	Removing and installing lower dash panel trim	111
2.4	Removing and installing steering column trim	111
2.5	Removing and installing lower centre trim	112



2.6	Removing and installing centre console	113
2.7	Removing and installing dash panel insert trim	115
3	Removing and installing central tube for dash panel	118
4	Interior trims	121
4.1	Installation location overview - cab floor covering	121
4.2	Installation location overview - passenger compartment floor covering	123
4.3	Installation location overview - partition panel	125
4.4	Assembly overview - B-pillar trim	126
4.5	Assembly overview - front floor plate	127
4.6	Removing and installing partition panel	127
4.7	Removing and installing A-pillar trim	129
4.8	Removing and installing A-pillar trim, vehicles with curtain airbag in cab	130
4.9	Removing and installing B-pillar trim	131
4.10	Removing and installing D-pillar trim	133
4.11	Removing and installing D-pillar trim, vehicles with electrically operated vent window	134
4.12	Removing and installing front side panel trim	136
4.13	Removing and installing rear side panel trim	138
4.14	Removing and installing rear side panel trim, panel van	140
4.15	Removing and installing side window trim	141
4.16	Removing and installing left floor covering in cab	142
4.17	Removing and installing right floor covering in cab	142
4.18	Removing and installing front floor plate	143
5	Luggage compartment trims	146
5.1	Removing and installing lock carrier cover	146
6	Roof trims	148
6.1	Assembly overview – moulded headliner	148
6.2	Removing and installing moulded headlining	149
72	Seat frames	152
1	Front seats	152
1.1	Assembly overview - seat frame	152
1.2	Assembly overview - suspension seat	153
1.3	Assembly overview - swivel seat	155
1.4	Assembly overview - backrest frame	156
1.5	Assembly overview - front double bench seat and seat padding	156
1.6	Assembly overview - backrest and seat padding for double cab	157
1.7	Removing and installing front seat with longitudinal adjustment	158
1.8	Removing and installing front seat without longitudinal adjustment	160
1.9	Seat frame trim	162
1.10	Removing and installing seat padding	164
1.11	Removing and installing front backrest frame	165
1.12	Armrest on backrest frame	166
1.13	Removing and installing front double bench seat and seat padding	169
1.14	Removing and installing front seat box	170
1.15	Removing and installing seat padding of front double bench seat	171
1.16	Removing and installing front double backrest	172
2	Rear seats	174
2.1	Assembly overview - bench seat (2 seats) for passenger compartment - 1st, 2nd and 3rd row of seats	174
2.2	Assembly overview - bench seat (3 seats) for passenger compartment - 1st, 2nd and 3rd row of seats	175
2.3	Removing and installing 1st row passenger compartment seats	175
2.4	Removing and installing armrest for bench seat	176
2.5	Removing and installing backrest cover of seat in 1st row of passenger compartment	178
2.6	Removing and installing backrest cover in 2nd seat row of passenger compartment	179



74 - Seat - padding, covers	180
1 Front seat covers and padding	180
1.1 Assembly overview - front seat cover and padding	180
1.2 Assembly overview - front backrest cover and padding	182
1.3 Assembly overview - front double bench seat cover and padding	183
1.4 Assembly overview - front double backrest cover and padding	184
1.5 Removing and installing front seat cover and padding	184
1.6 Removing and installing head restraint guide	186
1.7 Removing and installing backrest cover panel	187
1.8 Removing and installing front backrest cover and padding	188
1.9 Removing and installing front backrest cover and padding, vehicles with side airbags	189
1.10 Removing and installing front double bench seat cover and padding	191
1.11 Removing and installing cover and padding for front double backrest	193
1.12 Replacing front seat heater elements	196
2 Rear seat covers and padding	198
2.1 Assembly overview - rear bench seat	198
2.2 Removing and installing rear backrest cover and padding	198
2.3 Removing and installing rear bench seat cover and padding	200