



## Contents

<b>50 - Body - front</b> .....	<b>1</b>
<b>1 Lock carrier</b> .....	<b>1</b>
1.1 Assembly overview – lock carrier .....	1
1.2 Removing and installing lock carrier .....	2
1.3 Detaching pressure hoses .....	4
<b>2 Wings</b> .....	<b>7</b>
2.1 Assembly overview - front wing .....	7
2.2 Assembly overview - elbow .....	8
2.3 Removing and installing front wing .....	8
2.4 Front wing replacement part .....	11
2.5 Removing and installing elbow .....	11
<b>55 - Bonnet, rear lid</b> .....	<b>15</b>
<b>1 Bonnet (hood)</b> .....	<b>15</b>
1.1 Assembly overview - bonnet .....	15
1.2 Assembly overview - bonnet stay .....	16
1.3 Assembly overview – bonnet lock and release components .....	17
1.4 Removing and installing bonnet .....	17
1.5 Adjusting bonnet .....	19
1.6 Removing and installing bonnet stay .....	21
1.7 Removing and installing bonnet hinge .....	22
1.8 Removing and installing bonnet lock .....	23
1.9 Removing and installing arrester .....	24
1.10 Removing and installing insulation .....	25
<b>2 Tank flap</b> .....	<b>26</b>
2.1 Assembly overview - fuel tank flap .....	26
2.2 Removing and installing fuel tank flap .....	26
<b>57 - Front doors, door components, central locking</b> .....	<b>29</b>
<b>1 Door</b> .....	<b>29</b>
1.1 Assembly overview - front door .....	29
1.2 Assembly overview – door hinge .....	31
1.3 Removing and installing inner door seal .....	31
1.4 Removing and installing front door .....	33
1.5 Adjusting door .....	35
1.6 Adjusting striker pin .....	35
1.7 Removing and installing door hinge .....	36
1.8 Removing and installing door arrester .....	38
1.9 Removing and installing striker pin .....	38
<b>2 Door components</b> .....	<b>40</b>
2.1 Assembly overview - window regulator .....	40
2.2 Assembly overview - door handle and door lock .....	41
2.3 Removing and installing window regulator .....	41
2.4 Removing and installing window regulator motor .....	43
2.5 Removing and installing lock cylinder housing .....	45
2.6 Removing and installing door handle .....	46
2.7 Removing and installing mounting bracket .....	46
2.8 Removing and installing door lock .....	47
<b>3 Central locking</b> .....	<b>49</b>
3.1 Overview of fitting locations – central locking .....	49
3.2 Assembly overview - ignition key to 2010 .....	50
3.3 Assembly overview - ignition key from 2010 .....	51



3.4	Removing and installing ignition key battery to 2010	51
3.5	Removing and installing ignition key battery from 2010	52
<b>58</b>	<b>Rear doors, door components</b>	<b>54</b>
<b>1</b>	<b>Sliding door</b>	<b>54</b>
1.1	Assembly overview - guide rail	54
1.2	Assembly overview – upper guide rail	55
1.3	Removing and installing sliding door inner seals	55
1.4	Removing and installing sliding door	56
1.5	Adjusting sliding door	58
1.6	Removing and installing guide rail	66
1.7	Removing and installing upper guide rail	67
<b>2</b>	<b>Components of sliding door</b>	<b>69</b>
2.1	Assembly overview – components of sliding door	69
2.2	Assembly overview - interior operating mechanism	71
2.3	Assembly overview – additional lock	72
2.4	Removing and installing upper roller guide	72
2.5	Removing and installing lower roller guide	73
2.6	Removing and installing hinge	73
2.7	Removing and installing sliding door limit stop	74
2.8	Removing and installing opening restrictor	74
2.9	Removing and installing lock cylinder housing	75
2.10	Removing and installing door handle	75
2.11	Removing and installing mounting bracket	75
2.12	Removing and installing door lock	77
2.13	Removing and installing interior operating mechanism	78
2.14	Removing and installing additional lock at top	80
2.15	Removing and installing striker pin	81
2.16	Removing and installing striker pin	82
2.17	Removing and installing guide wedge and slide	82
<b>3</b>	<b>Electric sliding door</b>	<b>85</b>
3.1	Assembly overview – sliding door	85
3.2	Assembly overview - interior operating mechanism	88
3.3	Assembly overview - guide rail	89
3.4	Assembly overview – upper guide rail	90
3.5	Removing and installing sliding door inner seal	90
3.6	Removing and installing sliding door	92
3.7	Adjusting sliding door	94
3.8	Motor release mechanism	101
3.9	Checking and adjusting tension of drive belt	102
3.10	Removing and installing motor to open right sliding door V323 or motor to open left sliding door V485	103
3.11	Removing and installing upper roller guide	104
3.12	Removing and installing lower roller guide	105
3.13	Removing and installing roller carriage	105
3.14	Removing and installing sliding door limit stops	107
3.15	Removing and installing power latching motor V329 on high sliding doors with additional lock	108
3.16	Removing and installing right sliding door control unit J731 or left sliding door control unit J558	109
3.17	Removing and installing lock cylinder housing	110
3.18	Removing and installing door handle	111
3.19	Removing and installing mounting bracket	111
3.20	Removing and installing rear right central locking lock unit F223 or rear left central locking lock unit F222	113
3.21	Removing and installing interior operating mechanism	115



3.22	Removing and installing pinch protection	117
3.23	Removing and installing additional lock/upper power latching system	118
3.24	Removing and installing striker pin	119
3.25	Removing and installing rear right power latching motor V308 or rear left power latching motor V307	120
3.26	Removing and installing guide wedge and slide	121
3.27	Removing and installing guide rail	122
3.28	Removing and installing upper guide rail	123
3.29	Electric sliding door switch in B-pillar	125
<b>4</b>	<b>Right rear wing door</b>	<b>127</b>
4.1	Assembly overview - right rear wing door	127
4.2	Assembly overview - door hinge	129
4.3	Assembly overview - door arrester	130
4.4	Assembly overview - upper door lock and lower guide	131
4.5	Assembly overview - interior operating mechanism	132
4.6	Assembly overview - door lock	133
4.7	Removing and installing wing door inner seal	133
4.8	Removing and installing rear right wing door	134
4.9	Adjusting rear wing door	136
4.10	Removing and installing door hinge	142
4.11	Removing and installing door arrester	143
4.12	Removing and installing - door upper lock and lower guide	145
4.13	Removing and installing interior operating mechanism	147
4.14	Removing and installing door lock	149
4.15	Removing and installing lock cylinder housing	151
4.16	Removing and installing door handle	151
4.17	Removing and installing mounting bracket	152
4.18	Removing and installing upper striker pin	153
4.19	Removing and installing centring pin and lower striker with centring pin	154
<b>5</b>	<b>Left rear wing door</b>	<b>155</b>
5.1	Assembly overview - left rear wing door	155
5.2	Assembly overview - interior lock	157
5.3	Assembly overview - door arrester with opening angle of 250°	158
5.4	Removing and installing upper door lock	158
5.5	Removing and installing lower door lock	159
5.6	Removing and installing striker pin	160
5.7	Removing and installing door opener	160
5.8	Removing and installing interior lock	160
5.9	Removing and installing door arrester with opening angle of 250°	162
<b>6</b>	<b>Cab door</b>	<b>164</b>
6.1	Assembly overview - cab door	164
6.2	Assembly overview - hinges and hinge brackets	166
6.3	Removing and installing cab door seal	166
6.4	Removing and installing cab door	168
6.5	Adjusting cab door	170
6.6	Removing and installing hinges and hinge brackets	172
6.7	Removing and installing door arrester	173
6.8	Removing and installing housing	174
6.9	Removing and installing door handle	175
6.10	Removing and installing mounting bracket	175
6.11	Removing and installing door lock	176
6.12	Removing and installing interior operating mechanism	178
6.13	Removing and installing striker pin	179
<b>60</b>	<b>Sunroof</b>	<b>181</b>
1	Sunroof with glass panel	181



1.1	Function	181
1.2	Assembly overview - sliding/tilting sunroof with glass panel	182
1.3	Removing and installing sliding/tilting sunroof with glass panel	182
1.4	Removing and installing sliding glass roof	184
1.5	Removing and installing tilting arm	185
1.6	Removing and installing sliding sunroof motor	186
1.7	Removing and installing trim	188
<b>63</b>	<b>- Bumpers</b>	<b>189</b>
<b>1</b>	<b>Bumper, front</b>	<b>189</b>
1.1	Assembly overview - front bumper cover	189
1.2	Assembly overview - add-on parts	191
1.3	Removing and installing front bumper cover, vehicles up to 2012	191
1.4	Removing and installing front bumper cover, vehicles as of 2012	193
1.5	Removing and installing front bumper carrier, vehicles up to 2012	195
1.6	Removing and installing front bumper carrier, vehicles as of 2012	196
1.7	Repairing front bumper cover	198
<b>2</b>	<b>Bumper, rear</b>	<b>199</b>
2.1	Assembly overview - rear bumper cover	199
2.2	Assembly overview - rear bumper cover, add-on parts	200
2.3	Assembly overview - steps	201
2.4	Removing and installing rear bumper cover	201
2.5	Removing and installing rear step	203
2.6	Repairing rear bumper cover	205
<b>64</b>	<b>- Glazing</b>	<b>206</b>
<b>1</b>	<b>Repair instructions</b>	<b>206</b>
1.1	Minimum curing period	206
1.2	Repairing windscreen	207
1.3	Installation instructions for bonded windows	207
1.4	Preparing old undamaged window for glazing	208
1.5	Preparing new windows for installing	209
1.6	Preparing body flange for glazing	210
1.7	Touching up paint damage	210
1.8	Cleaning in the event of dirt caused by adhesive sealant	211
1.9	Preparing windscreen with inspection window for vehicles without vehicle identification number	211
<b>2</b>	<b>Windscreen</b>	<b>212</b>
2.1	Assembly overview - windscreen	212
2.2	Assembly overview - heated windscreen and rain sensor	213
2.3	Removing and installing windscreen	213
<b>3</b>	<b>Side window</b>	<b>218</b>
3.1	Assembly overview - side window	218
3.2	Removing and installing side window	218
<b>4</b>	<b>Movable section of sliding window</b>	<b>222</b>
4.1	Assembly overview - control mechanism for sliding window	222
4.2	Removing and installing movable section of sliding window	223
<b>5</b>	<b>Rear windscreen</b>	<b>226</b>
5.1	Assembly overview - rear wing door window	226
5.2	Removing and installing rear wing door window	226
<b>6</b>	<b>Rear sliding window</b>	<b>230</b>
6.1	Removing and installing rear sliding window	230
<b>7</b>	<b>Roof window</b>	<b>233</b>
7.1	Assembly overview - roof window	233
7.2	Removing and installing roof window	233



<b>8</b>	<b>Front door window</b>	<b>237</b>
8.1	Assembly overview - front door window	237
8.2	Removing and installing door window	237
8.3	Adjusting door window	238
8.4	Removing and installing side window	239
<b>9</b>	<b>Windows having threaded connections</b>	<b>241</b>
9.1	Assembly overview - rear vent window	241
9.2	Assembly overview - cab rear door vent window	242
9.3	Removing and installing rear vent window	242
9.4	Removing and installing cab rear door vent window	244
<b>66</b>	<b>Exterior equipment</b>	<b>246</b>
<b>1</b>	<b>Radiator grille and front trim</b>	<b>246</b>
1.1	Assembly overview - radiator grille and emblem, vehicles up to 2012	246
1.2	Assembly overview - radiator grille, vehicles as of 2012	247
1.3	Removing and installing radiator grille and emblem, vehicles up to 2012	247
1.4	Removing and installing radiator grille and emblem, vehicles as of 2012	248
<b>2</b>	<b>Mouldings, trims, extensions</b>	<b>253</b>
2.1	Tool	253
2.2	Assembly overview - headlight trim	253
2.3	Removing and installing headlight trim	254
2.4	Removing and installing air intake grille	255
2.5	Removing and installing wing cover	257
2.6	Removing and installing side panel trim	257
2.7	Removing and installing number plate light trim	258
2.8	Assembly overview - protective side strip	262
<b>3</b>	<b>Noise insulation</b>	<b>264</b>
3.1	Assembly overview - noise insulation	264
3.2	Removing and installing noise insulation	265
<b>4</b>	<b>Drive assembly guard - Crafter 4MOTION with Achleitner all-wheel drive</b>	<b>268</b>
4.1	Drive assembly guard	268
<b>5</b>	<b>Exterior mirror</b>	<b>271</b>
5.1	Assembly overview - exterior mirror	271
5.2	Removing and installing mirror glass, up to 2010	275
5.3	Removing and installing mirror glass, from 2010	276
5.4	Removing and installing auxiliary panoramic mirror, up to 2010	278
5.5	Removing and installing auxiliary panoramic mirror, from 2010	279
5.6	Removing and installing mirror housing	280
5.7	Removing and installing exterior mirror (electrically adjustable)	281
<b>6</b>	<b>Wheel housing liner</b>	<b>283</b>
6.1	Tool	283
6.2	Assembly overview - front wheel housing liner	283
6.3	Removing and installing front wheel housing liner	285
<b>7</b>	<b>Lettering and emblems</b>	<b>286</b>
7.1	Assembly overview - rear emblem and trim panel	286
7.2	Dimensions, lettering on rear	286
7.3	Removing and installing rear emblem and trim panel	289
7.4	Wing lettering - Crafter 4MOTION with Achleitner all-wheel drive	291
<b>8</b>	<b>Special add-on parts</b>	<b>292</b>
8.1	Wheel arch extensions - Crafter 4MOTION with Achleitner all-wheel drive	292
8.2	Repair instructions	292
8.3	Assembly overview - wheel housing extensions	293
8.4	Removing and installing front bumper cover extension	294
8.5	Removing and installing wing extension	296



8.6	Removing and installing wing protective side moulding extension .....	299
<b>9</b>	<b>Towing bracket</b> .....	<b>302</b>
9.1	Tools .....	302
9.2	Installation instructions .....	302
9.3	Assembly overview - towing brackets .....	302
9.4	Removing and installing rigid towing bracket .....	305
9.5	Installation notes .....	306
<b>10</b>	<b>Spare wheel bracket</b> .....	<b>307</b>
10.1	Tools .....	307
10.2	Assembly overview - spare wheel bracket .....	307
10.3	Removing and installing spare wheel bracket .....	308
<b>11</b>	<b>Mudflap</b> .....	<b>310</b>
11.1	Tool .....	310
11.2	Front mud flap .....	310
11.3	Rear mud flap .....	313
<b>12</b>	<b>Load floor body</b> .....	<b>315</b>
12.1	Tools .....	315
12.2	Contact corrosion .....	316
12.3	Assembly overview - load floor body .....	316
12.4	Assembly overview – luggage compartment floor and sideboard .....	318
12.5	Sideboard .....	319
12.6	Skid plate .....	321
12.7	Rear skid plate .....	323
12.8	Rear wing .....	324