



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	2
1.3 Type plate	3
1.4 Vehicle data sticker	3
2 Safety information	4
3 Moulded foam inserts	5
4 Galvanised body parts	7
5 Laser welding	8
6 Gaps/shut lines	9
6.1 Body, front	9
6.2 Body, centre	11
6.3 Body centre, cab door	12
6.4 Body - rear	13
7 Body dimensions	15
7.1 Floor panel - front	15
7.2 Floor panel - rear	16
7.3 Body, front	17
7.4 Body, centre	20
7.5 Body - rear	24
8 Alignment jig	28
8.1 Tools	28
8.2 Converting the alignment jig	28
8.3 Support trolley VAS 6404 set-up	30
8.4 Front repairs	31
8.5 Rear repairs	34
8.6 Overview of alignment bracket positions	37
9 Body builder guidelines	44
9.1 Planning the bodies	44
9.2 Technical limit values for planning	45
9.3 Prevention of damage	48
9.4 Modifications to the base vehicle	49
9.5 Body designs	64
9.6 Electrical/electronic system	78
50 - Body - front	81
1 Renewing reinforcing for front wheel housing	81
1.1 Removing	81
1.2 Installing	83
2 Renewing front wheel housing (subpart)	85
2.1 Removing	85
2.2 Installing	87
3 Renewing front longitudinal member complete	90
3.1 Removing	90
3.2 Installing	94
4 Renewing front longitudinal member (part section)	98
4.1 Removing	98
4.2 Installing	99
51 - Body - centre	102



1	Renewing the GRP high roof	102
1.1	Removing	103
1.2	Installing	106
2	Renewing front section of high roof	117
2.1	Removing	117
2.2	Installing	118
3	Renewing front roof panelling (high roof with and without sliding door for load compartment)	122
3.1	Removing (vehicles with and without sliding door for load compartment)	122
3.2	Installing (vehicles with and without sliding door for load compartment)	126
4	Renewing rear roof panelling (high roof with no sliding door for load compartment)	130
4.1	Removing	130
4.2	Installing	133
5	Renewing rear roof panelling (high roof with sliding door for load compartment)	137
5.1	Removing	137
5.2	Installing	139
6	Renewing front roof panelling (flat roof)	142
6.1	Removing	142
6.2	Installing	144
7	Renewing rear roof panelling (flat roof, double cab)	147
7.1	Removing	147
7.2	Installing	149
8	Renewing middle roof panelling (high roof with no sliding door for load compartment)	151
8.1	Removing	151
8.2	Installing	154
9	Renewing middle roof panelling (high roof and flat roof with sliding door for load compartment)	157
9.1	Removing	157
9.2	Installing	159
10	Renewing front roof frame (only installed in GRP high roof)	162
10.1	Removing	162
10.2	Installing	163
11	Renewing front cross member for roof	164
11.1	Removing	164
11.2	Installing	165
12	Renewing roof reinforcement (high roof)	166
12.1	Removing	166
12.2	Installing	167
13	Renewing rear outer roof cross member	169
13.1	Removing	169
13.2	Installing	170
14	Renewing rear roof inner cross member	172
14.1	Removing	172
14.2	Installing	173
15	Renewing rear window frame, complete (dropside and double cab)	175
15.1	Removing	175
15.2	Installing	177
16	Renewing rear window frame, part section (dropside and double cab)	190
16.1	Removing	190
16.2	Installing	192
17	Renewing middle section of high roof	202
17.1	Removing	202
17.2	Installing	203



18	Renewing cowl panel	206
18.1	Removing	206
18.2	Installing	207
19	Renewing rear section of high roof	209
19.1	Removing	209
19.2	Installing	210
20	Renewing complete rear side panel (flat roof, panel van and Kombi with no sliding door for load compartment)	212
20.1	Removing	212
20.2	Installing	215
21	Renewing complete rear side panel (high roof, panel van and Kombi with no sliding door for load compartment)	222
21.1	Removing	222
21.2	Installing	224
22	Renewing rear side panel (part section, Kombi with no sliding door for load compartment)	229
22.1	Removing	229
22.2	Installing	231
23	Renewing front side panel lower part	235
23.1	Removing	235
23.2	Installing	236
24	Renewing rear lower side panel before wheel arch (vehicles with no sliding door for load compartment)	238
24.1	Removing	238
24.2	Installing	240
25	Renewing rear lower side panel after wheel arch	243
25.1	Removing	243
25.2	Installing	244
26	Renewing inner part of side panel (part section, Kombi)	247
26.1	Removing	247
26.2	Installing	250
27	Renewing complete inner part of side panel (panel van and Kombi)	256
27.1	Removing	256
27.2	Installing	259
28	Renewing inner front side panel at bottom	264
28.1	Removing	264
28.2	Installing	267
29	Renewing complete front door frame (high roof, panel van and Kombi)	270
29.1	Removing	271
29.2	Installing	273
30	Renewing complete front side panel (high roof, panel van and Kombi)	277
30.1	Removing	277
30.2	Installing	279
31	Renewing front side panel (part section, Kombi)	282
31.1	Removing	282
31.2	Installing	284
32	Renewing complete rear side panel (flat roof, panel van and Kombi with sliding door for load compartment)	288
32.1	Removing	288
32.2	Installing	291
33	Renewing complete rear side panel (high roof, panel van and Kombi with sliding door for load compartment)	298
33.1	Removing	298
33.2	Installing	300



34	Renewing rear side panel (part section, Kombi with sliding door for load compartment) ..	305
34.1	Removing	305
34.2	Installing	307
35	Renewing rear lower side panel before wheel arch (vehicles with sliding door for load compartment)	311
35.1	Removing	311
35.2	Installing	312
36	Renewing hinge pillar (A-pillar) (part section)	315
36.1	Removing	316
36.2	Installing	318
37	Renewing hinge pillar (A-pillar) reinforcement	322
37.1	Removing	322
37.2	Installing	323
38	Renewing lock column, C-pillar, double cab	325
38.1	Removing	325
38.2	Installing	327
39	Renewing front step complete	330
39.1	Removing	330
39.2	Installing	332
40	Renewing step of load compartment sliding door completely	338
40.1	Removing	338
40.2	Installing	341
41	Renewing rear step (double cab)	346
41.1	Removing	346
41.2	Installing	347
42	Renewing middle pillar (B-pillar) (part section, vehicles with sliding door for load compartment)	350
42.1	Removing	350
42.2	Installing	352
43	Renewing middle pillar (B-pillar) (part section, vehicles without sliding door for load compartment)	354
43.1	Removing	355
43.2	Installing	356
44	Renewing middle pillar (B-pillar) reinforcement (vehicles with sliding door for load compartment)	359
44.1	Removing	359
44.2	Installing	360
45	Renewing outer side member	362
45.1	Removing	362
45.2	Installing	364
46	Renewing lower part of door frame (vehicle with no sliding door for load compartment) ..	366
46.1	Removing	366
46.2	Installing	368
47	Renewing lower part of door frame (vehicle with sliding door for load compartment)	371
47.1	Removing	371
47.2	Installing	373
48	Renewing rear side member (double cab)	375
48.1	Removing	375
48.2	Installing	376
49	Renewing side member section for sliding door frame - part section	378
49.1	Removing	378
49.2	Installing	380
50	Renewing rear inner side member (double cab)	382



50.1	Removing	382
50.2	Installing	384
51	Renewing C-pillar reinforcement (vehicles with no sliding door for load compartment)	386
51.1	Removing	386
51.2	Installing	388
52	Renewing C-pillar reinforcement (vehicles with sliding door for load compartment)	391
52.1	Removing	391
52.2	Installing	392
53	Renewing C-pillar reinforcement (double cab)	395
53.1	Removing	395
53.2	Installing	396
53 - Body - rear		398
1	Renewing rear apron	398
1.1	Removing	398
1.2	Installing	400
2	Renewing rear crash box	402
2.1	Removing	402
2.2	Installing	402
3	Renewing rear lock carrier	404
3.1	Removing	404
3.2	Installing	407
4	Renewing rear panel upper corner piece complete	411
4.1	Removing	411
4.2	Installing	414
5	Renewing rear panel lower outer corner piece	419
5.1	Removing	419
5.2	Installing	420
6	Renewing rear lower door hinge mounting	423
6.1	Removing	423
6.2	Installing	424
7	Renewing bearing bracket for rear leaf spring mounting (panel van and Kombi)	426
7.1	Removing	426
7.2	Installing	428
8	Renewing bearing bracket for rear leaf spring mounting (dropside body)	431
8.1	Removing	431
8.2	Installing	433
9	Renewing rear cross panel carrier	438
9.1	Removing	438
9.2	Installing	440
10	Renewing rear inner wheel housing liner	443
10.1	Removing	443
10.2	Installing	444
11	Renewing rear outer wheel housing liner	446
11.1	Removing	446
11.2	Installing	447
12	Repairing hinge bearing for drop side	450
12.1	Removing	450
12.2	Installing	451
13	Renewing longitudinal member	453