



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	2
2.1 Allocation gearbox - engine, gear ratios and capacities	2
3 Repair notes	6
3.1 General repair instructions	6
30 - Clutch	8
1 Clutch operation	8
1.1 Assembly overview - clutch release mechanism	8
1.2 Removing and installing mounting bracket	8
1.3 Removing and installing clutch master cylinder	10
1.4 Removing and installing over-centre spring	11
1.5 Bleeding clutch mechanism	11
2 Clutch	13
2.1 Assembly overview - clutch	13
2.2 Removing and installing clutch	14
2.3 Resetting adjusting ring of self-adjusting pressure plate	16
34 - Controls, housing	19
1 Selector mechanism	19
1.1 Assembly overview - selector mechanism	19
1.2 Removing and installing selector cables	20
1.3 Adjusting selector mechanism	21
1.4 Removing and installing reversing light switch F4	22
2 Removing and installing gearbox	24
2.1 Removing gearbox	24
2.2 Installing gearbox	29
2.3 Removing gearbox, Crafter 4MOTION with Achleitner four-wheel drive	30
2.4 Installing gearbox, Crafter 4MOTION with Achleitner four-wheel drive	35
2.5 Specified torques for gearbox	36
3 Assembly mountings	38
3.1 Removing and installing gearbox mounting	38
3.2 Removing and installing gearbox mounting, Crafter 4MOTION with Achleitner four-wheel drive	40
3.3 Removing and installing gearbox carrier (Crafter 4MOTION with Achleitner all-wheel drive)	41
4 Dismantling and assembling gearbox	44
4.1 Schematic overview - gearbox	44
4.2 Assembly overview - gearbox	45
4.3 Assembly overview - clutch housing and input shaft	45
4.4 Assembly overview - gearbox housing, layshaft, output shaft and selector unit	47
4.5 Assembly overview - selector unit	49
4.6 Removing and installing selector unit	49
4.7 Dismantling and assembling gearbox	50
5 Gearbox housing, clutch housing	62
5.1 Assembly overview - gearbox housing	62
5.2 Assembly overview - clutch housing	63
5.3 Repairing gearbox housing	64
5.4 Repairing clutch housing	67
6 Gear oil	72



6.1	Checking gear oil level	72
6.2	Draining and filling gear oil	72
35	Gears, shafts	74
1	Input and output shafts	74
1.1	Assembly overview - input shaft and output shaft	74
1.2	Dismantling and assembling output shaft	77
1.3	Renewing input shaft seal	88
1.4	Renewing output shaft seal	90
2	Layshaft	93
2.1	Assembly overview - layshaft	93
2.2	Dismantling and assembling layshaft	95
3	Reverse gear wheel	101
3.1	Assembly overview - reverse gear wheel	101
3.2	Removing and installing reverse gear wheel shaft with reverse gear wheel	102