



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when working on charge air system	2
1.3 Safety regulations for working on fuel supply	2
1.4 Safety precautions when working on SCR system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety measures when working on vehicles with a start/stop system	4
1.7 Safety precautions when working on fuel system	4
2 Identification	5
2.1 Engine number/engine data	5
3 Repair instructions	7
3.1 Rules for cleanliness when working on fuel supply system	7
3.2 Rules for cleanliness and instructions for working on fuel system	7
3.3 Rules for cleanliness during work on fuel system	9
3.4 Rules for cleanliness when working on the SCR system	9
3.5 General notes on the lubrication system	10
3.6 General notes on cooling system	10
3.7 General notes on fuel system	11
3.8 Notes on hose connections with screw-type clips	12
10 - Removing and installing engine	13
1 Removing and installing engine	13
1.1 Removing engine	13
1.2 Securing engine on engine and gearbox support	22
1.3 Removing engine, Crafter 4MOTION with Achleitner four-wheel drive	23
1.4 Installing engine	32
2 Assembly mountings	33
2.1 Assembly overview - assembly mountings	33
2.2 Supporting engine in installation position	34
13 - Crankshaft group	37
1 Cylinder block (pulley end)	37
1.1 Assembly overview - poly V-belt drive	37
1.2 Assembly overview - cylinder block (pulley end)	41
1.3 Assembly overview - sealing flange, belt pulley end	43
1.4 Removing and installing poly-V belt	44
1.5 Removing and installing tensioner for poly V-belt	46
1.6 Removing and installing poly V-belt for viscous fan	47
1.7 Removing and installing vibration damper	50
1.8 Removing and installing bracket for ancillaries	51
1.9 Removing and installing bracket with belt pulley	52
1.10 Renewing crankshaft oil seal - belt pulley end	53
1.11 Removing and installing sealing flange on pulley end	55
2 Cylinder block, gearbox end	60
2.1 Assembly overview - cylinder block, gearbox end	60
2.2 Removing and installing flywheel	61
2.3 Removing and installing sealing flange on gearbox side	62
3 Crankshaft	71
3.1 Assembly overview - crankshaft	71
3.2 Renewing needle bearing in crankshaft	72
3.3 Crankshaft dimensions	73



3.4	Measuring axial clearance of crankshaft	73
3.5	Measuring radial clearance of crankshaft	74
4	Auxiliary drive	76
4.1	Assembly overview - ancillary drive	76
4.2	Retrofitting auxiliary drive (genuine parts set)	81
4.3	Removing and installing poly V-belt for auxiliary drive	84
5	Pistons and conrods	85
5.1	Assembly overview - pistons and conrods	85
5.2	Measuring piston projection at TDC	86
5.3	Checking pistons and cylinder bores	88
5.4	Separating new conrod	90
5.5	Checking radial clearance of conrods	91
5.6	Installation position of bearing shells	91
15 - Cylinder head, valve gear	92	
1	Cylinder head	92
1.1	Assembly overview - cylinder head	92
1.2	Assembly overview - cylinder head cover	95
1.3	Removing and installing cylinder head	97
1.4	Removing and installing cylinder head cover	106
1.5	Removing and installing injector seals	111
1.6	Removing and installing vacuum pump	112
1.7	Checking compression	114
2	Toothed belt drive	116
2.1	Assembly overview - toothed belt	116
2.2	Removing and installing toothed belt	118
3	Valve gear	129
3.1	Assembly overview - valve gear	129
3.2	Removing and installing valve stem seals	131
3.3	Renewing valve stem seals with cylinder head removed	134
3.4	Removing and installing camshaft	137
3.5	Measuring axial play of camshaft	144
3.6	Measuring radial play of camshaft	145
3.7	Removing and installing camshaft oil seal	145
3.8	Checking hydraulic compensation elements	149
4	Inlet and exhaust valves	151
4.1	Reworking valve seats	151
4.2	Checking valve guides	151
4.3	Checking valves	152
4.4	Valve dimensions	152
17 - Lubrication	153	
1	Sump, oil pump	153
1.1	Assembly overview - sump/oil pump	153
1.2	Removing and installing sump	155
1.3	Removing and installing oil pump	158
1.4	Engine oil:	159
1.5	Removing and installing oil level and oil temperature sender G266	159
1.6	Measuring oil consumption	160
2	Oil filter, oil pressure switch	161
2.1	Assembly overview - oil filter housing with engine oil cooler	161
2.2	Removing and installing engine oil cooler	162
2.3	Removing and installing oil filter housing	164
2.4	Removing and installing oil pressure switch F1	165
2.5	Checking oil pressure switch F1	166



2.6	Checking oil pressure	168
3	Oil circuit	170
3.1	Removing and installing oil supply line, single turbo	170
3.2	Removing and installing oil supply line, bi-turbo	170
19 - Cooling		175
1	Cooling system/coolant	175
1.1	Connection diagram - coolant hoses	175
1.2	Draining and adding coolant	184
1.3	Checking cooling system for leaks	191
2	Coolant pump, regulation of cooling system	193
2.1	Assembly overview - coolant pump, thermostat	193
2.2	Assembly overview - electric coolant pump	194
2.3	Removing and installing coolant pump	194
2.4	Removing and installing 4/2-way valve with thermostat	195
2.5	Removing and installing coolant temperature sender G62	197
2.6	Removing and installing radiator outlet coolant temperature sender G83	198
2.7	Removing and installing coolant flange	199
2.8	Removing and installing Y-thermostat	200
2.9	Removing and installing coolant circulation pump V50	202
2.10	Removing and installing 3/2-way valve, Euro 6 vehicles	203
3	Coolant pipes/coolant hoses	205
3.1	Assembly overview - coolant pipe/coolant hose	205
3.2	Removing and installing coolant pipe with coolant hose	206
4	Radiator, radiator fan	210
4.1	Assembly overview - radiator/radiator fan	210
4.2	Assembly overview - viscous fan	211
4.3	Removing and installing viscous fan	212
4.4	Removing and installing cowling	214
4.5	Removing and installing radiator	215
21 - Turbocharging/supercharging		218
1	Exhaust turbocharger	218
1.1	Assembly overview - turbocharger, single turbo	218
1.2	Assembly overview - turbocharger, bi-turbo	221
1.3	Removing and installing turbocharger, single turbo	225
1.4	Removing and installing turbocharger, bi-turbo	229
1.5	Removing and installing turbocharger, Crafter 4MOTION with Achleitner four-wheel drive	236
1.6	Assembly overview - turbocharger, bi-turbo, dismantling	243
1.7	Renewing gasket between bi-turbo turbine housings	245
1.8	Removing and installing regulating flap potentiometer G584	248
1.9	Renewing vacuum unit for turbocharger	253
2	Charge air system	260
2.1	Assembly overview - charge air system	260
2.2	Removing and installing charge air cooler	261
2.3	Removing and installing charge air pressure sender G31 / intake air temperature sender G42	262
2.4	Removing and installing charge air temperature sender after charge air cooler G811 , engines compliant with EU6 standard	263
2.5	Removing and installing charge pressure control solenoid valve N75	263
2.6	Removing and installing exhaust gas flap valve N220	264
2.7	Removing and installing charge air pipe	265
2.8	Checking charge air system for leaks	266
23 - Mixture preparation - injection		270



1	Injection system	270
1.1	Schematic overview - fuel system	270
1.2	Overview of fitting locations - injection system	272
1.3	Checking fuel system for leaks	276
2	Vacuum system	277
2.1	Connection diagram - vacuum system	277
3	Intake manifold	279
3.1	Assembly overview - intake manifold	279
3.2	Removing and installing intake manifold	280
3.3	Removing and installing throttle valve module J338	283
4	Air filter	284
4.1	Assembly overview - air filter housing	284
4.2	Removing and installing air filter housing	285
5	Injectors/high-pressure accumulator (rail)	286
5.1	Assembly overview - injectors	286
5.2	Removing and installing injectors	288
5.3	Adapting correction values for injectors	293
5.4	Testing injectors	294
5.5	Testing jammed-open injectors	295
5.6	Checking return flow rate of injectors with engine running	296
5.7	Checking return flow rate of injectors at starter speed	298
5.8	Removing and installing fuel rail	300
5.9	Removing and installing high-pressure lines	303
6	Senders and sensors	307
6.1	Removing and installing fuel pressure regulating valve N276	307
6.2	Checking fuel pressure regulating valve N276	309
6.3	Removing and installing fuel pressure sender G247	310
6.4	Removing and installing air mass meter G70	313
7	Engine control unit	314
7.1	Removing and installing engine (motor) control unit J623	314
7.2	Removing and installing engine (motor) control unit J623 with protective housing	314
8	High-pressure pump	316
8.1	Assembly overview - high-pressure pump	316
8.2	Removing and installing high-pressure pump	317
8.3	Initial fuel filling after installation of the high-pressure pump	320
8.4	Checking high-pressure pump	320
9	Lambda probe	323
9.1	Removing and installing Lambda probe	323
9.2	Removing and installing lambda probe (Crafter 4MOTION with Achleitner all-wheel drive)	324
26 - Exhaust system	326	
1	Exhaust pipes and silencers	326
1.1	Assembly overview - silencers	326
1.2	Assembly overview – SCR catalytic converters (vehicles compliant with EU6 standard)	328
1.3	Assembly overview - short silencer, Crafter 4MOTION with Achleitner four-wheel drive	329
1.4	Assembly overview - long silencer, Crafter 4MOTION with Achleitner four-wheel drive	330
1.5	Checking exhaust system for leaks	330
1.6	Removing and installing rear silencer	331
1.7	Removing and installing SCR catalytic converters (vehicles compliant with EU6 standard)	331
1.8	Removing and installing rear silencer, Crafter 4MOTION with Achleitner four-wheel drive	333
1.9	Shortening exhaust pipe and bracket, Crafter 4MOTION with Achleitner four-wheel drive	335



1.10	Aligning exhaust system free of stress, Crafter 4MOTION with Achleitner four-wheel drive	337
2	Exhaust gas cleaning	338
2.1	Assembly overview - emission control	338
2.2	Removing and installing particulate filter	339
2.3	Removing and installing particulate filter, Crafter 4MOTION with Achleitner four-wheel drive	342
3	SCR system (selective catalytic reduction)	346
3.1	Assembly overview - tank for reducing agent	346
3.2	Removing and installing reducing agent tank	348
3.3	Removing and installing reducing agent supply line	350
3.4	Removing and installing injector for reduction agent N474	351
3.5	Removing and installing control unit for reducing-agent heater J891	352
3.6	Removing and installing delivery unit for reducing agent metering system GX19	353
3.7	Draining reducing agent tank	356
3.8	Removing and installing filler neck for reducing agent	357
3.9	Removing and installing NOx sender G295 / control unit for NOx sender J583	359
3.10	Removing and installing NOx sender 2 G687 / control unit for NOx sender 2 J881	361
3.11	Removing and installing exhaust gas temperature sender 2 G448	363
4	Exhaust gas recirculation	366
4.1	Assembly overview - exhaust gas recirculation	366
4.2	Removing and installing exhaust gas recirculation valve N18	367
4.3	Removing and installing exhaust gas recirculation cooler	368
4.4	Checking exhaust gas recirculation cooler for leaks	370
4.5	Removing and installing pump for exhaust gas recirculation cooler V400	373
4.6	Removing and installing exhaust gas recirculation temperature sensor G98	374
28 - Glow plug system	376	
1	Glow plug system	376
1.1	Removing and installing glow plug	376
1.2	Checking glow plug system	378
1.3	Removing and installing Hall sender G40	378
1.4	Removing and installing engine speed sender G28	379