



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions during work on fuel system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	6
3.1 General information	6
4 Repair notes	7
4.1 Rules for cleanliness	7
20 - Fuel supply system	9
1 Procedure should vehicle be misfueled	9
1.1 Procedure should vehicle be misfueled	9
2 Fuel	14
2.1 Assembly overview - fuel tank	14
2.2 Removing and installing fuel tank	15
2.3 Emptying fuel tank	17
3 Fuel delivery unit, fuel gauge sender	19
3.1 Removing and installing fuel delivery unit, fuel gauge sender	19
3.2 Removing and installing fuel gauge sender G	21
4 Plug-in connectors	22
4.1 Separating plug-in connectors	22
5 Fuel filter	26
5.1 Assembly overview - fuel filter	26
5.2 Removing and installing fuel filter	27
6 Accelerator pedal	29
6.1 Assembly overview - accelerator module	29
6.2 Removing and installing accelerator module with accelerator position sender G79 / G185	30
7 Fuel pump	31
7.1 Checking fuel system pressurisation pump G6	31