



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on high-voltage system	1
1.4 Safety precautions when working in vicinity of high-voltage components	2
1.5 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Allocation of PR number - brakes	3
3 Repair instructions	4
3.1 General information	4
3.2 Rules for cleanliness	4
3.3 Rules for cleanliness when working on high-voltage system	5
3.4 General repair instructions	5
3.5 Checking vacuum system	5
3.6 Gaskets and seals	6
3.7 Nuts and bolts	6
3.8 Routing and attachment of lines	6
3.9 Contact corrosion	6
4 Technical data	8
4.1 Technical data for brakes	8
5 Hazard classification for high-voltage system	10
6 Brake test	17
6.1 General information	17
6.2 Checking vehicles with front-wheel drive	17
6.3 Checking vehicles with rear-wheel drive	17
6.4 Checking vehicles with all-wheel drive	17
6.5 Checking parking brake	18
45 - Anti-lock brake system	19
1 General information	19
1.1 Repair instructions for repair work on ABS	19
2 Overview of fitting locations	22
2.1 Overview of fitting locations - ABS/ESP	22
3 Control unit and hydraulic unit	24
3.1 Assembly overview - control unit and hydraulic unit	24
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	25
3.3 Removing and installing ABS control unit J104 without ABS hydraulic unit N55	30
3.4 Connecting brake lines to hydraulic unit	34
4 Sensors	36
4.1 Assembly overview - speed sensor on front axle	36
4.2 Assembly overview - speed sensor on rear axle	37
4.3 Removing and installing speed sensors on front axle G45 / G47	38
4.4 Removing and installing speed sensors on rear axle G44 / G46	39
46 - Brakes - mechanism	41
1 Front brakes	41
1.1 Assembly overview - front brakes	41
1.2 Removing and installing brake pads/linings	42
1.3 Removing and installing brake caliper	45
1.4 Removing and installing brake carrier	47
1.5 Removing and installing brake disc	48



2	Rear brakes	50
2.1	Assembly overview - rear brakes	50
2.2	Removing and installing brake pads/linings	53
2.3	Removing and installing brake caliper	58
2.4	Removing and installing brake carrier	64
2.5	Removing and installing brake disc	66
2.6	Removing and installing brake shoes	68
2.7	Adjusting basic setting/clearance of drum brake	71
3	Parking brake	72
3.1	Assembly overview - parking brake	72
3.2	Removing and installing handbrake lever	76
3.3	Adjusting parking brake	77
3.4	Removing and installing front brake cable	80
3.5	Removing and installing front brake cable, e-Crafter and e-TGE	81
3.6	Removing and installing rear brake cable	83
4	Brake pedal	88
4.1	Assembly overview - brake pedal	88
4.2	Removing and installing mounting bracket	89
4.3	Separating brake pedal from brake servo	92
4.4	Connecting brake pedal to brake servo	93
4.5	Removing and installing brake pedal	93
47	Brakes - hydraulics	94
1	Front brake caliper	94
1.1	Assembly overview - front brake caliper	94
1.2	Removing and installing brake caliper piston	94
2	Rear brake caliper	98
2.1	Assembly overview - rear brake caliper	98
2.2	Removing and installing brake caliper piston	99
3	Brake servo and brake master cylinder	106
3.1	Assembly overview - brake servo/brake master cylinder	106
3.2	Removing and installing brake light switch F	107
3.3	Removing and installing brake servo	107
3.4	Removing and installing brake master cylinder	108
3.5	Removing and installing brake fluid reservoir	111
4	Vacuum system	114
4.1	Assembly overview - vacuum pump V22 , e-Crafter and e-TGE	114
4.2	Assembly overview - vacuum pump	115
4.3	Checking non-return valve	115
4.4	Removing and installing non-return valve	115
4.5	Removing and installing vacuum sender G608	116
4.6	Checking vacuum system	116
4.7	Removing and installing vacuum pump V22 , e-Crafter or e-TGE	120
4.8	Removing and installing vacuum pump V22 bracket	121
5	Brake lines	122
5.1	Repairing brake lines	122
6	Hydraulic system	127
6.1	General notes on brake fluid	127
6.2	Pre-bleeding hydraulic system	128
6.3	Bleeding hydraulic system following standard procedure	128
6.4	Subsequent bleeding of hydraulic system	129
6.5	Leakage test	130