



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working in the vicinity of high-voltage components	1
1.4 Safety precautions when working on a high-voltage system	2
2 Repair instructions	3
2.1 Contact corrosion	3
2.2 Routing and attachment of lines	3
3 Hazard classification for the high-voltage system	4
4 Battery	11
4.1 Battery - general notes	11
4.2 Types of battery	11
27 - Starter, current supply, CCS	12
1 Battery	12
1.1 Assembly overview - battery	12
1.2 Checking battery	15
1.3 Charging battery	15
1.4 Disconnecting and connecting battery	16
1.5 Removing and installing battery	19
1.6 Removing and installing battery tray	23
1.7 Disconnecting battery earth wire, battery in front of left front seat, under floor	25
1.8 Removing and installing earth wire with battery monitor control unit J367	26
1.9 Removing and installing earth wire with battery monitor control unit 2 J934	27
1.10 Adapting battery monitor control unit J367	28
1.11 Adapting battery monitor control unit 2 J934	29
1.12 Removing and installing battery isolation relay J7	29
2 Jump-start connection	31
2.1 Assembly overview - jump-start connection	31
2.2 Removing and installing jump-start connection TV32	31
3 Alternator	34
3.1 Assembly overview - alternator	34
3.2 Removing and installing alternator	35
3.3 Checking alternator	37
3.4 Checking poly V-belt	37
3.5 Removing and installing poly V-belt pulley	38
3.6 Removing and installing voltage regulator	42
4 Starter motor	44
4.1 Assembly overview - starter	44
4.2 Removing and installing starter motor	45
5 Cruise control system (CCS)	50
6 Start/stop system	51
6.1 General description - start/stop system	51
6.2 Overview of fitting locations - start/stop system	51
7 Adaptive cruise control	52
7.1 Overview of fitting locations - adaptive cruise control	52
7.2 Removing and installing adaptive cruise control unit J428	53
7.3 Calibrating adaptive cruise control	53
90 - Gauges, instruments	54



1	Dash panel insert	54
1.1	Assembly overview - dash panel insert	54
1.2	Removing and installing dash panel insert KX2	54
1.3	Removing and installing ambient temperature sensor G17	56
2	Horn	57
2.1	Assembly overview - horn	57
2.2	Removing and installing treble horn H2 and bass horn H7	57
2.3	Removing and installing reverse warning beeper H29	59
3	Tachograph	60
3.1	Removing and installing tachograph G24	60
3.2	Removing and installing tachograph sender G75	61
92	- Windscreen wash/wipe system	64
1	windscreen wiper system	64
1.1	Assembly overview - windscreen wiper system	64
1.2	Moving wipers to service position	65
1.3	Removing and installing wiper blade	65
1.4	Removing and installing wiper arms	66
1.5	Adjusting wiper arms	67
1.6	Removing and installing wiper motor	68
1.7	Renewing wiper motor	69
1.8	Removing and installing air humidity, rain and light sensor G823	71
2	Windscreen washer system	74
2.1	Overview of fitting locations - windscreen washer system	74
2.2	Assembly overview - washer fluid reservoir	75
2.3	Removing and installing washer fluid reservoir	76
2.4	Removing and installing windscreen washer fluid level sender G33	79
2.5	Removing and installing washer pump V5	79
2.6	Removing and installing washer jets	80
2.7	Adjusting spray jets	81
3	Rear window wiper system	82
3.1	Assembly overview - rear window wiper system	82
3.2	Removing and installing wiper blade	83
3.3	Removing and installing wiper arm	83
3.4	Adjusting wiper arm	84
3.5	Removing and installing rear window wiper motor V92 / V93 in rear wing door	85
4	Rear window washer system	87
4.1	Overview of fitting locations - rear window washer system	87
4.2	Removing and installing washer fluid reservoir	88
4.3	Removing and installing rear window washer pump	88
4.4	Removing and installing washer jet	88
4.5	Adjusting spray jet	88
5	Headlight washer system	89
5.1	Overview of fitting locations - headlight washer system	89
5.2	Removing and installing washer fluid reservoir	90
5.3	Removing and installing headlight washer system pump V11	90
5.4	Removing and installing pop-up cylinder	91
5.5	Removing and installing washer jets	92
5.6	Adjusting spray jets	92
5.7	Bleeding headlight washer system	92
6	Washer fluid lines	93
6.1	Repairing washer fluid lines	93
6.2	Repairing hose couplings	93
94	- Lights, bulbs, switches - exterior	94



1	Headlights	94
1.1	Assembly overview - headlight	94
1.2	Removing and installing headlight	96
1.3	Adjusting headlights	98
1.4	Adjusting headlight installation position	98
1.5	Removing and installing front turn signal bulb M5 / M7	99
1.6	Removing and installing headlight dipped beam bulb M29 / M31	101
1.7	Removing and installing headlight main beam bulb M30 / M32	103
1.8	Removing and installing side light bulb M1 / M3	104
1.9	Removing and installing daytime running light bulb L174 / L175	105
1.10	Removing and installing headlight range control motor V48 / V49	105
1.11	Removing and installing output module for headlight J667 / J668	106
1.12	Removing and installing LED modules for daytime running light and side light L176 / L177	108
1.13	Converting headlights from driving on right to driving on left	111
2	Fog lights	112
2.1	Assembly overview - fog lights	112
2.2	Removing and installing fog light	112
2.3	Removing and installing fog light bulb L22 / L23	113
2.4	Adjusting fog lights	114
3	Side marker light	115
3.1	Overview of fitting locations - side marker lights	115
3.2	Removing and installing side marker lights	117
4	Lights in exterior mirror	124
4.1	Assembly overview - lights in exterior mirror	124
4.2	Removing and installing turn signal	124
5	Tail lights	126
5.1	Assembly overview - tail lights in body	126
5.2	Removing and installing tail light MX3 / MX4	131
5.3	Removing and installing bulb carrier, Crafter, up to May 2017	135
5.4	Removing and installing tail light bulb M2 / M4	136
5.5	Removing and installing brake light bulb M9 / M10	139
5.6	Removing and installing reversing light bulb M16 / M17	142
5.7	Removing and installing turn signal bulb M6 / M8	145
5.8	Removing and installing rear fog light bulb L46 / L47	148
5.9	Removing and installing bulb for end-outline marker lamp M78 / M79	151
6	High-level brake light	154
6.1	Assembly overview - high-level brake light	154
6.2	Removing and installing high-level brake light	155
6.3	Removing and installing bulb for high-level brake light M25	156
7	Number plate light	157
7.1	Removing and installing number plate light X4 / X5	157
7.2	Removing and installing bulb for number plate light X4 / X5	159
8	Steering column switch module	161
8.1	Assembly overview - steering column switch module	161
8.2	Removing and installing steering column switch module	163
8.3	Removing and installing steering column electronics control unit J527	164
8.4	Removing and installing base for steering column combination switch	166
8.5	Removing and installing steering column combination switch	166
8.6	Removing and installing windscreen wiper switch E	167
8.7	Removing and installing turn signal switch E2	168
8.8	Removing and installing rear wiper switch E34	168
8.9	Removing and installing intermittent wiper regulator E38	168
8.10	Removing and installing ignition/starter switch	168
8.11	Removing and installing lock cylinder	169



8.12	Removing and installing steering lock housing	171
8.13	Removing and installing ignition key withdrawal lock solenoid N376	172
9	Parking aid	173
9.1	Overview of fitting locations - parking aid system	173
9.2	Removing and installing parking aid control unit J446	177
9.3	Removing and installing front parking aid warning buzzer H22	178
9.4	Removing and installing rear parking aid warning buzzer H15	178
9.5	Removing and installing front parking aid senders G252 / G253 / G254 / G255	179
9.6	Removing and installing side parking aid sender 2 G956 / G957 / G958 / G959	179
9.7	Removing and installing rear parking aid senders G203 / G204 / G205 / G206	180
10	Park assist steering	181
10.1	Assembly overview - park assist steering	181
10.2	Removing and installing park assist steering control unit J791	181
10.3	Removing and installing front park assist steering sender G568 / G569	182
10.4	Removing and installing rear park assist steering sender G716 / G717	182
11	Blind Spot Monitor	183
11.1	Assembly overview - blind spot monitor	183
11.2	Removing and installing blind spot monitor control unit J1086 / J1087	183
11.3	Removing and installing bracket for blind spot monitor control unit	184
11.4	Removing and installing blind spot monitor warning lamp in exterior mirror K303 / K304	185
11.5	Calibrating blind spot monitor	186
12	Towing bracket	192
12.1	Assembly overview - towing bracket socket	192
12.2	Removing and installing trailer socket U10	192
12.3	Removing and installing trailer detector control unit J345	193
96 - Lights, bulbs, switches - interior	195	
1	Lights	195
1.1	Overview of fitting locations - lights in dash panel	195
1.2	Overview of fitting locations - lights in roof trim	197
1.3	Removing and installing entry light W92 / W93	197
1.4	Renewing bulb for entry light W92 / W93	198
1.5	Removing and installing glove compartment light W6	199
1.6	Replacing bulb for glove compartment light W6	200
1.7	Removing and installing front interior light W1	200
1.8	Renewing front interior light bulb W1	201
1.9	Removing and installing front passenger side airbag deactivated warning lamp K145	202
1.10	Removing and installing interior lights W16 / W17 / W47 / W48	202
1.11	Renewing bulb for interior lights W16 / W17 / W47 / W48	203
2	Controls	204
2.1	Overview of fitting locations - controls in dash panel	204
2.2	Overview of fitting locations - controls in front doors	207
2.3	Overview of fitting locations - controls in luggage compartment	208
2.4	Overview of fitting locations - controls in roof trim	209
2.5	Removing and installing rotary light switch EX1	209
2.6	Removing and installing headlight range control regulator E102	210
2.7	Removing and installing switch module on left of dash panel EX41	211
2.8	Removing and installing switch module 1 in dash panel, next to steering wheel EX43	211
2.9	Removing and installing switch module 2 in dash panel, next to steering wheel EX44	212
2.10	Removing and installing centre switch module in dash panel EX22	213
2.11	Removing and installing centre switch module 2 in dash panel EX35	213
2.12	Removing and installing hazard warning light switch EX3	214
2.13	Removing and installing centre switch module 3 in dash panel EX48	214
2.14	Removing and installing button for TCS and electronic stabilisation program E256	216



2.15	Removing and installing switch module 2, next to dash panel insert EX47	216
2.16	Removing and installing glove compartment light switch E26	217
2.17	Removing and installing exterior mirror adjuster EX11	218
2.18	Removing and installing central switch for window regulators in driver door E189	218
2.19	Removing and installing central locking button E600	218
2.20	Removing and installing window regulator switch in front passenger door E107	219
2.21	Removing and installing interior monitoring switch E183	219
2.22	Removing and installing interior light switch E317	220
2.23	Removing and installing telematics button module E734	221
3	Anti-theft alarm	222
3.1	Assembly overview - interior monitor	222
3.2	Removing and installing alarm horn H12	222
3.3	Removing and installing interior monitoring sensor G273	223
3.4	Removing and installing interior monitoring sensor 3 G593	224
4	Immobiliser	225
4.1	Removing and installing immobiliser control unit J362	225
4.2	Removing and installing immobiliser reader coil D2	225
5	Front camera for assist systems	226
5.1	Removing and installing front camera for driver assist systems R242	226
5.2	Calibrating front camera for driver assist systems R242	226
5.3	Removing and installing windscreen heater for lane departure warning Z67	227
6	Cigarette lighter, socket	228
6.1	Assembly overview - cigarette lighter, 12 V socket	228
6.2	Assembly overview - exterior socket, 230 V, 110 V U8	230
6.3	Assembly overview - interior socket, 230 V, 110 V U11	231
6.4	Assembly overview - 220 V automatic personnel protection circuit breaker S59	232
6.5	Removing and installing cigarette lighter U1	232
6.6	Removing and installing electric socket U	232
6.7	Removing and installing socket illumination bulb L42	232
6.8	Removing and installing DC/AC converter with socket, 12 V-230 V U13	233
6.9	Removing and installing exterior socket, 230 V, 110 V U8	235
6.10	Removing and installing interior socket, 230 V, 110 V U11	237
6.11	Removing and installing 220 V automatic personnel protection circuit breaker S59	239
6.12	Removing and installing battery charger, 230 V or 110 V/12 V A10	241
97 - Wiring		244
1	Relay carriers, fuse holders, electronics boxes	244
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	244
1.2	Assembly overview - relay and fuse carrier, under driver seat	245
1.3	Removing and installing relay and fuse carrier	246
2	Select Control units	253
2.1	Overview of fitting locations - control units	253
2.2	Assembly overview - data bus diagnostic interface	254
2.3	Removing and installing onboard supply control unit J519	255
2.4	Removing and installing data bus diagnostic interface J533	258
2.5	Removing and installing special vehicle control unit J608	259
2.6	Removing and installing emergency call module control unit and communication unit J949	261
3	Connectors	262
3.1	Repairing electrical wiring harnesses and plug-in connections	262
4	Releasing and dismantling connector housings	263
5	Repairing aerial wires	264
6	Fibre optic cables	265
7	Vehicle diagnosis, testing and information systems	266