



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Repair instructions</b> .....	<b>1</b>
1.1 General repair instructions .....	1
1.2 Routing and attachment of lines .....	1
1.3 Notes on repair of CAN bus wiring .....	1
1.4 General information .....	1
<b>91 - Communication</b> .....	<b>3</b>
<b>1 Infotainment system</b> .....	<b>3</b>
1.1 Layout - infotainment system .....	3
1.2 Overview of fitting locations - Infotainment system .....	8
1.3 Removing and installing infotainment system display .....	10
1.4 Removing and installing control unit 1 for information electronics J794 .....	11
<b>2 Sound system</b> .....	<b>13</b>
2.1 Components of sound system .....	13
2.2 Overview of fitting locations - sound system .....	13
2.3 Removing and installing front treble loudspeakers R20 / R22 .....	15
2.4 Removing and installing rear bass loudspeakers R15 / R17 .....	15
2.5 Removing and installing front bass loudspeakers R21 / R23 .....	17
2.6 Removing and installing loudspeaker for emergency call module R335 .....	18
<b>3 Aerial systems</b> .....	<b>19</b>
3.1 Components of aerial systems .....	19
3.2 Assembly overview - aerials .....	21
3.3 Removing and installing roof aerial RX5 .....	23
3.4 Removing and installing aerial module .....	24
<b>4 Radio</b> .....	<b>28</b>
4.1 Components of radio system .....	28
4.2 Assembly overview - radio .....	28
4.3 Removing and installing radio .....	29
4.4 Pin assignments .....	30
<b>5 Telephone system</b> .....	<b>33</b>
5.1 Mobile telephone preparation .....	33
5.2 Overview of fitting locations - telephone system .....	34
5.3 Removing and installing internal microphone R74 .....	35
<b>6 Navigation system</b> .....	<b>37</b>
6.1 Components of navigation system .....	37
6.2 Overview of fitting locations - navigation system .....	37
6.3 Removing and installing control unit for navigation system .....	38
<b>7 Reversing camera system</b> .....	<b>39</b>
7.1 Components of reversing camera system .....	39
7.2 Overview of fitting locations - reversing camera system .....	43
7.3 Assembly overview - reversing camera .....	45
7.4 Removing and installing reversing camera R189 .....	46
7.5 Removing and installing Trailer Assist camera R368 .....	47
7.6 Calibrating Trailer Assist camera R368 .....	47
<b>8 Multifunction steering wheel</b> .....	<b>54</b>
8.1 Components of multifunction steering wheel .....	54
8.2 Assembly overview - multifunction steering wheel .....	54
8.3 Removing and installing steering wheel multifunction buttons E441 / E440 .....	55
8.4 Removing and installing Tiptronic switch in steering wheel E439 / E438 .....	58
<b>9 Connection for external multimedia devices</b> .....	<b>59</b>
9.1 Connectors, connection for external multimedia devices .....	59



9.2	Removing and installing connection for external audio sources R199	60
<b>10</b>	<b>Telematics system</b>	<b>61</b>
10.1	Components of telematics system	61
<b>11</b>	<b>Car-Net</b>	<b>63</b>
11.1	Components of Car-Net	63
11.2	Overview of fitting locations - Car-Net services	65
11.3	Removing and installing emergency button E276	66
11.4	Removing and installing emergency call module control unit and communication unit J949	67
11.5	Commissioning ERA Glonass	70