



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working in the vicinity of high-voltage components, e-Crafter and e-TGE	1
1.2 Safety precautions when working on the high-voltage system, e-Crafter and e-TGE	1
2 Hazard classification for the high-voltage system	3
3 Key vehicle data	10
3.1 Vehicle identification number	10
3.2 Type plate	11
3.3 Vehicle data sticker	11
4 Moulded foam inserts	12
5 Galvanized body parts, high strength and hot-formed body panels	14
5.1 Enclosed bodies	14
6 Laser welding	18
7 Tools	19
8 Gaps/shut lines	20
8.1 Body, front	20
8.2 Body, centre	24
8.3 Body - rear	26
9 Body dimensions	29
9.1 Body, front	29
9.2 Body, centre	31
9.3 Body - rear	37
9.4 Floor panel - front	40
9.5 Floor panel - centre	40
9.6 Floor panel - rear	43
10 Straightening bracket systems	47
10.1 Alignment set VAS 801 045	47
10.2 Alignment set VAS 811 017	47
10.3 Measuring and alignment system, professional plus VAS 6528	48
50 - Body - front	49
1 Renewing front bumper bracket	49
1.1 Removing	49
1.2 Installing	50
2 Renewing gearbox bracket	53
2.1 Removing	53
2.2 Installing	54
3 Renewing engine bracket	57
3.1 Removing	57
3.2 Installing	58
4 Renewing wing retainer	61
4.1 Removing	61
4.2 Installing	62
5 Renewing front wheel housing, part section	65
5.1 Removing	65
5.2 Installing	66
6 Renewing upper wheel housing longitudinal member, part section	70
6.1 Removing	70
6.2 Installing	71



7	Renewing front longitudinal member, part section 1	75
7.1	Removing	75
7.2	Installing	78
8	Renewing front longitudinal member, part section 2	87
8.1	Removing	88
8.2	Installing	91
9	Renewing retaining bracket for subframe	99
9.1	Removing	99
9.2	Installing	100
51 - Body - centre		104
1	Renewing front roof (high roof)	104
1.1	Removing	105
1.2	Installing	106
2	Renewing front roof panelling (high roof with sliding door)	110
2.1	Removing	111
2.2	Installing	112
3	Renewing centre roof panelling (high roof without sliding door)	116
3.1	Removing	117
3.2	Installing	118
4	Renewing centre roof panelling (high roof with sliding door)	123
4.1	Removing	124
4.2	Installing	125
5	Renewing rear roof panelling (high roof with sliding door)	129
5.1	Removing	130
5.2	Installing	131
6	Renewing front cross member for roof	137
6.1	Removing	137
6.2	Installing	138
7	Renewing roof reinforcement (high roof)	141
7.1	Removing	141
7.2	Installing	142
8	Renewing rear outer roof cross member	145
8.1	Removing	146
8.2	Installing	147
9	Renewing rear roof inner cross member	151
9.1	Removing	152
9.2	Installing	153
10	Renewing rear window frame (single cab and double cab)	157
10.1	Removing	158
10.2	Installing	159
11	Renewing cross member for rear window frame (single cab and double cab)	163
11.1	Removing	163
11.2	Installing	164
12	Renewing connecting plate for rear window frame (single cab and double cab)	167
12.1	Removing	168
12.2	Installing	169
13	Renewing cowl panel	173
13.1	Removing	173
13.2	Installing	174
14	Renewing hinge pillar (A-pillar)	178
14.1	Removing	179
14.2	Installing	180



15	Renewing hinge pillar (A-pillar) reinforcement	185
15.1	Removing	186
15.2	Installing	187
16	Renewing side member at outer front (without sliding door)	191
16.1	Removing	192
16.2	Installing	193
17	Renewing side member at outer front (with sliding door)	198
17.1	Removing	199
17.2	Installing	200
18	Renewing B-pillar, part section (with sliding door)	205
18.1	Removing	206
18.2	Installing	207
19	Renewing lock pillar, B-pillar, single cab	213
19.1	Removing	214
19.2	Installing	216
20	Renewing outer lock column (C-pillar), part section	221
20.1	Removing	222
20.2	Installing	223
21	Renewing centre side panel	227
21.1	Removing	228
21.2	Installing	229
22	Renewing centre side panel (with window aperture)	234
22.1	Removing	235
22.2	Installing	236
23	Renewing centre side panel, part section	241
23.1	Removing	242
23.2	Installing	243
24	Renewing rear side panel (without sliding door)	247
24.1	Removing	248
24.2	Installing	250
25	Renewing rear side panel, part section (without sliding door)	255
25.1	Removing	256
25.2	Installing	257
26	Renewing rear side panel (with sliding door)	262
26.1	Removing	263
26.2	Installing	265
27	Replacing door frame connecting plate	270
27.1	Removing	271
27.2	Installing	272
28	Renewing sliding door step	276
28.1	Removing	276
28.2	Installing	277
29	Renewing side member sliding door frame	281
29.1	Removing	282
29.2	Installing	283
30	Renewing rear inner side member	287
30.1	Removing	288
30.2	Installing	289
31	Renewing front side panel lower part	294
31.1	Removing	295
31.2	Installing	296
32	Renewing lower centre side panel (without sliding door)	301



32.1	Removing	302
32.2	Installing	303
33	Renewing lower centre side panel (with sliding door)	307
33.1	Removing	308
33.2	Installing	309
34	Renewing rear side panel lower part	313
34.1	Removing	314
34.2	Installing	315
35	Renewing outer centre longitudinal member (with sliding door)	319
35.1	Removing	319
35.2	Installing	320
36	Renewing outer cross member (with sliding door)	324
36.1	Removing	324
36.2	Installing	325
37	Renewing fastening ring for cargo bed (open vehicle models)	328
37.1	Removing	329
37.2	Installing	330
38	Renewing studs	333
39	Renewing front high-voltage battery console	334
39.1	Removing	334
39.2	Installing	335
40	Renewing rear high-voltage battery cross member	338
40.1	Removing	338
40.2	Installing	339
41	Renewing front high-voltage battery console bracket	343
41.1	Removing	343
41.2	Installing	344
42	Renewing centre high-voltage battery console bracket	347
42.1	Removing	347
42.2	Installing	348
43	Renewing rear high-voltage battery console	351
43.1	Removing	351
43.2	Installing	352
44	Renewing threaded support to front high-voltage battery console	355
44.1	Removing	355
44.2	Installing	356
45	Renewing threaded support on centre high-voltage battery console	360
45.1	Removing	360
45.2	Installing	361
53 - Body - rear		365
1	Renewing outer cross panel (enclosed bodies)	365
1.1	Removing	366
1.2	Installing	367
2	Renewing inner cross panel (enclosed bodies)	371
2.1	Removing	371
2.2	Installing	372
3	Renewing sealing plate (enclosed bodies)	376
3.1	Removing	376
3.2	Installing	377
4	Renewing rear lock carrier	380
4.1	Removing	380
4.2	Installing	381



5	Renewing bracket for rear cross member (double cab/single cab)	385
5.1	Removing	385
5.2	Installing	386
6	Renewing inner wheel housing liner	390
6.1	Removing	391
6.2	Installing	392
7	Renewing rear floor panel (enclosed bodies with short overhang)	396
7.1	Removing	396
7.2	Installing	398
8	Renewing lower D-pillar, part section	402
8.1	Removing	402
8.2	Installing	403
9	Renewing leaf spring mounting bracket	407
9.1	Removing	407
9.2	Installing	408
10	Renewing rear longitudinal member, part section	413
10.1	Removing	413
10.2	Installing	414
11	Repair instructions for spare wheel winch tether	419