



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 General information	2
2.1 Operation	2
3 Repair notes	3
3.1 General repair instructions	3
3.2 Gaskets and seals	4
3.3 Nuts and bolts	4
4 Technical data	5
4.1 Filling capacities for gearboxes with additional pump for gear oil cooling	5
34 - Controls, housing	6
1 Power take-off system	6
1.1 Assembly overview - power take-off	6
1.2 Removing power take-off	10
1.3 Installing power take-off	13
2 Power take-off with additional pump for gear oil cooling	17
2.1 Assembly overview - gear oil cooling	17
2.2 Removing and installing gear oil cooler	18
2.3 Removing and installing oil pressure lines	19
2.4 Removing and installing oil pump	23
2.5 Filling gear oil and checking oil level	25
2.6 Bleeding cooling system of gearbox	27