



Contents

00 - Technical data	1
1 Safety information	1
1.1 Rules for safety when working on the gearbox	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting or towing	2
2 Repair notes	3
2.1 Rules for cleanliness	3
2.2 General notes	3
2.3 General repair instructions	3
2.4 Contact corrosion	4
2.5 Gaskets and seals	5
2.6 Nuts and bolts	5
2.7 Line routing and attachment	5
3 Technical data	6
3.1 Capacities	6
3.2 Allocation gearbox - engine	6
4 Identification	7
4.1 Gearbox identification	7
4.2 Identification of torque converter	7
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
32 - Torque converter	9
1 Torque converter	9
1.1 Assembly overview - torque converter	9
1.2 Removing and installing torque converter	9
1.3 Draining torque converter	11
1.4 Removing and installing torque converter oil seal	11
37 - Controls, housing	13
1 ATF circuit	13
1.1 Assembly overview - ATF circuit	13
1.2 Removing and installing ATF cooler	14
1.3 Removing and installing ATF filter	15
1.4 Removing and installing ATF oil pressure lines	16
2 ATF	20
2.1 Checking ATF level	20
2.2 Draining and filling ATF	22
2.3 Purging ATF circuit	26
3 Removing and installing gearbox	30
3.1 Specified torques for gearbox	30
3.2 Removing gearbox	30
3.3 Installing gearbox	34
4 Assembly mountings	37
4.1 Assembly overview - assembly mountings	37
4.2 Assembly overview - gearbox carrier with gearbox mounting	37
4.3 Removing and installing gearbox mounting	38
4.4 Removing and installing gearbox carrier	38
5 Transporting gearbox	40
6 Securing to engine and gearbox support	42



7	Selector mechanism	43
7.1	Assembly overview - selector mechanism	43
7.2	Checking selector mechanism	44
7.3	Emergency release from position P	45
7.4	Removing and installing selector mechanism	45
7.5	Removing and installing selector lever handle	47
7.6	Removing and installing gear selector cable	48
7.7	Checking and adjusting selector lever cable	50
38	Gears, control	51
1	ATF system	51
1.1	Assembly overview - sump/oil strainer	51
1.2	Removing and installing sump	52
1.3	Removing and installing hydraulic impulse oil storage with accumulator solenoid N485 ..	54
2	Oil seals in gearbox	56
2.1	Assembly overview - output shaft flange	56
2.2	Renewing output shaft seal	56
2.3	Removing and installing output shaft flange	58
3	Valve body	60
3.1	Removing and installing valve body	60
4	Gearbox control system	63
4.1	Removing and installing automatic gearbox control unit J217	63