



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	2
1.6 Safety precautions when working on ignition system	3
1.7 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	6
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	7
3.7 Fitting radiator and condensers	7
3.8 Checking vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	15
1.3 Securing engine on engine and gearbox support	16
1.4 Installing engine	17
2 Assembly mountings	21
2.1 Assembly overview - assembly mountings	21
2.2 Removing and installing engine mounting	22
2.3 Removing and installing gearbox mounting	23
2.4 Removing and installing pendulum support	24
2.5 Supporting engine in installation position	25
13 - Crankshaft group	28
1 Cylinder block (pulley end)	28
1.1 Assembly overview - cylinder block (pulley end)	28
1.2 Assembly overview - sealing flange, belt pulley end	30
1.3 Removing and installing poly-V belt	32
1.4 Removing and installing tensioner for poly V-belt	33
1.5 Removing and installing vibration damper	34
1.6 Removing and installing bracket for ancillaries	35
1.7 Removing and installing engine support	37
1.8 Removing and installing sealing flange on pulley end	38
1.9 Removing and installing cover for poly V-belt	40
2 Cylinder block, gearbox end	41
2.1 Assembly overview - cylinder block, gearbox end	41
2.2 Assembly overview - drive plate	42
2.3 Removing and installing drive plate	42
2.4 Removing and installing flywheel	44
2.5 Removing and installing sealing flange on gearbox side	45
3 Crankshaft	53



3.1	Assembly overview - crankshaft	53
3.2	Crankshaft dimensions	54
3.3	Renewing needle bearing in crankshaft	54
3.4	Measuring axial clearance of crankshaft	56
3.5	Measuring radial clearance of crankshaft	57
4	Auxiliary drive	58
4.1	Assembly overview - ancillary drive	58
4.2	Removing and installing 2nd alternator	59
4.3	Removing and installing 2nd air conditioner compressor	60
4.4	Removing and installing bracket for auxiliary drive	64
5	Pistons and conrods	66
5.1	Assembly overview - pistons and conrods	66
5.2	Removing and installing pistons	68
5.3	Measuring piston projection at TDC	68
5.4	Checking pistons and cylinder bores	71
5.5	Separating new conrod	73
5.6	Checking radial clearance of conrods	73
5.7	Removing and installing oil spray jets	73
15	Cylinder head, valve gear	75
1	Cylinder head	75
1.1	Assembly overview - cylinder head	75
1.2	Assembly overview - camshaft housing	77
1.3	Assembly overview - cylinder head cover	78
1.4	Removing and installing cylinder head	79
1.5	Removing and installing cylinder head cover	85
1.6	Removing and installing injector seals	86
1.7	Removing and installing camshaft housing	88
1.8	Checking compression	92
2	Toothed belt drive	93
2.1	Assembly overview - toothed belt cover	93
2.2	Assembly overview - toothed belt	94
2.3	Removing and installing toothed belt guard	96
2.4	Removing and installing toothed belt	99
2.5	Removing toothed belt from camshaft	111
3	Valve gear	116
3.1	Assembly overview - valve gear	116
3.2	Measuring axial play of camshaft	117
3.3	Removing and installing camshaft oil seal	118
3.4	Checking hydraulic compensation elements	120
3.5	Removing and installing valve stem seals	120
3.6	Removing and installing toothed belt pulley	130
4	Inlet and exhaust valves	132
4.1	Checking valve guides	132
4.2	Checking valves	133
4.3	Valve dimensions	133
17	Lubrication	134
1	Sump, oil pump	134
1.1	Assembly overview - sump/oil pump	134
1.2	Engine oil:	136
1.3	Removing and installing sump	136
1.4	Removing and installing oil pump	139
1.5	Removing and installing oil level and oil temperature sender G266	140
1.6	Removing and installing toothed belt for oil pump	141



2	Engine oil cooler	142
3	Oil filter, oil pressure switch	143
3.1	Assembly overview - oil filter housing, oil pressure switch	143
3.2	Removing and installing oil pressure switch F1	144
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	145
3.4	Checking oil pressure	146
3.5	Removing and installing oil filter housing	146
3.6	Removing and installing oil pressure regulating valve N428	148
3.7	Measuring oil consumption	149
4	Oil circuit	151
4.1	Assembly overview - oil circuit	151
4.2	Removing and installing oil supply line	153
4.3	Removing and installing oil return line for turbocharger	156
19	- Cooling	160
1	Cooling system/coolant	160
1.1	Assembly overview - coolant expansion tank	160
1.2	Connection diagram - coolant hoses	161
1.3	Checking cooling system for leaks	167
1.4	Draining and adding coolant	169
1.5	Removing and installing coolant expansion tank	178
2	Coolant pump, regulation of cooling system	181
2.1	Assembly overview - coolant pump, thermostat	181
2.2	Assembly overview - electric coolant pump	183
2.3	Assembly overview - coolant temperature sender	184
2.4	Removing and installing pump for exhaust gas recirculation cooler V400	185
2.5	Removing and installing charge air cooling pump V188	186
2.6	Removing and installing auxiliary pump for heating V488	188
2.7	Removing and installing coolant pump	189
2.8	Removing and installing thermostat	190
2.9	Checking thermostat	191
2.10	Removing and installing coolant valve for cylinder head N489	191
2.11	Removing and installing coolant temperature sender G62	193
2.12	Removing and installing radiator outlet coolant temperature sender G83	194
2.13	Removing and installing coolant temperature sender 3 G812	195
2.14	Removing and installing shut-off valve	198
3	Coolant pipes	200
3.1	Assembly overview - coolant pipes	200
3.2	Removing and installing coolant pipes	201
4	Radiator, radiator fan	214
4.1	Assembly overview - radiator/radiator fan	214
4.2	Assembly overview - radiator cowl and radiator fan	215
4.3	Removing and installing radiator	216
4.4	Removing and installing radiator cowl with radiator fan	218
4.5	Removing and installing radiator fan V7	219
4.6	Removing and installing auxiliary radiator	219
4.7	Removing and installing radiator blind control motors V544 / V550	221
21	- Turbocharging/supercharging	223
1	Exhaust turbocharger	223
1.1	Assembly overview - turbocharger	223
1.2	Removing and installing turbocharger	228
1.3	Renewing vacuum unit for turbocharger	236
1.4	Removing and installing compressor housing and turbine housing	242
1.5	Removing and installing upper connecting pipe	243



1.6	Removing and installing lower connecting pipe	244
2	Charge air system	246
2.1	Assembly overview - charge air system	246
2.2	Removing and installing charge air cooler	248
2.3	Removing and installing charge pressure sender 2 G447	250
2.4	Checking charge air system for leaks	251
2.5	Detaching and securing charge air cooler	253
2.6	Removing and installing bracket for charge air cooler	255
2.7	Checking charge air cooler for leaks	256
23	Mixture preparation - injection	258
1	Injection system	258
1.1	Filling/bleeding fuel system	258
1.2	Checking fuel system for leaks	258
2	Vacuum system	260
2.1	Connection diagram - vacuum system	260
2.2	Assembly overview - vacuum system	263
2.3	Checking vacuum system	264
2.4	Removing and installing solenoid valves N75 / N274 / N529 / N316	265
3	Injectors/high-pressure accumulator (rail)	267
3.1	Assembly overview - injectors	267
3.2	Assembly overview - fuel rail	269
3.3	Adapting correction values for injectors	270
3.4	Testing injectors	270
3.5	Testing jammed-open injectors	270
3.6	Checking return flow rate of injectors with engine running	272
3.7	Checking return flow rate of injectors at starter speed	274
3.8	Removing and installing injectors	276
3.9	Removing and installing high-pressure lines	279
3.10	Removing and installing fuel rail	283
4	Air filter	285
4.1	Assembly overview - air filter housing	285
4.2	Removing and installing air filter housing	285
5	Intake manifold	287
5.1	Assembly overview - intake manifold	287
5.2	Removing and installing intake manifold	288
5.3	Removing and installing throttle valve module GX3	290
5.4	Removing and installing vacuum unit for intake manifold	291
6	Senders and sensors	293
6.1	Removing and installing fuel pressure regulating valve N276	293
6.2	Checking fuel pressure regulating valve N276	295
6.3	Removing and installing fuel pressure sender G247	296
6.4	Removing and installing air mass meter G70	297
6.5	Removing and installing pressure differential sender G505	298
6.6	Removing and installing charge air temperature sender ahead of charge air cooler G810	299
6.7	Removing and installing charge air temperature sender after charge air cooler G811	300
6.8	Removing and installing fuel temperature sender G81	301
6.9	Removing and installing control unit for NOx sender J583 / NOx sender G295	302
6.10	Removing and installing control unit for NOx sender 2 J881 / NOx sender 2 G687	304
6.11	Removing and installing control unit for sensor electronics J849 / particulate sensor G784	305
6.12	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	307
6.13	Removing and installing intake manifold sender GX9	308



7	Engine control unit	310
7.1	Removing and installing engine (motor) control unit J623	310
8	High-pressure pump	312
8.1	Assembly overview - high-pressure pump	312
8.2	Removing and installing high-pressure pump	313
8.3	Checking high-pressure pump	316
9	Lambda probe	319
9.1	Assembly overview - Lambda probe	319
9.2	Removing and installing Lambda probe 1 before catalytic converter GX10	320
26	Exhaust system	322
1	Exhaust pipes and silencers	322
1.1	Assembly overview - silencers	322
1.2	Removing and installing front silencer	323
1.3	Aligning exhaust system free of stress	324
1.4	Check exhaust system for leaks	325
1.5	Installation position of clamp	325
1.6	Removing and installing exhaust tailpipe	325
2	Exhaust gas cleaning	327
2.1	Assembly overview - emission control	327
2.2	Removing and installing catalytic converter	328
2.3	Removing and installing particulate filter	330
3	SCR system (selective catalytic reduction)	333
3.1	Assembly overview - tank for reducing agent	333
3.2	Assembly overview - delivery module for reducing agent	335
3.3	Removing and installing reducing agent tank VX85	335
3.4	Removing and installing delivery unit for reducing agent metering system GX19	338
3.5	Removing and installing injector for reduction agent N474	339
3.6	Removing and installing control unit for reducing-agent heater J891	341
3.7	Draining reducing agent tank VX85	341
3.8	Removing and installing filler pipe for reducing agent tank VX85	343
3.9	Disconnecting reducing agent supply line	345
3.10	SCR - resetting learnt values	347
4	Exhaust gas temperature regulation	348
4.1	Assembly overview - exhaust gas temperature regulation	348
4.2	Removing and installing exhaust gas temperature sender 1 G235	348
4.3	Removing and installing exhaust gas temperature sender 2 G448	350
4.4	Removing and installing exhaust gas temperature sender 3 G495	351
5	Exhaust gas recirculation	353
5.1	Assembly overview - exhaust gas recirculation	353
5.2	Removing and installing exhaust gas recirculation cooler	355
5.3	Removing and installing pipes for exhaust gas recirculation system	357
5.4	Removing and installing temperature sensor 2 for exhaust gas recirculation G690	359
5.5	Checking exhaust gas recirculation cooler for leaks	360
5.6	Removing and installing temperature sensor 3 for exhaust gas recirculation G949	363
5.7	Removing and installing bracket for exhaust gas recirculation cooler	364
5.8	Flushing exhaust gas recirculation cooler and exhaust gas recirculation valve 1 GX5	365
28	Glow plug system	370
1	Glow plug system	370
1.1	Assembly overview - glow plug system	370
1.2	Removing and installing glow plug	372
1.3	Checking glow plug	374
1.4	Removing and installing automatic glow period control unit J179	375
1.5	Removing and installing knock sensor 1 G61	375



1.6	Removing and installing knock sensor 2 G66	376
1.7	Removing and installing Hall sender G40	377
1.8	Removing and installing engine speed sender G28	378
1.9	Cleaning glow plug bore for cylinder 3 combustion chamber pressure sender G679	379