



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	2
1.6 Safety precautions when working on ignition system	3
1.7 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	6
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	7
3.7 Fitting radiator and condensers	7
3.8 Checking vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	14
1.3 Securing engine on engine and gearbox support	14
1.4 Installing engine	16
2 Assembly mountings	19
2.1 Assembly overview - assembly mountings	19
2.2 Removing and installing engine mounting	21
2.3 Removing and installing gearbox mounting	22
2.4 Removing and installing engine mounting	23
2.5 Supporting engine in installation position	24
13 - Crankshaft group	27
1 Cylinder block (pulley end)	27
1.1 Assembly overview - cylinder block (pulley end)	27
1.2 Assembly overview - sealing flange, belt pulley end	29
1.3 Removing and installing poly-V belt	30
1.4 Removing and installing tensioner for poly V-belt	33
1.5 Removing and installing vibration damper	33
1.6 Removing and installing bracket for ancillaries	34
1.7 Removing and installing engine support	36
1.8 Removing and installing sealing flange on pulley end	38
2 Cylinder block, gearbox end	41
2.1 Assembly overview - cylinder block, gearbox end	41
2.2 Assembly overview - drive plate	42
2.3 Removing and installing drive plate	42
2.4 Removing and installing flywheel	44
2.5 Removing and installing sealing flange on gearbox side	45
3 Crankshaft	53
3.1 Assembly overview - crankshaft	53



3.2	Crankshaft dimensions	54
3.3	Measuring axial clearance of crankshaft	54
3.4	Measuring radial clearance of crankshaft	55
4	Auxiliary drive	56
4.1	Assembly overview - ancillary drive	56
4.2	Removing and installing 2nd alternator	57
4.3	Removing and installing 2nd air conditioner compressor	58
4.4	Removing and installing bracket for auxiliary drive	61
5	Pistons and conrods	63
5.1	Assembly overview - pistons and conrods	63
5.2	Removing and installing pistons	65
5.3	Measuring piston projection at TDC	65
5.4	Checking pistons and cylinder bores	68
5.5	Separating new conrod	69
5.6	Checking radial clearance of conrods	69
5.7	Removing and installing oil spray jets	70
15	Cylinder head, valve gear	72
1	Cylinder head	72
1.1	Assembly overview - cylinder head	72
1.2	Assembly overview - camshaft housing	74
1.3	Assembly overview - cylinder head cover	75
1.4	Removing and installing cylinder head	76
1.5	Removing and installing cylinder head cover	83
1.6	Removing and installing injector seals	84
1.7	Removing and installing camshaft housing	85
1.8	Checking compression	90
2	Toothed belt drive	91
2.1	Assembly overview - toothed belt cover	91
2.2	Assembly overview - toothed belt	92
2.3	Removing and installing toothed belt guard	94
2.4	Removing and installing toothed belt	97
2.5	Removing toothed belt from camshaft	109
3	Valve gear	114
3.1	Assembly overview - valve gear	114
3.2	Measuring axial play of camshaft	115
3.3	Removing and installing camshaft oil seal	116
3.4	Checking hydraulic compensation elements	118
3.5	Removing and installing valve stem seals	118
3.6	Removing and installing toothed belt pulley	128
4	Inlet and exhaust valves	130
4.1	Checking valve guides	130
4.2	Checking valves	131
4.3	Valve dimensions	131
17	Lubrication	132
1	Sump, oil pump	132
1.1	Assembly overview - sump/oil pump	132
1.2	Engine oil:	134
1.3	Removing and installing sump	134
1.4	Removing and installing oil pump	136
1.5	Removing and installing oil level and oil temperature sender G266	137
1.6	Removing and installing toothed belt for oil pump	138
2	Engine oil cooler	139
3	Oil filter, oil pressure switch	140



3.1	Assembly overview - oil filter housing, oil pressure switch	140
3.2	Removing and installing oil pressure switch F1	141
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	142
3.4	Checking oil pressure	145
3.5	Removing and installing oil filter housing	145
3.6	Removing and installing oil pressure regulating valve N428	147
3.7	Measuring oil consumption	148
4	Oil circuit	149
4.1	Assembly overview - oil circuit	149
4.2	Removing and installing oil supply line	151
4.3	Removing and installing oil return line for turbocharger	153
19	Cooling	157
1	Cooling system/coolant	157
1.1	Assembly overview - coolant expansion tank	157
1.2	Connection diagram - coolant hoses	158
1.3	Checking cooling system for leaks	159
1.4	Draining and adding coolant	161
1.5	Removing and installing coolant expansion tank	170
2	Coolant pump, regulation of cooling system	173
2.1	Assembly overview - coolant pump, thermostat	173
2.2	Assembly overview - electric coolant pump	175
2.3	Assembly overview - coolant temperature sender	176
2.4	Removing and installing pump for exhaust gas recirculation cooler V400	177
2.5	Removing and installing charge air cooling pump V188	178
2.6	Removing and installing auxiliary pump for heating V488	180
2.7	Removing and installing coolant pump	181
2.8	Removing and installing thermostat	182
2.9	Checking thermostat	183
2.10	Removing and installing coolant valve for cylinder head N489	183
2.11	Removing and installing coolant temperature sender G62	184
2.12	Removing and installing radiator outlet coolant temperature sender G83	186
2.13	Removing and installing coolant temperature sender 3 G812	187
2.14	Removing and installing shut-off valve	188
3	Coolant pipes	190
3.1	Assembly overview - coolant pipes	190
3.2	Removing and installing coolant pipes	190
4	Radiator, radiator fan	193
4.1	Assembly overview - radiator/radiator fan	193
4.2	Assembly overview - radiator cowl and radiator fan	194
4.3	Removing and installing radiator	195
4.4	Removing and installing radiator cowl with radiator fan	197
4.5	Removing and installing radiator fan V7	199
4.6	Removing and installing radiator fan 2 V177	199
4.7	Removing and installing auxiliary radiator	200
4.8	Removing and installing viscous fan	201
4.9	Removing and installing bracket for viscous fan	203
21	Turbocharging/supercharging	204
1	Turbocharger	204
1.1	Assembly overview - turbocharger	204
1.2	Removing and installing turbocharger	209
1.3	Renewing vacuum unit for turbocharger	216
1.4	Removing and installing compressor housing and turbine housing, vehicles with bi-turbo	222



1.5	Removing and installing upper connecting pipe, vehicles with bi-turbo	223
1.6	Removing and installing lower connecting pipe, vehicles with bi-turbo	224
1.7	Renewing turbine housing, vehicles with bi-turbo	225
2	Charge air system	230
2.1	Assembly overview - charge air system	230
2.2	Removing and installing charge air cooler	232
2.3	Removing and installing charge pressure sender 2 G447	234
2.4	Checking charge air system for leaks	235
2.5	Detaching and securing charge air cooler	237
2.6	Removing and installing bracket for charge air cooler	239
2.7	Checking charge air cooler for leaks	240
23	Mixture preparation - injection	243
1	Injection system	243
1.1	Filling/bleeding fuel system	243
1.2	Checking fuel system for leaks	243
2	Vacuum system	245
2.1	Connection diagram - vacuum system	245
2.2	Assembly overview - vacuum system	248
2.3	Checking vacuum system	249
2.4	Removing and installing solenoid valves N75 / N274 / N529 / N316	250
3	Injectors/high-pressure accumulator (rail)	252
3.1	Assembly overview - injectors	252
3.2	Assembly overview - fuel rail	254
3.3	Adapting correction values for injectors	255
3.4	Testing injectors	255
3.5	Testing jammed-open injectors	256
3.6	Checking return flow rate of injectors with engine running	257
3.7	Checking return flow rate of injectors at starter speed	259
3.8	Removing and installing injectors	261
3.9	Removing and installing high-pressure lines	264
3.10	Removing and installing fuel rail	269
4	Air filter	270
4.1	Assembly overview - air filter housing	270
4.2	Removing and installing air filter housing	270
5	Intake manifold	272
5.1	Assembly overview - intake manifold	272
5.2	Removing and installing intake manifold	273
5.3	Removing and installing throttle valve module GX3	275
5.4	Removing and installing vacuum unit for intake manifold	276
6	Senders and sensors	277
6.1	Removing and installing fuel pressure regulating valve N276	277
6.2	Checking fuel pressure regulating valve N276	279
6.3	Removing and installing fuel pressure sender G247	280
6.4	Removing and installing air mass meter G70	281
6.5	Removing and installing pressure differential sender G505	282
6.6	Removing and installing charge air temperature sender ahead of charge air cooler G810	283
6.7	Removing and installing charge air temperature sender after charge air cooler G811	284
6.8	Removing and installing fuel temperature sender G81	285
6.9	Removing and installing control unit for NOx sender J583 / NOx sender G295	286
6.10	Removing and installing control unit for NOx sender 2 J881 / NOx sender 2 G687	288
6.11	Removing and installing control unit for sensor electronics J849 / particulate sensor G784	289



6.12	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	290
6.13	Removing and installing intake manifold sender GX9	291
7	Engine control unit	293
7.1	Removing and installing engine (motor) control unit J623	293
8	High-pressure pump	295
8.1	Assembly overview - high-pressure pump	295
8.2	Removing and installing high-pressure pump	296
8.3	Checking high-pressure pump	298
9	Lambda probe	301
9.1	Assembly overview - Lambda probe	301
9.2	Removing and installing Lambda probe 1 before catalytic converter GX10	302
26	- Exhaust system	304
1	Exhaust pipes and silencers	304
1.1	Assembly overview - silencers	304
1.2	Removing and installing front silencer	304
1.3	Aligning exhaust system free of stress	305
1.4	Checking exhaust system for leaks	306
1.5	Installation position of clamp	306
2	Emission control	307
2.1	Assembly overview - emission control	307
2.2	Removing and installing catalytic converter	308
2.3	Removing and installing particulate filter	310
3	SCR system (selective catalytic reduction)	313
3.1	Assembly overview - tank for reducing agent	313
3.2	Assembly overview - delivery module for reducing agent	315
3.3	Removing and installing reducing agent tank VX85	315
3.4	Removing and installing delivery unit for reducing agent metering system GX19	318
3.5	Removing and installing injector for reduction agent N474	319
3.6	Removing and installing control unit for reducing-agent heater J891	322
3.7	Draining reducing agent tank VX85	322
3.8	Removing and installing filler pipe for reducing agent tank VX85	324
3.9	Disconnecting reducing agent supply line	326
3.10	SCR - resetting learnt values	328
4	Exhaust gas temperature regulation	329
4.1	Assembly overview - exhaust gas temperature regulation	329
4.2	Removing and installing exhaust gas temperature sender 1 G235	329
4.3	Removing and installing exhaust gas temperature sender 2 G448	331
4.4	Removing and installing exhaust gas temperature sender 3 G495	332
5	Exhaust gas recirculation	334
5.1	Assembly overview - exhaust gas recirculation	334
5.2	Removing and installing exhaust gas recirculation cooler	336
5.3	Removing and installing pipes for exhaust gas recirculation system	338
5.4	Removing and installing temperature sensor 2 for exhaust gas recirculation G690	340
5.5	Checking exhaust gas recirculation cooler for leaks	341
5.6	Removing and installing temperature sensor 3 for exhaust gas recirculation G949	343
5.7	Removing and installing bracket for exhaust gas recirculation cooler	344
5.8	Flushing exhaust gas recirculation cooler and exhaust gas recirculation valve 1 GX5	345
28	- Glow plug system	351
1	Glow plug system	351
1.1	Assembly overview - glow plug system	351
1.2	Removing and installing glow plug	353
1.3	Checking glow plug	355



1.4	Removing and installing automatic glow period control unit J179	356
1.5	Removing and installing knock sensor 1 G61	356
1.6	Removing and installing knock sensor 2 G66	358
1.7	Removing and installing Hall sender G40	360
1.8	Removing and installing engine speed sender G28	360
1.9	Cleaning glow plug bore for cylinder 3 combustion chamber pressure sender G679	361