

| | |
|--|-------|
| 001 - Fuse assignment | 1-27 |
| 1. Fuse assignment | 1 |
| 2. Battery, Fuse holder A | 2 |
| 3. Second battery charging circuit relay, Jump start connection | 3 |
| 4. Second battery, Fuse holder F | 4 |
| 5. Fuse holder C | 5 |
| 6. Fuse holder C | 6 |
| 7. Fuse holder C | 7 |
| 8. Terminal 15 voltage supply relay 2, Fuse holder C | 8 |
| 9. Fuse holder C | 9 |
| 10. Fuse holder C | 10 |
| 11. Fuse holder C | 11 |
| 12. Fuse holder C | 12 |
| 13. Fuse holder C | 13 |
| 14. Fuse holder C | 14 |
| 15. Heated rear window relay, Horn relay, Fuse holder C | 15 |
| 16. Terminal 15 voltage supply relay, Relay for special installations, terminal 15, Electrical terminal strip for external use | 16 |
| 17. Fuse holder B | 17 |
| 18. Fuse holder B | 18 |
| 19. Fuse holder B | 19 |
| 20. Fuse holder B | 20 |
| 21. Fuse holder B | 21 |
| 22. Fuse holder B | 22 |
| 23. Fuse holder B | 23 |
| 24. Fuse holder B | 24 |
| 25. Fuse holder B | 25 |
| 26. Fuse holder D | 26 |
| 27. Heated windscreen relay, Heated windscreen relay 2 | 27 |
| 002 - CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN | 28-38 |
| 1. CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN | 28 |
| 2. Data bus diagnostic interface | 29 |
| 3. Data bus diagnostic interface | 30 |
| 4. Diagnostic connection | 31 |
| 5. Heater and air conditioning controls, Tachograph, Trailer detector control unit, Special vehicle control unit | 32 |
| 6. Onboard supply control unit, Steering column electronics control unit, Emergency call module control unit and communication unit, Dash panel insert | 33 |
| 7. Auxiliary heater control unit, Driver door control unit, Front passenger door control unit, Auxiliary air heater control unit, Control unit 1 for information electronics | 34 |
| 8. Automatic gearbox control unit, Airbag control unit, Camera for trailer manoeuvring system | 35 |
| 9. Alternator with voltage regulator, Battery monitor control unit, Engine/motor control unit, DC/AC converter with socket, 12 V - 230 V | 36 |
| 10. Adaptive cruise control unit, Tyre Pressure Monitoring System control unit, Blind Spot Monitor control unit, Front camera for driver assist systems | 37 |
| 11. ABS control unit, Differential lock control unit, Parking aid control unit, All-wheel drive control unit, Power steering control unit | 38 |
| 003 - Trailer coupling , (1D1),(1D2),(1D7),(1D8) | 39-41 |
| 1. Trailer coupling , (1D1),(1D2),(1D7),(1D8) | 39 |
| 2. Trailer detector control unit, Fuse holder B | 40 |
| 3. Trailer detector control unit, Trailer socket | 41 |
| 004 - Adaptive cruise control , (6K2),(6K3) | 42-43 |
| 1. Adaptive cruise control , (6K2),(6K3) | 42 |
| 2. Adaptive cruise control unit, Fuse holder B | 43 |
| 005 - Electronic logbook, chip card reader unit , (9ND),(9NE),(9NZ) | 44-46 |
| 1. Electronic logbook, chip card reader unit , (9ND),(9NE),(9NZ) | 44 |
| 2. Tachograph, Fuse holder B, Fuse holder C | 45 |
| 3. Tachograph, Tachograph sender | 46 |
| 006 - Front camera for driver assist systems | 47-48 |
| 1. Front camera for driver assist systems | 47 |
| 2. Front camera for driver assist systems, Windscreen heater for lane departure warning | 48 |
| 007 - Basic equipment | 49-73 |
| 1. Basic equipment | 49 |
| 2. Battery, Starter relay 1, Starter relay 2, Fuse holder B | 50 |
| 3. Fuse holder C | 51 |
| 4. Onboard supply control unit. Fuse holder C | 52 |

| | |
|---|-------|
| 5. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit | 53 |
| 6. Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit | 54 |
| 7. Rotary light switch, Onboard supply control unit | 55 |
| 8. Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit | 56 |
| 9. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight | 57 |
| 10. Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element | 58 |
| 11. Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light | 59 |
| 12. Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light | 60 |
| 13. Start/Stop operation button, Front right brake pad wear sender, Rear left brake pad wear sender, Oil level and oil temperature sender, Onboard supply control unit | 61 |
| 14. Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit | 62 |
| 15. Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light, Heated rear window in left wing door | 63 |
| 16. Onboard supply control unit, Left tail light cluster | 64 |
| 17. Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door | 65 |
| 18. Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb | 66 |
| 19. Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right | 67 |
| 20. Onboard supply control unit, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb, Centre right side marker bulb | 68 |
| 21. Onboard supply control unit, Data bus diagnostic interface | 69 |
| 22. Engine/motor control unit | 70 |
| 23. Immobiliser reader coil, Dash panel insert | 71 |
| 24. Fuel delivery unit, Fuel pump relay, Dash panel insert | 72 |
| 25. Handbrake warning switch, Dash panel insert | 73 |
| 008 - 2.0l diesel engine , DAVA | 74-94 |
| 1. 2.0l diesel engine , DAVA | 74 |
| 2. Battery, Alternator with voltage regulator, Fuse holder B, Jump start connection | 75 |
| 3. Fuse holder C | 76 |
| 4. Automatic glow period control unit, Engine/motor control unit | 77 |
| 5. Engine/motor control unit, Charge pressure control solenoid valve 2, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4 | 78 |
| 6. Engine speed sender, Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Turbine changeover valve | 79 |
| 7. Coolant temperature sender, Fuel temperature sender, Fuel pressure sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit | 80 |
| 8. Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit | 81 |
| 9. Throttle valve module, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit | 82 |
| 10. Exhaust gas recirculation valve 1, Variable intake manifold position sender, Position sender 2 for charge pressure positioner, Engine/motor control unit | 83 |
| 11. Knock sensor 1, Knock sensor 2, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit | 84 |
| 12. Accelerator pedal module, Air mass meter, Radiator outlet coolant temperature sender, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit | 85 |
| 13. Lambda probe 1 before catalytic converter, Particulate sensor, Engine/motor control unit, Control unit for sensor electronics | 86 |
| 14. NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2, Starter relay 1, Starter relay 2 | 87 |
| 15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve | 88 |
| 16. Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Valve for oil pressure control, Auxiliary pump for heating | 89 |
| 17. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit. Charge air cooling pump. Pump for exhaust gas recirculation cooler | 90 |

| | |
|---|---------|
| 18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Relay for reducing agent metering system, Heater for reducing agent line (heater circuit 2) | 91 |
| 19. Clutch position sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Radiator fan | 92 |
| 20. Brake light switch, Data bus diagnostic interface, Engine/motor control unit | 93 |
| 21. Engine/motor control unit | 94 |
| 009 - 2.0l diesel engine , DAUA,DAUB | 95-115 |
| 1. 2.0l diesel engine , DAUA,DAUB | 95 |
| 2. Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection | 96 |
| 3. Fuse holder C | 97 |
| 4. Automatic glow period control unit, Engine/motor control unit | 98 |
| 5. Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4 | 99 |
| 6. Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Oil level and oil temperature sender, Variable intake manifold position sender, Engine/motor control unit | 100 |
| 7. Throttle valve module, Exhaust gas recirculation valve 1, Fuel pressure sender, Engine/motor control unit | 101 |
| 8. Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit | 102 |
| 9. Hall sender, Knock sensor 1, Water separator sender, Knock sensor 2, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit | 103 |
| 10. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit | 104 |
| 11. Engine speed sender, Position sender for charge pressure positioner, Control unit for NOx sender, Engine/motor control unit | 105 |
| 12. Engine/motor control unit, Control unit for sensor electronics, Control unit for NOx sender 2 | 106 |
| 13. Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4 | 107 |
| 14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Accelerator pedal module, Engine/motor control unit, Fuel pressure regulating valve | 108 |
| 15. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Pump for exhaust gas recirculation cooler, Auxiliary pump for heating | 109 |
| 16. Lambda probe 1 before catalytic converter, Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Injector for reducing agent | 110 |
| 17. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system | 111 |
| 18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2) | 112 |
| 19. Clutch position sender, Engine/motor control unit | 113 |
| 20. Engine/motor control unit, Radiator fan | 114 |
| 21. Engine/motor control unit, Starter relay 1, Starter relay 2 | 115 |
| 010 - Emergency call module | 116-119 |
| 1. Emergency call module | 116 |
| 2. Telematics button module, Emergency call module control unit and communication unit, Additional loudspeaker for telematics, Fuse holder C | 117 |
| 3. Emergency call module control unit and communication unit, Internal microphone | 118 |
| 4. Emergency call module control unit and communication unit, Roof aerial | 119 |
| 011 - Convenience system | 120-140 |
| 1. Convenience system | 120 |
| 2. Fuse holder C | 121 |
| 3. Driver door control unit, Driver door lock unit | 122 |
| 4. Driver door control unit, Central locking SAFELOCK function warning lamp, Left window regulator motor | 123 |
| 5. Central switch for window regulators in driver door, Central locking button, Driver door control unit | 124 |
| 6. Exterior mirror adjuster, Driver door control unit, Driver side exterior mirror | 125 |
| 7. Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Front passenger door lock unit | 126 |
| 8. Window regulator switch in front passenger door, Front passenger door control unit, Right window regulator motor | 127 |
| 9. Front passenger door control unit, Passenger side exterior mirror | 128 |
| 10. Contact strip in left sliding door. Onboard supply control unit. Rear left door lock unit | 129 |

| | |
|---|---------|
| 11. Contact strip in right sliding door, Onboard supply control unit, Rear right door lock unit | 130 |
| 12. Rear right door control unit, Onboard supply control unit | 131 |
| 13. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit | 132 |
| 14. Centre switch module 3 in dash panel, Onboard supply control unit, Rear wing door central locking motor | 133 |
| 15. Centre switch module 4 in dash panel, Interior light switch, Interior light relay | 134 |
| 16. Interior light relay, Left interior light, Right interior light | 135 |
| 17. Left interior light, Right interior light, Rear left interior light, Rear right interior light | 136 |
| 18. Left interior light, Right interior light, Rear left interior light, Rear right interior light | 137 |
| 19. Interior monitoring switch, Interior monitoring sensor | 138 |
| 20. Bonnet contact switch, Interior monitoring sensor 3, Alarm horn | 139 |
| 21. Data bus diagnostic interface | 140 |
| 012 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) | 141-145 |
| 1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) | 141 |
| 2. Vacuum sender, ABS control unit, Fuse holder B, Fuse holder C | 142 |
| 3. Centre switch module 2 in dash panel, Button for TCS and electronic stabilisation program, Front left speed sensor, ABS control unit | 143 |
| 4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit | 144 |
| 5. Handbrake warning switch, ABS control unit, Dash panel insert | 145 |
| 013 - Airbag systems | 146-152 |
| 1. Airbag systems | 146 |
| 2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder B | 147 |
| 3. Key operated switch to deactivate airbag on front passenger side, Front airbag crash sensor for driver side, Airbag control unit, Front passenger airbag unit, Airbag igniter on driver side | 148 |
| 4. Front airbag crash sensor for front passenger side, Crash sensor for head and side airbags on driver side, Crash sensor for head and side airbags on front passenger side, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter | 149 |
| 5. Side airbag pressure sensor on driver side, Side airbag pressure sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side | 150 |
| 6. Driver side belt switch, Front passenger side belt switch, Belt switch for seat row 1, middle, Seat occupied sensor, front passenger side, Centre seat occupied sensor, seat row 1, Airbag control unit | 151 |
| 7. Dash panel insert, Airbag warning lamp | 152 |
| 014 - Front and rear parking aid (PDC) , (7X2),(8A8) | 153-158 |
| 1. Front and rear parking aid (PDC) , (7X2),(8A8) | 153 |
| 2. Centre switch module 4 in dash panel, Parking aid button, Park assist steering button, Parking aid control unit | 154 |
| 3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit | 155 |
| 4. Rear left park assist steering sender, Rear right park assist steering sender, Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit | 156 |
| 5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit | 157 |
| 6. Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit | 158 |
| 015 - Front and rear parking aid (PDC) , (9X0),(9X1),(9X2),(9X3) | 159-165 |
| 1. Front and rear parking aid (PDC) , (9X0),(9X1),(9X2),(9X3) | 159 |
| 2. Centre switch module 4 in dash panel, Parking aid button, Park assist steering button, Parking aid control unit | 160 |
| 3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit | 161 |
| 4. Rear left park assist steering sender, Rear right park assist steering sender, Rear side right parking aid sender 2, Rear side left parking aid sender 2, Parking aid control unit | 162 |
| 5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit | 163 |
| 6. Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit | 164 |
| 7. Front side right parking aid sender 2, Front side left parking aid sender 2, Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit | 165 |
| 016 - Lane change assist | 166-168 |
| 1. Lane change assist | 166 |
| 2. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror | 167 |
| 3. Blind Spot Monitor control unit | 168 |
| 017 - Reverse warning beeper | 169-171 |

| | |
|--|---------|
| 1. Reverse warning beeper | 169 |
| 2. Centre switch module in dash panel, Switch-off button for reverse warning beeper, Reverse warning beeper, Reverse warning beeper control unit | 170-171 |
| 018 - Marker lights and tail light clusters | 172-177 |
| 1. Marker lights and tail light clusters | 172 |
| 2. Onboard supply control unit, Left tail light cluster, Left end-outline marker lamp bulb, Elevated side light, front left | 173 |
| 3. Onboard supply control unit, Right tail light cluster, Right end-outline marker lamp bulb, Elevated side light, front right | 174 |
| 4. Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Rear left side marker bulb, Rear right side marker bulb, Left number plate light, Right number plate light | 175 |
| 5. Onboard supply control unit, Centre left side marker bulb, Centre right side marker bulb | 176 |
| 6. Onboard supply control unit | 177 |
| 019 - LED headlights | 178-182 |
| 1. LED headlights | 178 |
| 2. Onboard supply control unit, Front left headlight | 179 |
| 3. Onboard supply control unit, Front right headlight | 180 |
| 4. Rotary light switch, Onboard supply control unit | 181 |
| 5. Rear right vehicle level sender, Front right vehicle level sender, Onboard supply control unit | 182 |
| 020 - Reversing camera (Rear Assist) | 183-186 |
| 1. Reversing camera (Rear Assist) | 183 |
| 2. Control unit 1 for information electronics, Reversing camera | 184 |
| 3. Centre switch module 4 in dash panel, Park assist steering button, Parking aid control unit, Camera for trailer manoeuvring system | 185 |
| 4. Exterior mirror adjuster, Trailer detector control unit, Driver door control unit, Dash panel insert | 186 |
| 021 - Preparation for reversing camera system , (KA8) | 187-188 |
| 1. Preparation for reversing camera system , (KA8) | 187 |
| 2. Onboard supply control unit, Control unit 1 for information electronics, Fuse holder C | 188 |
| 022 - Tyre Pressure Monitoring System | 189-190 |
| 1. Tyre Pressure Monitoring System | 189 |
| 2. Tyre Pressure Monitoring System control unit | 190 |
| 023 - Passenger compartment heater and ventilation system | 191-195 |
| 1. Passenger compartment heater and ventilation system | 191 |
| 2. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower | 192 |
| 3. Heater and air conditioning controls, Temperature flap control motor, Air recirculation flap control motor | 193 |
| 4. Heater and air conditioning controls, Rear temperature flap control motor, Air distribution flap control motor | 194 |
| 5. Heater and air conditioning controls, Additional display and operating unit 1, Warm air blower control unit, Rear warm air blower | 195 |
| 024 - Air conditioning system | 196-203 |
| 1. Air conditioning system | 196 |
| 2. Heater and air conditioning controls, Fresh air blower control unit, Air conditioning system control unit, Fresh air blower | 197 |
| 3. Heater and air conditioning controls, Additional display and operating unit 1, Rear evaporator temperature sender, Pressure sender for refrigerant circuit | 198 |
| 4. Heater and air conditioning controls, Air conditioner compressor regulating valve, Expansion valve for air conditioner refrigerant | 199 |
| 5. Heater and air conditioning controls, Evaporator temperature sensor, Temperature flap control motor, Air recirculation flap control motor | 200 |
| 6. Heater and air conditioning controls, Rear temperature flap control motor, Air distribution flap control motor | 201 |
| 7. Control unit for supplementary blower for air conditioning, Control unit for supplementary blower 2 for air conditioning, Supplementary blower for air conditioning | 202 |
| 8. Warm air blower control unit, Control unit for supplementary blower 2 for air conditioning, Rear warm air blower, Supplementary blower 2 for air conditioning | 203 |
| 025 - Climatronic | 204-213 |
| 1. Climatronic | 204 |
| 2. Heater and air conditioning controls, Fresh air blower control unit, Climatronic control unit, Fresh air blower | 205 |
| 3. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Warm air blower control unit, Rear warm air blower | 206 |
| 4. Heater and air conditioning controls, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Rear evaporator temperature sender, Expansion valve for air conditioner refrieraent. Left temperature flap control motor | 207 |

| | |
|---|---------|
| 5. Heater and air conditioning controls, Defroster flap control motor, Fresh air/air recirculation, air flow flap control motor | 208 |
| 6. Heater and air conditioning controls, Footwell vent temperature sender, Right temperature flap control motor, Front air distribution flap control motor | 209 |
| 7. Heater and air conditioning controls, Rear vent temperature sender, Rear temperature flap control motor | 210 |
| 8. Heater and air conditioning controls, Control unit for supplementary blower for air conditioning, Control unit for supplementary blower 2 for air conditioning, Supplementary blower for air conditioning, Supplementary blower 2 for air conditioning | 211 |
| 9. Heater and air conditioning controls, Additional display and operating unit 1, Sunlight penetration photosensor | 212 |
| 10. Heater and air conditioning controls, Evaporator temperature sensor, Air conditioner compressor regulating valve | 213 |
| 026 - Auxiliary air heater (PTC) | 214-215 |
| 1. Auxiliary air heater (PTC) | 214 |
| 2. Fuse holder A, Fuse holder B, Auxiliary air heater element | 215 |
| 027 - Auxiliary heater , (9M4),(7VF),(7VM) | 216-219 |
| 1. Auxiliary heater , (9M4),(7VF),(7VM) | 216 |
| 2. Temperature sensor on roof for air inlet on auxiliary air heater, Auxiliary air heater control unit, Metering pump 2, Air distribution flap control motor 2 | 217 |
| 3. Auxiliary air heater control unit, Remote control receiver for auxiliary heater, Earth connection 2, in interior wiring harness, Positive connection 3 (30a), in interior wiring harness | 218 |
| 4. Circulation pump relay, Auxiliary heater control unit, Metering pump, Circulation pump | 219 |
| 028 - Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (9M5),(7VL) | 220-223 |
| 1. Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (9M5),(7VL) | 220 |
| 2. Auxiliary heater control unit, Heater coolant shut-off valve, Fuse holder B, Metering pump | 221 |
| 3. Auxiliary heater control unit, Remote control receiver for auxiliary heater | 222 |
| 4. Circulation pump relay, Circulation pump | 223 |
| 029 - Roof ventilator | 224-226 |
| 1. Roof ventilator | 224 |
| 2. Switch-over relay 1 for roof ventilator, Roof ventilator | 225 |
| 3. Switch module on left of dash panel, Switch for roof ventilator to ventilate load area, Switch for roof ventilator to extract air from load area, Switch-over relay 2 for roof ventilator | 226 |
| 030 - Seat heating , (4A1),(4A3) | 227-230 |
| 1. Seat heating , (4A1),(4A3) | 227 |
| 2. Heated seat cushion for driver seat, Heated backrest for driver seat | 228 |
| 3. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat | 229 |
| 4. Button for left seat heating, Button for right seat heating | 230 |
| 031 - Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6) | 231-237 |
| 1. Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6) | 231 |
| 2. Special vehicle control unit, Fuse holder B, Fuse holder D | 232 |
| 3. Special vehicle control unit, Power take-off valve | 233 |
| 4. Power take-off switch, Working speed control switch, Ignition bypass button, Remote engine start button, Special vehicle control unit | 234 |
| 5. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2 | 235 |
| 6. Special vehicle control unit, Coupling point for special vehicles | 236 |
| 7. GPS aerial, LTE aerial 1, Coupling point for special vehicles | 237 |
| 032 - Interface for external use | 238-239 |
| 1. Interface for external use | 238 |
| 2. Relay for special installations, terminal 15, Electrical terminal strip for external use | 239 |
| 033 - Preparation for 3-way tip function | 240-243 |
| 1. Preparation for 3-way tip function | 240 |
| 2. Special vehicle control unit | 241 |
| 3. Switch module on left of dash panel, Tilting mechanism button, Special vehicle control unit | 242 |
| 4. Special vehicle control unit | 243 |
| 034 - Preparation for tail lift | 244-247 |
| 1. Preparation for tail lift | 244 |
| 2. Relay for tail lift | 245 |
| 3. Centre switch module 2 in dash panel, Tail lift switch, Relay for tail lift, Coupling point 3 for tail lift | 246 |
| 4. Relay for tail lift, Coupling point 1 for tail lift, Coupling point 2 for tail lift | 247 |
| 035 - Rotating lights (yellow) , (9LN),(9LP) | 248-250 |
| 1. Rotating lights (yellow) . (9LN).(9LP) | 248 |

| | |
|---|---------|
| 2. Rotating light switch, Rotating light control unit | 249 |
| 3. Rotating light control unit, Front left rotating light bulb, Rear right rotating light bulb | 250 |
| 036 - Rotating light , (9LX) | 251-253 |
| 1. Rotating light , (9LX) | 251 |
| 2. Rotating light control unit, Fuse holder C, Fuse holder D | 252 |
| 3. Rotating light relay, Rotating light control unit | 253 |
| 037 - Window wash/wipe system, headlight washer system | 254-258 |
| 1. Window wash/wipe system, headlight washer system | 254 |
| 2. Onboard supply control unit, Fuse holder B, Fuse holder C, Windscreen wiper motor, Washer pump, Headlight washer system pump | 255 |
| 3. Air humidity, rain and light sensor, Wiper motor relay 1, Wiper motor relay 2, Onboard supply control unit | 256 |
| 4. Onboard supply control unit, Rear left wing door window wiper motor, Rear right wing door window wiper motor | 257 |
| 5. Windscreen wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Steering column electronics control unit | 258 |
| 038 - Windscreen heater | 259-260 |
| 1. Windscreen heater | 259 |
| 2. Heated windscreen switch, Heated windscreen relay, Heated windscreen relay 2, Heated windscreen | 260 |
| 039 - Programmable special functions , (IS7),(IS8) | 261-268 |
| 1. Programmable special functions , (IS7),(IS8) | 261 |
| 2. Special vehicle control unit, Fuse holder B, Fuse holder D | 262 |
| 3. Special vehicle control unit, Power take-off valve | 263 |
| 4. Ignition bypass button, Remote engine start button, Wireless data transfer button, Special vehicle control unit | 264 |
| 5. Switch module 1 in dash panel, next to steering wheel, Power take-off switch, Special vehicle control unit | 265 |
| 6. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2 | 266 |
| 7. Special vehicle control unit, Coupling point for special vehicles | 267 |
| 8. Tachograph, GPS aerial, LTE aerial 1, Coupling point for special vehicles | 268 |
| 040 - Interior socket, 230 V, 110 V and 12 V socket, cigarette lighter , (EU1),(EU4),(7B3),(7B5), (7B6),(7B7) | 269-273 |
| 1. Interior socket, 230 V, 110 V and 12 V socket, cigarette lighter , (EU1),(EU4),(7B3),(7B5),(7B6), (7B7) | 269 |
| 2. 12 V socket | 270 |
| 3. 12 V socket, 12 V socket 2, 12 V socket 3 | 271 |
| 4. 12 V socket 4, 12 V socket 5, 12 V socket 6 | 272 |
| 5. Battery charger, 230 or 110 Volt/12 Volt, 220 V automatic personnel protection circuit breaker, Exterior socket, 230 V, 110 V, Interior socket, 230 V, 110 V | 273 |
| 041 - 230 V socket , (9Z3) | 274-275 |
| 1. 230 V socket , (9Z3) | 274 |
| 2. Interior socket, 230 V, 110 V, DC/AC converter with socket, 12 V - 230 V | 275 |
| 042 - Multifunction steering wheel , (2ZA),(2ZW) | 276-279 |
| 1. Multifunction steering wheel , (2ZA),(2ZW) | 276 |
| 2. Steering column electronics control unit, Heated steering wheel | 277 |
| 3. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side | 278 |
| 4. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Steering wheel heater button, Multifunction steering wheel control unit | 279 |
| 043 - Radiator fan | 280-282 |
| 1. Radiator fan | 280 |
| 2. Fuse holder C, Jump start connection, Radiator fan, Radiator fan 2 | 281 |
| 3. Engine/motor control unit, Radiator fan | 282 |
| 044 - Transfer box (centre differential lock, all-wheel drive), differential lock (axle differential lock, rear final drive) , (1Y4) | 283-285 |
| 1. Transfer box (centre differential lock, all-wheel drive), differential lock (axle differential lock, rear final drive) , (1Y4) | 283 |
| 2. Rear differential lock switch, Differential lock control unit | 284 |
| 3. Axle differential lock Hall sender 1, Differential lock control unit | 285 |
| 045 - All-wheel drive , (1X1) | 286-287 |
| 1. All-wheel drive , (1X1) | 286 |
| 2. All-wheel drive control unit, All-wheel drive coupling pump | 287 |
| 046 - Electromechanical steering | 288-289 |
| 1. Electromechanical steering | 288 |
| 2. Steering angle sender. Steering moment sender. Power steering control unit. Electromechanical | 289 |

| | |
|---|---------|
| power steering motor | |
| 047 - Radio navigation system , (7UF),(I8E) | 290-298 |
| 1. Radio navigation system , (7UF),(I8E) | 290 |
| 2. Multimedia system operating unit, Control unit 1 for information electronics | 291 |
| 3. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker | 292 |
| 4. Control unit 1 for information electronics, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker | 293 |
| 5. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2 | 294 |
| 6. Control unit 1 for information electronics, Connection for external audio sources | 295 |
| 7. Control unit 1 for information electronics, Connection for external audio sources | 296 |
| 8. Control unit 1 for information electronics, Internal microphone, Radio aerial | 297 |
| 9. Control unit 1 for information electronics, Roof aerial, GPS aerial | 298 |
| 048 - Radio system , (I7D) | 299-302 |
| 1. Radio system , (I7D) | 299 |
| 2. Control unit 1 for information electronics | 300 |
| 3. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker | 301 |
| 4. Control unit 1 for information electronics, Roof aerial, Aerial, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker | 302 |
| 049 - Mobile telephone systems , (9ZX) | 303-304 |
| 1. Mobile telephone systems , (9ZX) | 303 |
| 2. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Internal microphone | 304 |
| 050 - Fuse assignment | 305-331 |
| 1. Fuse assignment | 305 |
| 2. Battery, Fuse holder A | 306 |
| 3. Second battery charging circuit relay, Jump start connection | 307 |
| 4. Second battery, Fuse holder F | 308 |
| 5. Fuse holder C | 309 |
| 6. Fuse holder C | 310 |
| 7. Fuse holder C | 311 |
| 8. Terminal 15 voltage supply relay 2, Fuse holder C | 312 |
| 9. Fuse holder C | 313 |
| 10. Fuse holder C | 314 |
| 11. Fuse holder C | 315 |
| 12. Fuse holder C | 316 |
| 13. Fuse holder C | 317 |
| 14. Fuse holder C | 318 |
| 15. Heated rear window relay, Horn relay, Fuse holder C | 319 |
| 16. Terminal 15 voltage supply relay, Relay for special installations, terminal 15, Electrical terminal strip for external use | 320 |
| 17. Fuse holder B | 321 |
| 18. Fuse holder B | 322 |
| 19. Fuse holder B | 323 |
| 20. Fuse holder B | 324 |
| 21. Fuse holder B | 325 |
| 22. Fuse holder B | 326 |
| 23. Fuse holder B | 327 |
| 24. Fuse holder B | 328 |
| 25. Fuse holder B | 329 |
| 26. Fuse holder D | 330 |
| 27. Heated windscreen relay, Heated windscreen relay 2, Fuse holder D | 331 |
| 051 - Trailer coupling , (1D1),(1D2),(1D7),(1D8) | 332-334 |
| 1. Trailer coupling , (1D1),(1D2),(1D7),(1D8) | 332 |
| 2. Trailer detector control unit, Fuse holder B | 333 |
| 3. Trailer detector control unit, Trailer socket | 334 |
| 052 - Basic equipment | 335-359 |
| 1. Basic equipment | 335 |
| 2. Battery, Starter relay 1, Starter relay 2, Fuse holder B | 336 |
| 3. Fuse holder C | 337 |
| 4. Onboard supply control unit, Fuse holder C | 338 |
| 5. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit | 339 |
| 6. Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit | 340 |
| 7. Rotarv liicht switch. Onboard supply control unit | 341 |

| | |
|---|---------|
| 8. Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit | 342 |
| 9. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight | 343 |
| 10. Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element | 344 |
| 11. Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light | 345 |
| 12. Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light | 346 |
| 13. Start/Stop operation button, Front right brake pad wear sender, Rear left brake pad wear sender, Oil level and oil temperature sender, Onboard supply control unit | 347 |
| 14. Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit | 348 |
| 15. Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light | 349 |
| 16. Onboard supply control unit, Left tail light cluster, Heated rear window in left wing door | 350 |
| 17. Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door | 351 |
| 18. Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb | 352 |
| 19. Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right | 353 |
| 20. Onboard supply control unit, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb, Centre right side marker bulb | 354 |
| 21. Onboard supply control unit, Data bus diagnostic interface | 355 |
| 22. Engine/motor control unit | 356 |
| 23. Immobiliser reader coil, Dash panel insert | 357 |
| 24. Fuel delivery unit, Fuel pump relay, Dash panel insert | 358 |
| 25. Handbrake warning switch, Dash panel insert | 359 |
| 053 - 2.0l diesel engine , DAVA | 360-380 |
| 1. 2.0l diesel engine , DAVA | 360 |
| 2. Battery, Alternator with voltage regulator, Fuse holder B, Jump start connection | 361 |
| 3. Fuse holder C | 362 |
| 4. Automatic glow period control unit, Engine/motor control unit | 363 |
| 5. Engine/motor control unit, Charge pressure control solenoid valve 2, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4 | 364 |
| 6. Engine speed sender, Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Turbine changeover valve | 365 |
| 7. Coolant temperature sender, Fuel temperature sender, Fuel pressure sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit | 366 |
| 8. Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit | 367 |
| 9. Throttle valve module, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit | 368 |
| 10. Exhaust gas recirculation valve 1, Exhaust gas temperature sender 2, Variable intake manifold position sender, Position sender 2 for charge pressure positioner, Engine/motor control unit | 369 |
| 11. Knock sensor 1, Knock sensor 2, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit | 370 |
| 12. Accelerator pedal module, Air mass meter, Engine/motor control unit | 371 |
| 13. Lambda probe 1 before catalytic converter, Particulate sensor, Engine/motor control unit, Control unit for sensor electronics | 372 |
| 14. NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2, Starter relay 1, Starter relay 2 | 373 |
| 15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve | 374 |
| 16. Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Valve for oil pressure control, Auxiliary pump for heating | 375 |
| 17. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Pump for exhaust gas recirculation cooler | 376 |
| 18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Relay for reducing agent metering system, Heater for reducing agent line (heater circuit 2) | 377 |
| 19. Clutch position sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent. Radiator fan | 378 |

| | |
|---|---------|
| 20. Brake light switch, Data bus diagnostic interface, Engine/motor control unit | 379 |
| 21. Steering column electronics control unit, Engine/motor control unit | 380 |
| 054 - 2.0l diesel engine , DAUA,DAUB | 381-401 |
| 1. 2.0l diesel engine , DAUA,DAUB | 381 |
| 2. Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection | 382 |
| 3. Fuse holder C | 383 |
| 4. Automatic glow period control unit, Engine/motor control unit | 384 |
| 5. Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4 | 385 |
| 6. Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Variable intake manifold position sender, Position sender for charge pressure positioner, Engine/motor control unit | 386 |
| 7. Throttle valve module, Exhaust gas recirculation valve 1, Fuel pressure sender, Engine/motor control unit | 387 |
| 8. Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit | 388 |
| 9. Hall sender, Knock sensor 1, Water separator sender, Knock sensor 2, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit | 389 |
| 10. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit | 390 |
| 11. Engine speed sender, Control unit for NOx sender, Engine/motor control unit | 391 |
| 12. Engine/motor control unit, Control unit for sensor electronics, Control unit for NOx sender 2 | 392 |
| 13. Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4 | 393 |
| 14. Oil pressure switch, Accelerator pedal module, Engine/motor control unit, Fuel pressure regulating valve | 394 |
| 15. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Pump for exhaust gas recirculation cooler, Auxiliary pump for heating | 395 |
| 16. Lambda probe 1 before catalytic converter, Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Injector for reducing agent | 396 |
| 17. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system | 397 |
| 18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2) | 398 |
| 19. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit | 399 |
| 20. Engine/motor control unit, Radiator fan | 400 |
| 21. Engine/motor control unit, Starter relay 1, Starter relay 2 | 401 |
| 055 - 2.0l diesel engine , DAWA,DAWB | 402-422 |
| 1. 2.0l diesel engine , DAWA,DAWB | 402 |
| 2. Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection | 403 |
| 3. Fuse holder C | 404 |
| 4. Automatic glow period control unit, Engine/motor control unit | 405 |
| 5. Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4 | 406 |
| 6. Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Variable intake manifold position sender, Engine/motor control unit, Charge pressure control solenoid valve 2, Turbine changeover valve | 407 |
| 7. Throttle valve module, Position sender 2 for charge pressure positioner, Position sender for charge pressure positioner, Engine/motor control unit | 408 |
| 8. Exhaust gas recirculation valve 1, Intake manifold sender, Fuel pressure sender, Pressure differential sender, Engine/motor control unit | 409 |
| 9. Hall sender, Knock sensor 1, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit | 410 |
| 10. Knock sensor 2, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Coolant temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit | 411 |
| 11. Engine speed sender, Coolant temperature sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit | 412 |
| 12. Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2 | 413 |
| 13. Engine/motor control unit. Control unit for sensor electronics. Iniector. cvlinder 1. Iniector. | 414 |

| | |
|---|---------|
| cylinder 2, Injector, cylinder 3, Injector, cylinder 4 | |
| 14. Accelerator pedal module, Engine/motor control unit, Starter relay 1, Starter relay 2 | 415 |
| 15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Valve for oil pressure control, Auxiliary pump for heating | 416 |
| 16. Lambda probe 1 before catalytic converter, Engine/motor control unit, Charge air cooling pump, Pump for exhaust gas recirculation cooler | 417 |
| 17. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system, Heater element for crankcase breather, Fuel metering valve | 418 |
| 18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Heater for reducing agent line (heater circuit 2) | 419 |
| 19. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit | 420 |
| 20. Engine/motor control unit, Radiator fan | 421 |
| 21. Water separator sender, Air mass meter, Gearbox neutral position sender, Engine/motor control unit | 422 |
| 056 - 2.0l diesel engine , DASA,DASB | 423-443 |
| 1. 2.0l diesel engine , DASA,DASB | 423 |
| 2. Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection | 424 |
| 3. Fuse holder C | 425 |
| 4. Automatic glow period control unit, Engine/motor control unit | 426 |
| 5. Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4 | 427 |
| 6. Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Variable intake manifold position sender, Engine/motor control unit, Charge pressure control solenoid valve 2, Turbine changeover valve | 428 |
| 7. Throttle valve module, Position sender 2 for charge pressure positioner, Position sender for charge pressure positioner, Engine/motor control unit | 429 |
| 8. Exhaust gas recirculation valve 1, Intake manifold sender, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit | 430 |
| 9. Hall sender, Knock sensor 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit | 431 |
| 10. Knock sensor 2, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Coolant temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit | 432 |
| 11. Engine speed sender, Coolant temperature sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit | 433 |
| 12. Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2 | 434 |
| 13. Engine/motor control unit, Control unit for sensor electronics, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4 | 435 |
| 14. Accelerator pedal module, Air mass meter, Engine/motor control unit | 436 |
| 15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Valve for oil pressure control, Auxiliary pump for heating | 437 |
| 16. Lambda probe 1 before catalytic converter, Engine/motor control unit, Charge air cooling pump, Pump for exhaust gas recirculation cooler | 438 |
| 17. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system, Heater element for crankcase breather, Fuel metering valve | 439 |
| 18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Heater for reducing agent line (heater circuit 2) | 440 |
| 19. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit | 441 |
| 20. Engine/motor control unit, Radiator fan | 442 |
| 21. Water separator sender, Gearbox neutral position sender, Engine/motor control unit, Starter relay 1, Starter relay 2 | 443 |
| 057 - Convenience system | 444-465 |
| 1. Convenience system | 444 |
| 2. Fuse holder C | 445 |
| 3. Driver door control unit, Driver door lock unit | 446 |
| 4. Driver door control unit, Central locking SAFELock function warning lamp, Left window regulator motor | 447 |
| 5. Central switch for window regulators in driver door, Central locking button, Driver door control unit | 448 |
| 6. Exterior mirror adjuster, Driver door control unit, Driver side exterior mirror | 449 |
| 7. Driver door control unit. Front passenger door control unit. Driver side exterior mirror. Front | 450 |

| | |
|--|---------|
| passenger door lock unit | |
| 8. Window regulator switch in front passenger door, Front passenger door control unit, Right window regulator motor | 451 |
| 9. Front passenger door control unit, Passenger side exterior mirror | 452 |
| 10. Contact strip in left sliding door, Onboard supply control unit, Rear left door lock unit | 453 |
| 11. Contact strip in right sliding door, Onboard supply control unit, Rear right door lock unit | 454 |
| 12. Rear right door control unit, Onboard supply control unit | 455 |
| 13. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit | 456 |
| 14. Centre switch module 3 in dash panel, Onboard supply control unit, Rear wing door central locking motor | 457 |
| 15. Centre switch module 4 in dash panel, Interior light switch, Interior light relay | 458 |
| 16. Interior light relay | 459 |
| 17. Left interior light, Right interior light | 460 |
| 18. Left interior light, Right interior light, Rear left interior light, Rear right interior light | 461 |
| 19. Left interior light, Right interior light, Rear left interior light, Rear right interior light | 462 |
| 20. Interior monitoring switch, Interior monitoring sensor | 463 |
| 21. Bonnet contact switch, Interior monitoring sensor 3, Alarm horn | 464 |
| 22. Data bus diagnostic interface | 465 |
| 058 - Marker lights and tail light clusters | 466-471 |
| 1. Marker lights and tail light clusters | 466 |
| 2. Left tail light cluster, Left end-outline marker lamp bulb, Elevated side light, front left | 467 |
| 3. Right tail light cluster, Right end-outline marker lamp bulb | 468 |
| 4. Elevated side light, front right, Left number plate light, Right number plate light | 469 |
| 5. Front left side marker bulb, Front right side marker bulb, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb, Centre right side marker bulb | 470 |
| 6. Coupling point for additional turn signal, left-side, Coupling point for additional turn signal, right-side | 471 |
| 059 - Preparation for reversing camera system , (9CP),(KA5) | 472-473 |
| 1. Preparation for reversing camera system , (9CP),(KA5) | 472 |
| 2. Onboard supply control unit, Control unit 1 for information electronics, Fuse holder B, Fuse 12 on fuse holder B | 473 |
| 060 - Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6) | 474-480 |
| 1. Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6) | 474 |
| 2. Special vehicle control unit, Fuse holder B, Fuse holder D | 475 |
| 3. Special vehicle control unit, Power take-off valve | 476 |
| 4. Power take-off switch, Working speed control switch, Ignition bypass button, Remote engine start button, Special vehicle control unit | 477 |
| 5. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2 | 478 |
| 6. Special vehicle control unit, Coupling point for special vehicles | 479 |
| 7. GPS aerial, LTE aerial 1, Coupling point for special vehicles | 480 |
| 061 - Window wash/wipe system, headlight washer system | 481-485 |
| 1. Window wash/wipe system, headlight washer system | 481 |
| 2. Air humidity, rain and light sensor, Onboard supply control unit, Fuse holder B, Fuse holder C, Windscreen wiper motor, Washer pump, Headlight washer system pump | 482 |
| 3. Wiper motor relay 1, Wiper motor relay 2, Onboard supply control unit | 483 |
| 4. Onboard supply control unit, Rear left wing door window wiper motor, Rear right wing door window wiper motor | 484 |
| 5. Windscreen wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Steering column electronics control unit | 485 |
| 062 - Programmable special functions , (IS7),(IS8) | 486-493 |
| 1. Programmable special functions , (IS7),(IS8) | 486 |
| 2. Special vehicle control unit, Fuse holder B, Fuse holder D | 487 |
| 3. Special vehicle control unit, Power take-off valve | 488 |
| 4. Ignition bypass button, Remote engine start button, Wireless data transfer button, Special vehicle control unit | 489 |
| 5. Switch module 1 in dash panel, next to steering wheel, Power take-off switch, Special vehicle control unit | 490 |
| 6. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2 | 491 |
| 7. Special vehicle control unit, Coupling point for special vehicles | 492 |
| 8. Tachograph, GPS aerial, LTE aerial 1, Coupling point for special vehicles | 493 |
| 063 - Radiator fan | 494-496 |
| 1. Radiator fan | 494 |
| 2. Fuse holder C, Jump start connection, Radiator fan, Radiator fan 2 | 495 |
| 3. Engine/motor control unit. Radiator fan | 496 |

| | |
|---|---------|
| 064 - Electrically adjustable lumbar support on seat without electric adjustment , (3TF),(3TC), (3TP) | 497-498 |
| 1. Electrically adjustable lumbar support on seat without electric adjustment , (3TF),(3TC),(3TP) | 497 |
| 2. Front left lumbar support adjustment switch, Fuse holder C, Front left lumbar support adjustment motor | 498 |
| 065 - Electrically adjustable lumbar support , (3TK),(3SK) | 499-503 |
| 1. Electrically adjustable lumbar support , (3TK),(3SK) | 499 |
| 2. Driver seat lumbar support adjustment switch, Driver seat massage function button, Control unit for front left massage seat, Fuse holder B | 500 |
| 3. Control unit for front left massage seat, Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor | 501 |
| 4. Front passenger seat lumbar support adjustment switch, Front passenger seat massage function button, Control unit for front right massage seat | 502 |
| 5. Front passenger lumbar support height adjustment sender, Front passenger lumbar support longitudinal adjustment sender, Control unit for front right massage seat, Lumbar support for front passenger seat, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor | 503 |
| 066 - 8-speed automatic gearbox 0DR , (G1F@1X2) | 504-507 |
| 1. 8-speed automatic gearbox 0DR , (G1F@1X2) | 504 |
| 2. Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C | 505 |
| 3. Automatic gearbox control unit, Selector lever sensors control unit | 506 |
| 4. Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display | 507 |
| 067 - 8-speed automatic gearbox 09Q , (G1F@1X0@G1G@1X1) | 508-513 |
| 1. 8-speed automatic gearbox 09Q , (G1F@1X0@G1G@1X1) | 508 |
| 2. Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C | 509 |
| 3. Automatic gearbox control unit, Selector lever sensors control unit, Gearbox | 510 |
| 4. Automatic gearbox control unit, Gearbox | 511 |
| 5. Automatic gearbox control unit, Gearbox | 512 |
| 6. Automatic gearbox control unit, Gearbox | 513 |
| 068 - Preparation for 3-way tip function , (Henschel) | 514-515 |
| 1. Preparation for 3-way tip function , (Henschel) | 514 |
| 2. Main switch for hydraulic system, Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Warning buzzer for hydraulic system, Hydraulic system, Hydraulic pump for tilting/tipping mechanism | 515 |
| 069 - Preparation for 3-way tip function , (Schoon) | 516-517 |
| 1. Preparation for 3-way tip function , (Schoon) | 516 |
| 2. Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Blocking diode, Blocking diode 2, Hydraulic system | 517 |
| 070 - Box body , (9CP),(KA5),(Schmitz Cargobull) | 518-520 |
| 1. Box body , (9CP),(KA5),(Schmitz Cargobull) | 518 |
| 2. Reversing camera | 519 |
| 3. High-level brake light bulb, Load area illumination bulb, Left end-outline marker lamp bulb, Right end-outline marker lamp bulb, Elevated side light, front left, Elevated side light, front right | 520 |
| 071 - Box body , (Junge) | 521-523 |
| 1. Box body , (Junge) | 521 |
| 2. Left tail light cluster, High-level brake light bulb, Load area illumination bulb | 522 |
| 3. Right tail light cluster, Left end-outline marker lamp bulb, Right end-outline marker lamp bulb | 523 |
| 072 - Box body , (Spi) | 524-527 |
| 1. Box body , (Spi) | 524 |
| 2. Left tail light cluster, Rear left side marker bulb, Left end-outline marker lamp bulb | 525 |
| 3. Right tail light cluster, Rear right side marker bulb, Centre left side marker bulb, Centre right side marker bulb, Right end-outline marker lamp bulb | 526 |
| 4. High-level brake light bulb, Load area illumination bulb | 527 |
| 073 - Tail lift , (Bär) | 528-532 |
| 1. Tail lift , (Bär) | 528 |
| 2. Tail lift control unit, Hydraulic system valve 1, Fuse 1 in fuse holder, Coupling point 3 for tail lift | 529 |
| 3. Tail lift pressure switch, Tail lift control unit, Hydraulics motor relay, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Tail lift hydraulics motor | 530 |
| 4. Tail lift operating unit, Tail lift control unit | 531 |
| 5. Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Foot-operated switch unit for tail lift, Tail lift control unit, Left additional turn signal, Right additional turn signal | 532 |
| 074 - Tail lift . (Sörensen) | 533-537 |

| | |
|--|---------|
| 1. Tail lift , (Sörensen) | 533 |
| 2. Tail lift pressure switch, Tail lift control unit, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Fuse 1 in fuse holder, Fuse 2 in fuse holder, Coupling point 3 for tail lift | 534 |
| 3. Tail lift control unit, Hydraulics motor relay, Hydraulic system valve 1, Tail lift hydraulics motor | 535 |
| 4. Tail lift operating unit, Tail lift control unit | 536 |
| 5. Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Foot-operated switch unit for tail lift, Tail lift control unit, Left additional turn signal, Right additional turn signal | 537 |
| 075 - Tail lift , (Dautel) | 538-542 |
| 1. Tail lift , (Dautel) | 538 |
| 2. Tail lift control unit, Hydraulic system valve 2, Hydraulic system valve 4, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Fuse 1 in fuse holder, Fuse 2 in fuse holder, Coupling point 3 for tail lift | 539 |
| 3. Tail lift control unit, Hydraulics motor relay, Hydraulic system valve 1, Fuse 3 in fuse holder, Tail lift hydraulics motor | 540 |
| 4. Tail lift operating unit, Tail lift control unit | 541 |
| 5. Tail lift switch, Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Tail lift control unit, Left additional turn signal, Right additional turn signal | 542 |
| 076 - Tail lift , (Palfinger) | 543-547 |
| 1. Tail lift , (Palfinger) | 543 |
| 2. Tail lift control unit, Hydraulic system valve 2, Hydraulic system valve 4, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Coupling point 3 for tail lift | 544 |
| 3. Tail lift control unit, Hydraulics motor relay, Hydraulic system valve 1, Fuse 1 in fuse holder, Fuse 2 in fuse holder, Tail lift hydraulics motor | 545 |
| 4. Tail lift operating unit, Tail lift control unit | 546 |
| 5. Tail lift switch, Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Tail lift pressure switch, Tail lift control unit, Left additional turn signal, Right additional turn signal | 547 |
| 077 - High-voltage battery system | 548-569 |
| 1. High-voltage battery system | 548 |
| 2. Charging unit 1 for high-voltage battery, Data bus diagnostic interface, Fuse holder B, Fuse holder C, Maintenance connector for high-voltage system | 549 |
| 3. Airbag control unit | 550 |
| 4. High-voltage battery 1, Power and control electronics for electric drive, Electric drive control unit, High-voltage system fuse 3 | 551 |
| 5. High-voltage battery 1, High-voltage battery charging socket 1 | 552 |
| 6. High-voltage battery 1, Battery regulation control unit, High-voltage heater (PTC) control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery | 553 |
| 7. High-voltage battery 1, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery | 554 |
| 8. High-voltage battery 1, Module monitor control unit for batteries, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery | 555 |
| 9. High-voltage battery 1, Module monitor control unit for batteries, DC charge contactor 1, DC charge contactor 2, Switching unit for high-voltage battery | 556 |
| 10. High-voltage battery 1, Module monitor control unit for batteries, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery | 557 |
| 11. High-voltage battery 1, Current sensor for high-voltage battery, Module monitor control unit for batteries, High-voltage battery power contactor 2, Switching unit for high-voltage battery, High-voltage system fuse 1 | 558 |
| 12. High-voltage battery 1 | 559 |
| 13. High-voltage battery 1, Battery module 1, Battery module 2, Battery module 0 | 560 |
| 14. High-voltage battery 1, Battery module 2, Battery module 3, Battery module 4, Battery module 5, Battery module 6, Battery module 0 | 561 |
| 15. High-voltage battery 1, Battery module 5, Battery module 6, Battery module 7, Battery module 8 | 562 |
| 16. High-voltage battery 1, Battery module 5, Battery module 8, Battery module 9, Battery module 10, Battery module 11 | 563 |
| 17. High-voltage battery 1, Battery module 9, Battery module 11, Battery module 12, Battery module 13, Battery module 14 | 564 |
| 18. High-voltage battery 1, Battery module 12, Battery module 14, Battery module 15, Battery module 16 | 565 |
| 19. High-voltage battery 1, Battery module 15, Battery module 16, Battery module 17, Battery module 18, Battery module 19 | 566 |
| 20. High-voltage battery 1, Battery module 18, Battery module 19, Battery module 20, Battery module 21 | 567 |
| 21. Batterv module 22 | |

| | |
|---|---------|
| 21. High-voltage battery 1, Battery module 21, Battery module 22 | 568 |
| 22. High-voltage battery 1, Battery module 24, Battery module 25 | 569 |
| 078 - Pilot line for high-voltage system | 570-572 |
| 1. Pilot line for high-voltage system | 570 |
| 2. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Control unit for air conditioning compressor, High-voltage heater (PTC) control unit, Maintenance connector for high-voltage system, Three-phase current drive | 571 |
| 3. High-voltage battery 1, Battery regulation control unit | 572 |
| 079 - Charging sockets for high-voltage system , (ES7) | 573-577 |
| 1. Charging sockets for high-voltage system , (ES7) | 573 |
| 2. Module for battery charge selector buttons, Immediate charge button, Charge voltage control unit for high-voltage battery, Fuse holder B | 574 |
| 3. Data bus diagnostic interface, Selector lever sensors control unit, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1 | 575 |
| 4. Onboard charging unit, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1 | 576 |
| 5. High-voltage battery 1, High-voltage battery charging socket 1 | 577 |
| 080 - Electric drive system , EBHA | 578-592 |
| 1. Electric drive system , EBHA | 578 |
| 2. Vacuum pump relay, Battery monitor control unit, Fuse holder B, Vacuum pump | 579 |
| 3. Engine/motor control unit, Fuse holder C | 580 |
| 4. Brake light switch, Radiator fan control unit, Engine/motor control unit | 581 |
| 5. Data bus diagnostic interface, Engine/motor control unit, Thermal management control unit | 582 |
| 6. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit | 583 |
| 7. Radiator outlet coolant temperature sender, Temperature sender after heat exchanger for high-voltage battery, Temperature sender after heat exchanger, Temperature sender after electric drive motor, Engine/motor control unit, Coolant circulation pump before high-voltage heater (PTC) electronics for electric drive, Coolant circulation pump before high-voltage heater (PTC) | 584 |
| 8. High-voltage battery 1, Voltage converter, Power and control electronics for electric drive, Battery regulation control unit, Electric drive control unit, High-voltage system fuse 3 | 585 |
| 9. DC/AC converter for drive motor, Power and control electronics for electric drive, Three-phase current drive, Electric drive motor | 586 |
| 10. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Control unit for high-voltage battery charging unit | 587 |
| 11. Charging unit 1 for high-voltage battery, Onboard charging unit, Power and control electronics for electric drive, Electrical air conditioner compressor | 588 |
| 12. Charging unit 1 for high-voltage battery, High-voltage heater (PTC) control unit | 589 |
| 13. ABS control unit, Coupling point in engine compartment, left, Maintenance connector for high-voltage system | 590 |
| 14. Onboard supply control unit, Selector lever sensors control unit | 591 |
| 15. Selector lever sensors control unit, Selector lever position display | 592 |
| 081 - Engine sound generator | 593-594 |
| 1. Engine sound generator | 593 |
| 2. Engine sound generator control unit, Actuator 1 for engine sound generator, Fuse 30 on fuse holder B | 594 |
| 082 - Heat pump | 595-602 |
| 1. Heat pump | 595 |
| 2. Shut-off valve relay 1, Thermal management control unit, Fuse holder B, Fuse holder C | 596 |
| 3. Air conditioning system coolant temperature sender, Thermal management control unit, Coolant circulation pump before high-voltage heater (PTC) | 597 |
| 4. Heater and air conditioning controls, Air quality sensor, Fresh air blower control unit, Climatronic control unit, Data bus diagnostic interface, Thermal management control unit | 598 |
| 5. Refrigerant expansion valve 1, Refrigerant expansion valve 2, Refrigerant expansion valve 3, Refrigerant shut-off valve 1 | 599 |
| 6. Refrigerant pressure and temperature sender 2, Refrigerant shut-off valve 4, Refrigerant shut-off valve 5 | 600 |
| 7. Refrigerant pressure and temperature sender 3, Refrigerant pressure and temperature sender 4, Refrigerant pressure and temperature sender 5, Refrigerant pressure and temperature sender 6 | 601 |
| 8. Control unit for air conditioning compressor, High-voltage heater (PTC) control unit, Heater coolant shut-off valve, Electrical air conditioner compressor, High-voltage heater (PTC) | 602 |
| 083 - Earthing concept | 603-637 |
| 1. Earthing concept | 603 |
| 2. Front right brake pad wear sender, Oil level and oil temperature sender, Front stop command light, Control unit for NOx sender, Front right headlight, Headlight washer system pump, Left washer jet heater element. Right washer jet heater element | 604 |

| | |
|--|-----|
| 3. Bonnet contact switch, Adaptive cruise control unit, Engine/motor control unit, Front left headlight, Coupling point for front flashing lights in special vehicle, Windscreen wiper motor | 605 |
| 4. Treble horn, Bass horn, Left fog light bulb, Right fog light bulb, Air conditioner compressor regulating valve, Pump for exhaust gas recirculation cooler | 606 |
| 5. Oil pressure switch, Oil pressure switch for reduced oil pressure, Gearbox, Fuel pressure regulating valve, Charge air cooling pump, Auxiliary pump for heating | 607 |
| 6. Brake light switch, Brake fluid level warning contact, Alarm horn, Automatic gearbox control unit, Second battery charging circuit relay | 608 |
| 7. Battery, Second battery, Pressure sender for refrigerant circuit, Heated windscreen relay, ABS control unit, Automatic glow period control unit, Radiator fan control unit, Heated windscreen relay 2, Radiator fan control unit 2 | 609 |
| 8. Fuel delivery unit, Oil temperature sender 2, Auxiliary heater control unit, Auxiliary air heater control unit, Control unit for NOx sender 2, Power take-off valve, Metering pump, Circulation pump, Metering pump 2 | 610 |
| 9. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for sensor electronics, Front interior light, Heater for reducing agent line (heater circuit 2) | 611 |
| 10. Interior monitoring sensor, Front left rotating light bulb, Rear right rotating light bulb, High-level brake light bulb, Left interior light, Right interior light, Driver side reading light, Rear interior light | 612 |
| 11. Right roof mounted turn signal bulb, Centre left side marker bulb, Centre right side marker bulb | 613 |
| 12. Additional display and operating unit 1, Trailer detector control unit, Reversing camera, Front camera for driver assist systems, Coupling point for special vehicles, 12 V socket 4, 12 V socket 5, 12 V socket 3 for special vehicles | 614 |
| 13. Parking aid control unit, Data bus diagnostic interface, Elevated side light, front left | 615 |
| 14. Wiper motor relay 2, Driver door control unit, Shut-off valve relay 1, Front left side marker bulb, Driver side exterior mirror, Driver door lock unit | 616 |
| 15. Switch module 1 in dash panel, next to steering wheel, Onboard supply control unit, Dash panel insert, 12 V socket | 617 |
| 16. Rotary light switch, Switch module on left of dash panel, Switch module 2 in dash panel, next to steering wheel, Headlight range control regulator, Special vehicle control unit | 618 |
| 17. Steering column electronics control unit, Diagnostic connection | 619 |
| 18. Centre switch module 4 in dash panel, Centre switch module 1 in dash panel, Telematics button module, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Coupling point for roof, left | 620 |
| 19. Tachograph | 621 |
| 20. Fresh air blower control unit, 12 V socket 3 | 622 |
| 21. Clutch position sender, Front passenger door control unit, Front right side marker bulb, Remote control receiver for auxiliary heater, Passenger side exterior mirror, Front passenger door lock unit | 623 |
| 22. Alarm rotary and pull switch, Circulation pump relay, Switch-over relay 1 for roof ventilator, Switch-over relay 2 for roof ventilator, Rotating light relay, Terminal 15 voltage supply relay, Interior light relay, Rotating light control unit, 12 V socket for special vehicles, Front passenger reading light, Auxiliary air heater element | 624 |
| 23. Relay for special installations, terminal 15, Relay for tail lift, Reverse warning beeper control unit, Control unit for supplementary blower 2 for air conditioning, Coupling point for reversing camera, 12 V socket, DC/AC converter with socket, 12 V - 230 V, Rear left door lock unit | 625 |
| 24. Module for battery charge selector buttons, Control unit for supplementary blower for air conditioning, Expansion valve for air conditioner refrigerant | 626 |
| 25. Battery charger, 230 or 110 Volt/12 Volt, Front right lumbar support adjustment switch, Handbrake warning switch, Control unit for front right massage seat, Heated seat cushion for front passenger seat | 627 |
| 26. Hazard warning light switch, Centre switch module 4 in dash panel, Rear right door control unit, Rear right door lock unit | 628 |
| 27. Centre switch module in dash panel, Centre switch module 2 in dash panel, Centre switch module 3 in dash panel, Centre switch module 4 in dash panel, Heated windscreen switch, Button for TCS and electronic stabilisation program | 629 |
| 28. Heater and air conditioning controls, Selector lever sensors control unit, Glove compartment light | 630 |
| 29. Right tail light cluster, Rear right wing door window wiper motor, Rear wing door central locking motor, Rear left interior light, Rear right interior light, Heated rear window in right wing door | 631 |
| 30. Interior light switch, Front left lumbar support adjustment switch, Interior monitoring sensor 3, Control unit for front left massage seat, Left tail light cluster, Heated seat cushion for driver seat | 632 |
| 31. Camera for trailer manoeuvring system. 12 V socket 6. Rear left window wiper motor. | 633 |

| | |
|---|---------|
| Left number plate light, Right number plate light, Heated rear window in left wing door | |
| 32. Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Trailer socket | 634 |
| 33. Reverse warning beeper, Differential lock control unit, All-wheel drive control unit, Tyre Pressure Monitoring System control unit, Rear left side marker bulb, Rear right side marker bulb, Coupling point 2 for tail lift, Coupling point 3 for tail lift | 635 |
| 34. Rear stop command light, Rear right rotating light bulb, LED module for additional reading light, special vehicles, Coupling point 2 for 3-way tipper, 12 V socket 4 for special vehicles, Rear interior light, Rear left interior light, Rear right interior light, Folding table light, Folding table light 2 | 636 |
| 35. Two-way radio voltage relay, Accident data memory, Relay and fuse carrier 7, Coupling point for two-way radio in special vehicle, Coupling point for special vehicles, Coupling point 2 on left A-pillar for special vehicles, Charging station for hand-held 2-way radio | 637 |
| 084 - Fuse assignment | 638-669 |
| 1. Fuse assignment | 638 |
| 2. Battery, Fuse holder A | 639 |
| 3. Second battery charging circuit relay, Jump start connection | 640 |
| 4. Second battery, Fuse holder F | 641 |
| 5. Fuse holder C | 642 |
| 6. Fuse holder C | 643 |
| 7. Fuse holder C | 644 |
| 8. Terminal 15 voltage supply relay 2, Fuse holder C | 645 |
| 9. Fuse holder C | 646 |
| 10. Fuse holder C | 647 |
| 11. Fuse holder C | 648 |
| 12. Fuse holder C | 649 |
| 13. Fuse holder C | 650 |
| 14. Fuse holder C | 651 |
| 15. Heated rear window relay, Horn relay, Fuse holder C | 652 |
| 16. Terminal 15 voltage supply relay, Relay for special installations, terminal 15, Electrical terminal strip for external use | 653 |
| 17. Fuse holder B | 654 |
| 18. Fuse holder B | 655 |
| 19. Fuse holder B | 656 |
| 20. Fuse holder B | 657 |
| 21. Fuse holder B | 658 |
| 22. Fuse holder B | 659 |
| 23. Fuse holder B | 660 |
| 24. Fuse holder B | 661 |
| 25. Fuse holder B | 662 |
| 26. Fuse holder B | 663 |
| 27. Fuse holder D | 664 |
| 28. Heated windscreen relay, Heated windscreen relay 2, Fuse holder D | 665 |
| 29. Coupling point in engine compartment, left | 666 |
| 30. Fuse holder J | 667 |
| 31. Fuse holder J, Fuse holder K | 668 |
| 32. Fuse holder K | 669 |
| 085 - Climatronic , EBHA | 670-676 |
| 1. Climatronic , EBHA | 670 |
| 2. Heater and air conditioning controls, Fresh air blower control unit, Climatronic control unit, Fresh air blower | 671 |
| 3. Heater and air conditioning controls, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor | 672 |
| 4. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Left temperature flap control motor, Fresh air/air recirculation, air flow flap control motor | 673 |
| 5. Heater and air conditioning controls, Defroster flap control motor, Right temperature flap control motor | 674 |
| 6. Charging unit 1 for high-voltage battery, Heater and air conditioning controls, Control unit for air conditioning compressor, Front air distribution flap control motor | 675 |
| 7. Control unit for air conditioning compressor, Thermal management control unit | 676 |
| 086 - Auxiliary heater , (7VF),(7VM),(9M4) | 677-680 |
| 1. Auxiliary heater , (7VF),(7VM),(9M4) | 677 |
| 2. Temperature sensor on roof for air inlet on auxiliary air heater, Auxiliary air heater control unit, Metering pump 2, Air distribution flap control motor 2 | 678 |
| 3. Auxiliary air heater control unit, Remote control receiver for auxiliary heater, Positive connection 3 (30a). in interior wirina harness | 679 |

| | |
|--|---------|
| 4. Circulation pump relay, Auxiliary heater control unit, Metering pump, Circulation pump | 680 |
| 087 - Basic equipment | 681-705 |
| 1. Basic equipment | 681 |
| 2. Battery, Starter relay 1, Starter relay 2, Fuse holder B | 682 |
| 3. Fuse holder C | 683 |
| 4. Onboard supply control unit, Fuse holder C | 684 |
| 5. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit | 685 |
| 6. Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit | 686 |
| 7. Rotary light switch, Onboard supply control unit | 687 |
| 8. Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit | 688 |
| 9. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight | 689 |
| 10. Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element | 690 |
| 11. Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light | 691 |
| 12. Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light | 692 |
| 13. Start/Stop operation button, Front right brake pad wear sender, Rear left brake pad wear sender, Oil level and oil temperature sender, Onboard supply control unit | 693 |
| 14. Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit | 694 |
| 15. Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light | 695 |
| 16. Onboard supply control unit, Left tail light cluster, Heated rear window in left wing door | 696 |
| 17. Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door | 697 |
| 18. Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb | 698 |
| 19. Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right | 699 |
| 20. Onboard supply control unit, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb | 700 |
| 21. Onboard supply control unit, Data bus diagnostic interface, Centre right side marker bulb | 701 |
| 22. Engine/motor control unit | 702 |
| 23. Immobiliser reader coil, Dash panel insert | 703 |
| 24. Fuel delivery unit, Fuel pump relay, Dash panel insert | 704 |
| 25. Handbrake warning switch, Dash panel insert | 705 |
| 088 - Convenience system | 706-727 |
| 1. Convenience system | 706 |
| 2. Fuse holder C | 707 |
| 3. Driver door control unit, Driver door lock unit | 708 |
| 4. Driver door control unit, Central locking SAFELOCK function warning lamp, Left window regulator motor | 709 |
| 5. Central switch for window regulators in driver door, Central locking button, Driver door control unit | 710 |
| 6. Exterior mirror adjuster, Driver door control unit, Driver side exterior mirror | 711 |
| 7. Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Front passenger door lock unit | 712 |
| 8. Window regulator switch in front passenger door, Front passenger door control unit, Right window regulator motor | 713 |
| 9. Front passenger door control unit, Passenger side exterior mirror | 714 |
| 10. Contact strip in left sliding door, Onboard supply control unit, Rear left door lock unit | 715 |
| 11. Contact strip in right sliding door, Onboard supply control unit, Rear right door lock unit | 716 |
| 12. Rear right door control unit, Onboard supply control unit | 717 |
| 13. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit | 718 |
| 14. Centre switch module 3 in dash panel, Onboard supply control unit, Rear wing door central locking motor | 719 |
| 15. Centre switch module 4 in dash panel, Interior light switch, Interior light relay | 720 |
| 16. Interior light relay | 721 |
| 17. Left interior light, Right interior light | 722 |
| 18. Left interior light, Right interior light, Rear left interior light, Rear right interior light | 723 |
| 19. Left interior light, Right interior light, Rear left interior light, Rear right interior light | 724 |
| 20. Interior monitoring switch, Interior monitoring sensor | 725 |
| 21. Bonnet contact switch, Interior monitoring sensor 3, Alarm horn | 726 |
| 22. Data bus diagnostic interface | 727 |

| | |
|--|---------|
| 089 - Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6) | 728-735 |
| 1. Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6) | 728 |
| 2. Special vehicle control unit, Fuse holder B, Fuse holder D | 729 |
| 3. Special vehicle control unit, Power take-off valve | 730 |
| 4. Power take-off switch, Working speed control switch, Ignition bypass button, Remote engine start button, Special vehicle control unit | 731 |
| 5. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2 | 732 |
| 6. Steering column electronics control unit, Special vehicle control unit, Blocking diode 2, Blocking diode 3 | 733 |
| 7. Oil temperature sender 2, Special vehicle control unit, Coupling point for special vehicles | 734 |
| 8. GPS aerial, LTE aerial 1, Coupling point for special vehicles | 735 |
| 090 - Programmable special functions , (IS7),(IS8) | 736-743 |
| 1. Programmable special functions , (IS7),(IS8) | 736 |
| 2. Special vehicle control unit, Fuse holder B, Fuse holder D | 737 |
| 3. Special vehicle control unit, Power take-off valve | 738 |
| 4. Ignition bypass button, Remote engine start button, Wireless data transfer button, Special vehicle control unit | 739 |
| 5. Switch module 1 in dash panel, next to steering wheel, Power take-off switch, Special vehicle control unit, Blocking diode 2, Blocking diode 3 | 740 |
| 6. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2 | 741 |
| 7. Special vehicle control unit, Coupling point for special vehicles | 742 |
| 8. Tachograph, GPS aerial, LTE aerial 1, Coupling point for special vehicles | 743 |
| 091 - Radiator fan | 744-746 |
| 1. Radiator fan | 744 |
| 2. Fuse holder C, Jump start connection, Radiator fan, Radiator fan 2 | 745 |
| 3. Engine/motor control unit, Radiator fan | 746 |
| 092 - Radiator fan , EBHA | 747-748 |
| 1. Radiator fan , EBHA | 747 |
| 2. Engine/motor control unit, Fuse holder C, Jump start connection, Radiator fan | 748 |
| 093 - 8-speed automatic gearbox 0DR , (G1F@1X2) | 749-752 |
| 1. 8-speed automatic gearbox 0DR , (G1F@1X2) | 749 |
| 2. Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C | 750 |
| 3. Automatic gearbox control unit, Selector lever sensors control unit | 751 |
| 4. Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display | 752 |
| 094 - 8-speed automatic gearbox 09Q , (G1F),(1X0),(G1G),(1X1) | 753-758 |
| 1. 8-speed automatic gearbox 09Q , (G1F),(1X0),(G1G),(1X1) | 753 |
| 2. Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C | 754 |
| 3. Automatic gearbox control unit, Selector lever sensors control unit, Gearbox | 755 |
| 4. Automatic gearbox control unit, Gearbox | 756 |
| 5. Automatic gearbox control unit, Gearbox | 757 |
| 6. Automatic gearbox control unit, Gearbox | 758 |
| 095 - Preparation for 3-way tip function , (Henschel) | 759-760 |
| 1. Preparation for 3-way tip function , (Henschel) | 759 |
| 2. Main switch for hydraulic system, Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Warning buzzer for hydraulic system, Tipping mechanism fuse, Hydraulic system, Hydraulic pump for tilting/tipping mechanism | 760 |
| 096 - Preparation for 3-way tip function , (Schoon) | 761-762 |
| 1. Preparation for 3-way tip function , (Schoon) | 761 |
| 2. Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Blocking diode, Blocking diode 2, Hydraulics motor relay, Hydraulic system | 762 |
| 097 - Steering column electronics , EBHA | 763-765 |
| 1. Steering column electronics , EBHA | 763 |
| 2. Electronic ignition lock, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid, Fuse holder C | 764 |
| 3. Steering column electronics control unit | 765 |
| 098 - Multifunction steering wheel , EBHA | 766-768 |
| 1. Multifunction steering wheel , EBHA | 766 |
| 2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side, Heated steering wheel | 767 |
| 3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit | 768 |
| 099 - Reversing camera (Rear Assist) , EBHA | 769-770 |
| 1. Reversing camera (Rear Assist) . EBHA | 769 |

| | |
|---|---------|
| 2. Control unit 1 for information electronics, Reversing camera | 770 |
| 100 - Special equipment, police , (F4G@IS9) | 771-793 |
| 1. Special equipment, police , (F4G@IS9) | 771 |
| 2. Fuse holder J, Fuse holder K | 772 |
| 3. Special vehicle control unit, Fuse holder B, Fuse holder D | 773 |
| 4. Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2, Fuse holder F | 774 |
| 5. Centre switch module 2 in dash panel, Centre switch module 4 in dash panel, Centre switch module 1 in dash panel, Special vehicle control unit | 775 |
| 6. Switch module 1 in dash panel, next to steering wheel, Special vehicle control unit, Blocking diode 2, Blocking diode 3 | 776 |
| 7. Accident data recorder button, Special vehicle control unit, Accident data memory | 777 |
| 8. Data bus diagnostic interface, Special vehicle control unit | 778 |
| 9. Two-way radio voltage relay, Special vehicle control unit, Coupling point for rear additional lighting on special vehicle, Front passenger reading light, Driver side reading light | 779 |
| 10. Rear interior light, Rear left interior light, Folding table light, Folding table light 2 | 780 |
| 11. LED module for additional reading light, special vehicles, 12 V socket for special vehicles, 12 V socket 2 for special vehicles, Rear right interior light | 781 |
| 12. 2-way radio unit microphone, Coupling point for two-way radio in special vehicle, Coupling point 2 for two-way radio in special vehicle | 782 |
| 13. Two-way radio loudspeaker, Two-way radio loudspeaker 2, Two-way radio loudspeaker 3, Coupling point 2 for two-way radio in special vehicle | 783 |
| 14. Alarm rotary and pull switch, Two-way radio loudspeaker 4, Two-way radio loudspeaker 5, Two-way radio loudspeaker 6, Coupling point in left seat box | 784 |
| 15. Alarm rotary and pull switch | 785 |
| 16. Coupling point for special vehicles, Coupling point 2 for special vehicles | 786 |
| 17. Rotating light relay, Relay for additional electrical equipment for special signal system, Rear right rotating light bulb, Coupling point 3 for special vehicles, Coupling point 2 on right B-pillar for special vehicles | 787 |
| 18. Coupling point on right B-pillar for special vehicles, Coupling point 2 on right B-pillar for special vehicles | 788 |
| 19. Coupling point 3 on right B-pillar for special vehicles | 789 |
| 20. Coupling point for front flashing lights in special vehicle | 790 |
| 21. Front stop command light, Rear stop command light, Flashing lights relay, Coupling point for front flashing lights in special vehicle | 791 |
| 22. Coupling point for warning/indicator lamps in special vehicle, Charging station for hand-held 2-way radio | 792 |
| 23. 12 V socket 3 for special vehicles, 12 V socket 4 for special vehicles | 793 |
| 101 - Preparation for load compartment lighting , (5GB),(9CJ),(9CX) | 794-796 |
| 1. Preparation for load compartment lighting , (5GB),(9CJ),(9CX) | 794 |
| 2. Rear interior light button, Onboard supply control unit, Interior light relay, Fuse holder C | 795 |
| 3. Interior light relay, 2-pin connector, Coupling point in left seat box | 796 |
| 102 - Basic equipment | 797-821 |
| 1. Basic equipment | 797 |
| 2. Battery, Starter relay 1, Starter relay 2, Fuse holder B | 798 |
| 3. Fuse holder C | 799 |
| 4. Onboard supply control unit, Fuse holder C | 800 |
| 5. Ignition/starter switch, Onboard supply control unit, Selector lever sensors control unit | 801 |
| 6. Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit | 802 |
| 7. Rotary light switch, Onboard supply control unit | 803 |
| 8. Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit | 804 |
| 9. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight | 805 |
| 10. Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element | 806 |
| 11. Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light | 807 |
| 12. Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light | 808 |
| 13. Start/Stop operation button, Front right brake pad wear sender, Rear left brake pad wear sender, Oil level and oil temperature sender, Onboard supply control unit | 809 |
| 14. Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit | 810 |
| 15. Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light | 811 |

| | |
|--|---------|
| 16. Onboard supply control unit, Left tail light cluster, Heated rear window in left wing door | 812 |
| 17. Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door | 813 |
| 18. Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb | 814 |
| 19. Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right | 815 |
| 20. Onboard supply control unit, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb | 816 |
| 21. Onboard supply control unit, Data bus diagnostic interface, Centre right side marker bulb | 817 |
| 22. Engine/motor control unit | 818 |
| 23. Immobiliser reader coil, Dash panel insert | 819 |
| 24. Fuel delivery unit, Fuel pump relay, Dash panel insert | 820 |
| 25. Handbrake warning switch, Dash panel insert | 821 |
| 801 - Fitting locations: Earth points - 3 | 822-835 |
| 1. Earth points | 822-835 |
| 1.1 Earth points in front part of vehicle | 823-824 |
| 1.1.1 Front from left | 823-824 |
| 1.1.2 Front from right | 825 |
| 1.2 Earth points in middle part of vehicle | 825-830 |
| 1.2.1 Front left of interior | 826 |
| 1.2.2 Front right of interior | 827 |
| 1.2.3 Front middle of interior | 828 |
| 1.2.4 Front left door | 829 |
| 1.2.5 Front of roof | 830 |
| 1.2.6 Left B-pillar | 831 |
| 1.3 Earth points in rear part of vehicle | 831-832 |
| 1.3.1 Left cargo hold | 832 |
| 1.3.2 Right cargo hold | 833 |
| 1.4 Earth points on vehicle underbody | 833-835 |
| 1.4.1 "Front of underbody | 834 |
| 1.4.2 Rear underbody | 835 |
| 802 - Fitting locations: Fuses - 3 | 836-885 |
| 1. Fuses | 836-885 |
| 1.1 Fuse holder A -SA-, from August 2016 | 837-839 |
| 1.1.1 Fitting location of fuse holder A -SA-, from August 2016 | 837-838 |
| 1.1.2 Fuse assignment of fuse holder A -SA-, from August 2016 | 839 |
| 1.2 Fuse holder A -SA-, from July 2018 | 840-841 |
| 1.2.1 Fitting location of fuse holder A -SA-, from July 2018 | 840 |
| 1.2.2 Fuse assignment for fuse holder A -SA-, from July 2018 | 841 |
| 1.3 Fuse holder B -SB-, from August 2016 | 842-846 |
| 1.3.1 Fitting location of fuse holder B -SB-, from August 2016 | 842 |
| 1.3.2 Fuse assignment of fuse holder B -SB-, from August 2016 | 843-846 |
| 1.4 Fuse holder B -SB-, from May 2017 | 847-851 |
| 1.4.1 Fitting location of fuse holder B -SB-, from May 2017 | 847 |
| 1.4.2 Fuse assignment for fuse holder B -SB-, from May 2017 | 848-851 |
| 1.5 Fuse holder B -SB-, from July 2018 | 852-856 |
| 1.5.1 Fitting location of fuse holder B -SB-, from July 2018 | 852 |
| 1.5.2 Fuse assignment for fuse holder B -SB-, from July 2018 | 853-856 |
| 1.6 Fuse holder C -SC-, from August 2016 | 857-862 |
| 1.6.1 Fitting location of fuse holder C -SC-, left-hand drive models, from August 2016 | 858 |
| 1.6.2 Fitting location of fuse holder C -SC-, right-hand drive models, from August 2016 | 859 |
| 1.6.3 Fuse assignment of fuse holder C -SC-, from August 2016 | 860-862 |
| 1.7 Fuse holder C -SC-, from May 2017 | 863-868 |
| 1.7.1 Fitting location of fuse holder C -SC-, left-hand drive models, from May 2017 | 863-864 |
| 1.7.2 Fitting location of fuse holder C -SC-, right-hand drive models, from May 2017 | 865 |
| 1.7.3 Fuse assignment for fuse holder C -SC-, from May 2017 | 866-868 |
| 1.8 Fuse holder C -SC-, from July 2018 | 869-874 |
| 1.8.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2018 | 869-870 |
| 1.8.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2018 | 871 |
| 1.8.3 Fuse assignment for fuse holder C -SC-, from July 2018 | 872-874 |
| 1.9 Fuse holder D -SD-, from August 2016 | 875-876 |
| 1.9.1 Fitting location of fuse holder D -SD-, from August 2016 | 876 |
| 1.9.2 Fuse assignment of fuse holder D -SD-, from August 2016 | 877 |
| 1.10 Fuse holder F -SF-, from August 2016 | 877-878 |
| 1.10.1 Fitting location of fuse holder F -SF-, from August 2016 | 878 |
| 1.10.2 Fuse assignment of fuse holder F -SF-. from August 2016 | 879 |

| | |
|---|---------|
| 1.11 Fuse holder F -SF-, from July 2018 | 879-880 |
| 1.11.1 Fitting location of fuse holder F -SF-, from July 2018 | 879 |
| 1.11.2 Fuse assignment for fuse holder F -SF-, from July 2018 | 880 |
| 1.12 Fuse holder H -SH-, from August 2016 | 881-882 |
| 1.12.1 Fitting location of fuse holder H -SH-, from August 2016 | 881 |
| 1.12.2 Fuse assignment of fuse holder H -SH-, from August 2016 | 882 |
| 1.13 Fuse holder H -SH-, from July 2018 | 883-885 |
| 1.13.1 Fitting location of fuse holder H -SH-, from July 2018 | 883 |
| 1.13.2 Fuse assignment for fuse holder H -SH-, from July 2018 | 884-885 |
| 803 - Fitting locations: Relays - 3 | 886-898 |
| 1. Relays | 886-898 |
| 1.1 Relay on left in engine compartment, from September 2016 | 888 |
| 1.2 Relay in middle part of vehicle, from September 2016 | 889-898 |
| 1.2.1 Relay on fuse holder C -SC-, left-hand drive models, from September 2016 | 890-891 |
| 1.2.2 Relay on fuse holder C -SC-, right-hand drive models, from September 2016 | 892 |
| 1.2.3 Relay carrier under the dash panel, on onboard supply control unit, left-hand drive, from September 2016 | 893 |
| 1.2.4 Relay carrier under the dash panel, on onboard supply control unit, right-hand drive, from September 2016 | 894 |
| 1.2.5 Relay carrier 1 under seat on front left, from September 2016 | 895 |
| 1.2.6 Relay carrier 1 under seat on front left, from July 2018 | 896 |
| 1.2.7 Relay carrier 2 under seat on front left, from September 2016 | 897 |
| 1.2.8 Relay carrier 2 under seat on front left, from July 2018 | 898 |
| 804 - Fitting locations: front part of vehicle - 3 | 899-914 |
| 1. Fitting location: front part of vehicle | 899-914 |
| 1.1 Front, view from front | 903-904 |
| 1.2 Front, view from left | 905-906 |
| 1.3 Front, view from right | 907 |
| 1.4 2.0l diesel engine, DASA, DASB, DASC, DAUA, DAUB, DAVA, DAWA | 908-912 |
| 1.4.1 2.0l diesel engine, DASA, DASB, DASC, DAUA, DAUB, DAVA, DAWA, from front | 908-909 |
| 1.4.2 2.0l diesel engine, DASA, DASB, DASC, DAUA, DAUB, DAVA, DAWA, from above | 910 |
| 1.4.3 2.0l diesel engine, DASA, DASB, DASC, DAUA, DAUB, DAVA, DAWA, from rear | 911 |
| 1.4.4 2.0l diesel engine, DASA, DASB, DASC, DAUA, DAUB, DAVA, DAWA, from right | 912 |
| 1.5 Automatic gearbox, 09Q | 913 |
| 1.6 Manual gearbox, 0AX | 914 |
| 805 - Fitting locations: middle part of vehicle - 3 | 915-973 |
| 1. Fitting locations: middle part of vehicle | 915-973 |
| 1.1 At front of interior | 923-956 |
| 1.1.1 Front left of interior, LHD models | 924-925 |
| 1.1.2 Front left of interior, RHD models | 926-928 |
| 1.1.3 Front left footwell, LHD models | 929-931 |
| 1.1.4 Right footwell, RHD models | 932-934 |
| 1.1.5 Front right of interior, LHD models | 935-937 |
| 1.1.6 Front right of interior, RHD models | 938-939 |
| 1.1.7 Dash panel, LHD models | 940-942 |
| 1.1.8 Dash panel, RHD models | 943-944 |
| 1.1.9 Steering wheel | 945 |
| 1.1.10 Steering column | 946-947 |
| 1.1.11 Front centre console, LHD models | 948-949 |
| 1.1.12 Front centre console, RHD models | 950-951 |
| 1.1.13 Left front seat | 952-953 |
| 1.1.14 Right front seat, single seat | 954-955 |
| 1.1.15 Right front seat, double seat | 956 |
| 1.2 Roof | 957-958 |
| 1.2.1 Roof, part 1 | 958 |
| 1.2.2 Roof, part 2 | 959 |
| 1.3 Doors | 959-967 |
| 1.3.1 Driver door | 960-961 |
| 1.3.2 Front passenger door | 962-963 |
| 1.3.3 Rear left door, double cab | 964 |
| 1.3.4 Rear right door, double cab | 965 |
| 1.3.5 Left sliding door, panel van/estate car | 966 |
| 1.3.6 Right sliding door, panel van/estate car | 967 |
| 1.4 Heater and air conditioning unit | 968-973 |
| 1.4.1 Air conditioning system, part 1 | 968-969 |
| 1.4.2 Air conditioning system, part 2 | 970 |

| | |
|---|---------|
| 1.4.3 Climatronic, part 1 | 971 |
| 1.4.4 Climatronic, part 2 | 972 |
| 1.4.5 Roof air conditioning system | 973 |
| 806 - Fitting locations: rear part of vehicle - 3 | 974-982 |
| 1. Fitting locations: rear part of vehicle | 974-982 |
| 1.1 Left rear door | 976-977 |
| 1.2 Right rear door | 978 |
| 1.3 Rear bumper, panel van/estate car | 979 |
| 1.4 Rear cover plate, dropside/double cab | 980 |
| 1.5 Rear side, view from left, panel van/estate car | 981 |
| 1.6 Rear side, view from right, panel van/estate car | 982 |
| 807 - Fitting locations: vehicle underbody - 3 | 983-988 |
| 1. Fitting locations: vehicle underbody | 983-988 |
| 1.1 Diesel front underbody, transverse installation | 984-985 |
| 1.2 Diesel front underbody, longitudinal installation | 986 |
| 1.3 Diesel rear underbody, panel van/estate car | 987 |
| 1.4 Rear underbody dropside/double cab | 988 |