



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>4</b>
2.1	Information about flexible or fixed service	4
2.2	Service tables	6
<b>3</b>	<b>General information</b>	<b>19</b>
3.1	Raising vehicle with lifting platform or trolley jack	19
3.2	Stickers	21
3.3	Entries in service schedule	22
3.4	Connecting vehicle diagnostic tester	22
3.5	Vehicle identification number	23
3.6	Vehicle data sticker	24
3.7	Countries with hot climate	25
3.8	Country overview for diesel not compliant with EN 590	26
3.9	Country overview for petrol not compliant with EN 228	27
3.10	Engine code and engine number	28
3.11	Severe operating conditions	28
3.12	Countries with high levels of dust	28
3.13	Identification plate	29
3.14	Shortened intervals for spark plug replacement	30
<b>4</b>	<b>Descriptions of work</b>	<b>34</b>
4.1	Stowage compartments for roof side member, felt in rear longitudinal members and hydraulic pump noise insulation: checking for dampness	36
4.2	Removable towing bracket: checking and cleaning if necessary	37
4.3	Swivel joints: inspecting	40
4.4	Automatic headlight control and static cornering light: checking function	41
4.5	Sliding/tilting roof: clean and grease guide rails of glass panel and sliding headliner.	43
4.6	Battery: checking battery terminal clamps for secure seating	50
4.7	Status of battery: reading, sending diagnosis protocol online	54
4.8	Battery: checking with battery tester (always refer to workshop manual)	54
4.9	Front passenger front airbag: checking key switch and "On/Off function", setting switch to "On".	54
4.10	Tyres: checking condition, wear pattern, tyre pressure and tread depth	56
4.11	Brake and clutch system: changing brake fluid	65
4.12	Brake fluid level: Check	71
4.13	Brake system and shock absorbers: inspecting for leaks and damage	72
4.14	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	73
4.15	CSC roof: checking for damage and function, cleaning wind deflector and seals and applying special lubricant on rubber seals.	75
4.16	Dual clutch gearbox 02E: changing gear oil and filter	82
4.17	Electric windows: reactivating one-touch opening and closing function	82
4.18	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	83
4.19	Bonnet catch hook: grease.	83
4.20	Boots: inspecting	84
4.21	Interior and exterior body: inspecting for corrosion with doors and flaps open	84
4.22	Poly V-belt: renewing	84
4.23	Poly V-belt: checking condition	85
4.24	Cooling system: checking frost protection and coolant level	86
4.25	Diesel fuel filter: renewing	88
4.26	Air filter: cleaning housing and renewing filter element	92
4.27	Multi-purpose additive for diesel fuel: adding	101
4.28	Multi-purpose additive for petrol fuel: adding	103
4.29	Engine cover panel -top-: removing and installing	104
4.30	Engine cover panel, -bottom- (noise insulation): removing and installing	114



4.31	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	114
4.32	Engine oil level: checking	115
4.33	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	116
4.34	Engine oil: capacities and specifications	130
4.35	Road test: performing (driving behaviour, noises, air conditioner etc.)	130
4.36	Wheel securing bolts: tightening to specified torque	131
4.37	Radio/radio navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	134
4.38	Tyre pressure loss indicator: performing basic setting	134
4.39	Tyre repair set: checking if bottle is damaged or used; checking shelf life of tyre sealant	137
4.40	Dust and pollen filter: cleaning housing and renewing filter element	138
4.41	Headlight adjustment: checking halogen headlights	138
4.42	Headlight adjustment: checking gas discharge headlights	144
4.43	Headlight adjustment: checking fog lights	150
4.44	Sliding sunroof drains: checking that drains are free	153
4.45	Service interval display: Reset	154
4.46	Service interval display: recoding	157
4.47	Window wash/wipe system and headlight washer system: checking function	158
4.48	Wiper blades: checking park position	161
4.49	Track rod ends: checking clearance, firm seating and boots	162
4.50	Door arrester: grease.	162
4.51	Transportation mode: switching off	163
4.52	Transportation devices: removing blocking pieces from springs on front axle	164
4.53	Underbody: inspecting for damage to underbody sealant, underbody cladding, routing of lines, plugs etc.	165
4.54	Clock: setting to correct time	165
4.55	Toothed belt and toothed belt tensioning roller: renewing (diesel engines)	167
4.56	Camshaft drive toothed belt: renewing, 2.0 l FSI and TFSI	167
4.57	Spark plugs: renewing	167
4.58	Roof stowage buffers: bonding also to convertible top compartment cover	179
4.59	Diesel particulate filter: checking	180
4.60	Radio code: reading using vehicle diagnostic tester	180
4.61	Transport locks: removing towing eyes	181
<b>5</b>	<b>Exhaust emissions test</b>	<b>184</b>
5.1	Exhaust emissions test for petrol engines	184
5.2	Exhaust emissions test for diesel engines	186
<b>6</b>	<b>Glossary</b>	<b>189</b>
<b>7</b>	<b>---Change history---</b>	<b>192</b>