



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b> .....  | <b>1</b>  |
| <b>1 Brake allocation via PR No.</b> .....  | <b>1</b>  |
| 1.1 Front brakes, Golf .....  | 1         |
| 1.2 Front brakes, Eos .....   | 2         |
| 1.3 Rear brakes, front-wheel drive Golf .....   | 2         |
| 1.4 Rear brakes, four-wheel drive Golf .....  | 3         |
| 1.5 Rear brakes, Eos .....  | 3         |
| <b>2 Technical data for brakes</b> .....  | <b>4</b>  |
| 2.1 Brake master cylinder and brake servo .....   | 4         |
| 2.2 Front brakes .....  | 4         |
| 2.3 Rear brakes (disc brakes) .....   | 6         |
| <b>3 Brake test</b> .....   | <b>9</b>  |
| 3.1 General .....   | 9         |
| 3.2 Test for vehicles with front-wheel drive .....  | 9         |
| 3.3 Test for vehicles with four-wheel drive via a Haldex coupling .....                         | 9         |
| <b>45 - Anti-lock brake system</b> .....  | <b>11</b> |
| <b>1 General notes on anti-lock brake system</b> .....  | <b>11</b> |
| <b>2 Notes for repair work on anti-lock brake system</b> .....                                  | <b>12</b> |
| <b>3 Connecting VAS 5051 and selecting functions</b> .....                                      | <b>13</b> |
| <b>4 Electrical/electronic components and locations</b> .....                                   | <b>15</b> |
| 4.1 ABS Mark 70 (ABS/TCS) .....   | 15        |
| 4.2 ABS Mark 60 (ABS/EDL/TCS/ESP) up to week 22/2008 .....                                      | 17        |
| 4.3 ABS Mark 60 (ABS/EDL/TCS/ESP) from week 22/2008 .....                                       | 19        |
| <b>5 Fault display via warning lamps</b> .....  | <b>22</b> |
| <b>6 Assembly overview - hydraulic unit, brake servo/brake master cylinder</b> .....            | <b>24</b> |
| 6.1 ABS Mark 70 (ABS/TCS) .....   | 24        |
| 6.2 ABS Mark 60 (ABS/EDL/TCS/ESP) up to week 22/2008 .....                                      | 30        |
| 6.3 ABS Mark 60 (ABS/EDL/TCS/ESP) from week 22/2008 .....                                       | 38        |
| <b>7 Removing and installing parts of ABS system on front and rear axle</b> .....               | <b>46</b> |
| 7.1 Removing and installing parts of ABS system on front axle .....                             | 46        |
| 7.2 Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive) .. | 47        |
| 7.3 Removing and installing parts of anti-lock brake system on rear axle (four-wheel drive) ..  | 48        |
| <b>8 Removing and installing parts of ESP system</b> .....                                      | <b>50</b> |
| 8.1 Removing and installing ESP sensor unit G419 .....  | 50        |
| 8.2 Removing and installing steering angle sender G85 .....                                     | 51        |
| 8.3 Removing and installing brake servo vacuum sender G483 .....                                | 51        |
| <b>46 - Brakes - mechanism</b> .....  | <b>53</b> |
| <b>1 Repairing front brakes</b> .....   | <b>53</b> |
| 1.1 Repairing front brakes, FS III brake caliper .....  | 53        |
| 1.2 Removing and installing brake pads/linings .....  | 54        |
| 1.3 Removing and installing brake caliper .....   | 57        |
| 1.4 Repairing front brakes, FN 3 brake caliper .....  | 59        |
| 1.5 Removing and installing brake pads/linings .....  | 62        |
| 1.6 Removing and installing brake caliper .....   | 65        |
| 1.7 Repairing front brake, FNR-G brake caliper .....  | 67        |
| 1.8 Removing and installing brake pads/linings .....  | 68        |
| 1.9 Removing and installing brake caliper .....   | 71        |
| <b>2 Repairing rear brakes</b> .....  | <b>74</b> |
| 2.1 Repairing rear brake CI 38 .....  | 74        |



|                                 |   |            |
|---------------------------------|---|------------|
| 2.2                             | Removing and installing brake pads/linings  | 75         |
| 2.3                             | Removing and installing brake caliper   | 77         |
| 2.4                             | Repairing rear brake CII 38   | 79         |
| 2.5                             | Removing and installing brake pads/linings  | 81         |
| 2.6                             | Removing and installing brake caliper   | 83         |
| 2.7                             | Repairing rear brake CII 41   | 85         |
| 2.8                             | Removing and installing brake pads/linings  | 87         |
| 2.9                             | Removing and installing brake caliper   | 90         |
| 2.10                            | Assembly overview - Bosch rear wheel brake  | 91         |
| 2.11                            | Removing and installing brake pads, Bosch   | 93         |
| 2.12                            | Removing and installing brake caliper, Bosch  | 95         |
| 2.13                            | Adjusting handbrake   | 97         |
| <b>3</b>                        | <b>Assembly overview - handbrake lever</b>  | <b>99</b>  |
| 3.1                             | Removing and installing handbrake cable up to model year 2007                           | 99         |
| 3.2                             | Removing and installing handbrake cable from model year 2008                            | 102        |
| <b>4</b>                        | <b>Assembly overview - brake pedal</b>  | <b>105</b> |
| 4.1                             | Separating brake pedal from brake servo   | 105        |
| 4.2                             | Removing and installing brake light switch F from week 45 of 2005                       | 106        |
| <b>47 - Brakes - hydraulics</b> |   | <b>109</b> |
| <b>1</b>                        | <b>Repairing front brake caliper</b>  | <b>109</b> |
| 1.1                             | Assembly overview - brake caliper FS III  | 109        |
| 1.2                             | Removing and installing piston for brake caliper FS III                                 | 109        |
| 1.3                             | Assembly overview - brake caliper FN 3  | 111        |
| 1.4                             | Removing and installing piston for brake caliper FN 3                                   | 112        |
| 1.5                             | Assembly overview - brake caliper FNR-G   | 115        |
| 1.6                             | Removing and installing piston for FNR-G brake caliper                                  | 116        |
| <b>2</b>                        | <b>Repairing rear brake caliper</b>   | <b>119</b> |
| 2.1                             | Assembly overview - brake calipers CI 38 and CII 38                                     | 119        |
| 2.2                             | Assembly overview - brake caliper CII 41  | 120        |
| 2.3                             | Removing and installing brake caliper piston  | 121        |
| 2.4                             | Assembly overview - Bosch brake caliper   | 123        |
| 2.5                             | Removing and installing brake caliper piston, Bosch                                     | 124        |
| 2.6                             | Pre-bleeding brake caliper  | 126        |
| <b>3</b>                        | <b>Pressurised leak test</b>  | <b>127</b> |
| 3.1                             | Test prerequisites:   | 127        |
| <b>4</b>                        | <b>Bleeding brake system</b>  | <b>128</b> |
| 4.1                             | Bleeding brake system using brake filling and bleeding equipment VAS 5234 or V.A.G 1869 | 128        |
| 4.2                             | Changing brake fluid  | 130        |
| <b>5</b>                        | <b>Brake servo and brake master cylinder</b>  | <b>131</b> |
| 5.1                             | Assembly overview: brake servo/brake master cylinder (left-hand drive vehicle)          | 131        |
| 5.2                             | Assembly overview: brake servo/brake master cylinder (right-hand drive vehicle)         | 132        |
| 5.3                             | Overview - vacuum pump for brake servo (diesel vehicles)                                | 134        |
| 5.4                             | Checking brake servo vacuum system  | 135        |
| 5.5                             | Checking non-return valve   | 139        |
| 5.6                             | Removing and installing brake servo pressure sensor G294                                | 139        |
| 5.7                             | Vacuum pump for brakes V192   | 139        |
| 5.8                             | Removing and installing brake light switch F as of week 45/05                           | 140        |
| <b>6</b>                        | <b>Removing and installing brake master cylinder</b>                                    | <b>141</b> |
| 6.1                             | Removing  | 141        |
| 6.2                             | Installing  | 142        |
| <b>7</b>                        | <b>Removing and installing brake servo</b>  | <b>143</b> |
| 7.1                             | Removing  | 143        |
| 7.2                             | Installing  | 145        |



---

|          |                                     |            |
|----------|-------------------------------------|------------|
| <b>8</b> | <b>Brake lines</b> .....            | <b>146</b> |
| 8.1      | Separating point on underbody ..... | 146        |
| 8.2      | Repairing brake lines .....         | 146        |