



Contents

00 - Technical data	1
1 Checklist for evaluating running gear of accident vehicles	1
2 General information	3
40 - Front suspension	4
1 Appraisal of accident vehicles	4
2 Servicing front suspension	5
2.1 Overview - front axle	5
2.2 Raising wheel bearing to unladen position	6
3 Subframe, anti-roll bar, suspension links	9
3.1 Assembly overview: subframe, anti-roll bar, suspension links	9
3.2 Assembly overview: front left vehicle level sender G78	13
3.3 Removing and installing front left vehicle level sender G78	14
3.4 Repairing thread in longitudinal member	15
3.5 Fixing position of subframe and brackets	15
3.6 Lowering subframe	17
3.7 Removing and installing subframe without steering rack	21
3.8 Removing and installing subframe with steering rack	23
3.9 Repairing subframe	29
3.10 Checking swivel joint	37
3.11 Removing and installing swivel joint	38
3.12 Removing and installing suspension link with mounting bracket	42
3.13 Removing and installing suspension link with mounting bracket (left side for vehicles with DSG or automatic gearboxes)	45
3.14 Removing and installing suspension link with mounting bracket (right side for vehicles with 6-cylinder engines)	50
3.15 Renewing bonded rubber bush for suspension link	54
3.16 Renewing mounting bracket with suspension link bush	56
3.17 Removing and installing anti-roll bar	57
4 Assembly overview: wheel bearing	63
4.1 Removing and installing wheel bearing unit	65
4.2 Removing and installing wheel bearing housing	67
5 Assembly overview: suspension strut	73
5.1 Removing and installing suspension strut	74
5.2 Repairing suspension strut	81
6 Removing and installing drive shafts	84
6.1 Loosening and tightening drive shaft hexagon bolt	84
6.2 Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	85
6.3 Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	86
6.4 Removing and installing drive shaft with constant velocity joint	88
6.5 Removing and installing left drive shaft with (push-on) constant velocity slip joint	91
6.6 Removing and installing right drive shaft with (push-on) constant velocity slip joint	96
6.7 Removing and installing drive shafts with triple roller joint AAR2600i	102
6.8 Removing and installing drive shafts with triple roller joint AAR3300i	106
7 Repairing drive shaft - overview of drive shafts	111
7.1 Heat shields for drive shafts	113
8 Assembly overview: drive shaft with VL100 constant velocity joint	114
8.1 Dismantling and assembling drive shaft with VL100 constant velocity joint	116
8.2 Checking outer constant velocity joint	120
8.3 Checking inner constant velocity joint	121
9 Assembly overview: drive shaft with VL107 constant velocity joint (bolt-on)	124
9.1 Dismantling and assembling drive shaft with VL107 constant velocity joint	126



10	Assembly overview: drive shaft with VL107 constant velocity slip joint (push-on)	131
10.1	Dismantling and assembling drive shaft with VL107 (push-on) constant velocity slip joint	132
10.2	Checking outer constant velocity joint	135
11	Assembly overview: drive shaft with triple roller joint AAR2600i	137
11.1	Dismantling and assembling drive shaft with triple roller joint AAR2600i	139
12	Assembly overview: drive shaft with triple roller joint AAR3300i	144
12.1	Dismantling and assembling drive shaft with triple roller joint AAR3300i	146
42	Rear suspension	151
1	Appraisal of accident vehicles	151
2	Repairing rear suspension (front-wheel drive)	152
2.1	Overview - rear axle	152
2.2	Rear axle in unladen position	153
3	Assembly overview: subframe, transverse link, track rod (front-wheel drive)	156
3.1	Fixing position of subframe	158
3.2	Lowering rear axle	159
3.3	Removing and installing rear axle	161
3.4	Vehicle level sender for vehicles with automatic headlight range control	165
3.5	Removing and installing rear left vehicle level sender G76	166
3.6	Removing and installing upper transverse link	167
3.7	Removing and installing lower transverse link	168
3.8	Removing and installing track rod	170
4	Assembly overview: wheel bearing housing, trailing arm (front-wheel drive)	173
4.1	Removing and installing wheel bearing housing	174
4.2	Renewing bonded rubber bush for wheel bearing housing	178
4.3	Removing and installing wheel bearing/wheel hub unit	180
4.4	Removing and installing trailing arm with mounting bracket	183
4.5	Repairing trailing arm	187
5	Assembly overview: shock absorber, coil spring (front-wheel drive)	190
5.1	Removing and installing coil spring	190
5.2	Removing and installing shock absorbers	192
5.3	Repairing shock absorber	194
6	Assembly overview: anti-roll bar (front-wheel drive)	196
6.1	Removing and installing anti-roll bar	196
7	Removing and installing radius rods	199
7.1	Removing radius rods	199
7.2	Installing radius rods	199
43	Self-levelling suspension	200
1	Appraisal of accident vehicles	200
2	Components of adaptive chassis control DCC and fitting locations	201
2.1	Shock absorber damping adjustment button E387	202
2.2	Removing and installing front left body acceleration sender G341	202
2.3	Removing and installing front right body acceleration sender G342	203
2.4	Renewing bracket for front left/right body acceleration sender G341/G342	204
2.5	Assembly overview: front left/right vehicle level sender G78/G289 for adaptive chassis control DCC	206
2.6	Removing and installing front left/right vehicle level sender G78/G289	207
2.7	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	208
2.8	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	209
2.9	Removing and installing electronically controlled damping control unit J250	210
2.10	Basic setting of adaptive chassis control DCC	211



2.11	Cable routing left front axle	211
2.12	Cable routing right front axle	213
2.13	Cable routing rear axle	214
3	Assembly overview: suspension strut for adaptive chassis control DCC	215
3.1	Removing and installing suspension strut for adaptive chassis control DCC	217
4	Assembly overview: shock absorber for adaptive chassis control DCC (front-wheel drive)	224
4.1	Removing and installing rear body acceleration sender G343 (front-wheel drive)	225
4.2	Removing and installing shock absorber for adaptive chassis control DCC (front-wheel drive)	226
4.3	Repairing shock absorber for adaptive chassis control DCC (front-wheel drive)	228
44	Wheels, tyres, vehicle geometry	231
1	Appraisal of accident vehicles	231
2	Specified torques for wheel bolts	232
3	Fitting wheel and tyre	233
3.1	General information	233
3.2	Fittings instructions	233
4	Removing and fitting tyres (wheels with tyre pressure monitoring)	235
4.1	Notes on safety and conditions for removing and fitting tyres (wheels with tyre pressure monitoring system)	235
4.2	Wheel change	235
4.3	Pressing tyre off wheel rim	236
4.4	Removing tyre from wheel	237
4.5	Fitting tyre to wheel rim	237
5	Removing and fitting tyres with run-flat properties to wheel rims	239
5.1	Safety notes	239
5.2	Pressing tyre off wheel rim	239
5.3	Removing tyre from wheel	240
5.4	Fitting tyre to wheel rim	241
6	Self-sealing tyres "ContiSeal"	244
6.1	Explanations about ContiSeal tyres	244
6.2	Handling ContiSeal tyres	245
7	Tyre pressure monitor display	246
7.1	System fault in the ABS system	246
7.2	Performing basic setting	247
8	Tyre pressure monitoring system (TPMS)	248
8.1	Button behaviour	248
8.2	Assembly overview: tyre pressure sensor	249
8.3	Removing and installing tyre pressure sensor	250
9	Vehicle alignment check	252
9.1	General information	252
9.2	Prerequisites for testing	254
9.3	Test preparations	254
9.4	Wheel alignment specifications	255
9.5	Overview - wheel alignment procedure	257
9.6	Correcting front axle camber	258
9.7	Adjusting camber on rear axle	260
9.8	Adjusting toe at rear axle	261
9.9	Adjusting front axle toe	262
9.10	Basic setting of steering angle sensor G85	263
9.11	Vehicle data sticker	263
10	Wheels, tyres	264
10.1	Models with breakdown set	264



10.2	Tyre sealant	264
10.3	Removing a tyre	264
10.4	Fitting a new tyre	265
10.5	Tyre sealant disposal	265
10.6	Alloy wheels with metal valves	265
11	Instructions for changing or fitting wheels	267
11.1	Fitting wheels	268
12	Protecting wheel centring seat against corrosion	269
13	Vibration due to wheels/tyres - causes and rectification	270
13.1	Causes of rough running	270
13.2	Balancing wheels	270
13.3	Conducting a road test before balancing wheels	270
13.4	Balancing wheels on stationary wheel balancing machine	271
13.5	Vibration control system VAS 6230 A	274
13.6	Finish balancer	274
13.7	Radial and lateral runout of wheels and tyres	275
13.8	Checking radial and lateral runout on wheels and tyres with tyre gauge V.A.G 1435	275
13.9	Checking radial and lateral run-out on wheel rim	276
13.10	Matching	277
13.11	Flat spots caused by storage or handling	278
48 - Steering		280
1	Appraisal of accident vehicles	280
2	General repair instructions	281
2.1	Steering rack	281
2.2	Gaskets and seals	281
2.3	Nuts and bolts	281
2.4	Electrical components	282
2.5	Guided Fault Finding, vehicle self-diagnosis and Test Instruments	282
3	Steering wheel	283
3.1	Removing and installing steering wheel	283
4	Steering columns up to model year 2008	286
4.1	Assembly overview: steering column	286
4.2	Removing and installing steering column	286
4.3	Basic setting for steering angle sensor G85 steering angle sender must be checked after the following repair work:	292
4.4	Handling and transporting steering column	292
4.5	Checking steering column for damage	294
4.6	Removing and installing mounting bracket	294
4.7	Removing and installing strut	296
5	Steering columns from model year 2009	298
5.1	Assembly overview: steering column, left-hand drive	298
5.2	Removing and installing steering column, left-hand drive vehicle	298
5.3	Assembly overview: steering column, right-hand drive	305
5.4	Removing and installing steering column, right-hand drive vehicle	306
5.5	Handling and transporting steering column	311
5.6	Checking steering column for damage	312
6	Electromechanical steering rack up to model year 2008	314
6.1	Assembly overview - electromechanical steering rack, left-hand drive vehicle (2nd generation) up to model year 2008	314
6.2	Assembly overview - electromechanical steering rack, right-hand drive vehicle (2nd generation) up to model year 2008	316
6.3	Removing and installing steering rack, left-hand drive vehicle (2nd generation) up to model year 2008	318



6.4	Removing and installing steering rack, right-hand drive vehicle (2nd generation) up to model year 2008	325
7	Electromechanical steering rack from model year 2009	335
7.1	Assembly overview - electromechanical steering rack, left-hand drive vehicle (3rd generation) from model year 2009	335
7.2	Assembly overview - electromechanical steering rack, right-hand drive vehicle (3rd generation) from model year 2009	337
7.3	Removing and installing steering rack, left-hand drive vehicle (3rd generation) from model year 2009	338
7.4	Removing and installing steering rack, 3rd generation, RHD vehicles, as of model year 2009	344
8	Differentiating between 2nd and 3rd generation steering racks	353
9	Repairing electromechanical 2nd and 3rd generation steering racks	354
9.1	Assembly overview: electromechanical steering rack	354
9.2	Removing and installing bellows	355
9.3	Removing and installing track rod	357