



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Types of battery	1
1.2 Rules for handling 6-volt batteries	1
1.3 Warning notices and safety regulations	1
1.4 Battery terminal connection	1
2 Checking battery	2
2.1 Checking maintenance-free 6V absorbent glass mat (AGM) batteries	2
3 Charging battery	4
3.1 Charging battery in battery system, 6-cylinder petrol engine	4
4 Disconnecting and reconnecting battery	5
4.1 Disconnecting and connecting battery, models with starter battery in engine compartment	5
4.2 Disconnecting and connecting battery, models with starter batteries in luggage compartment	7
5 Removing and installing battery	12
5.1 Removing and installing battery, petrol engine models with battery in engine compartment	12
5.2 Removing and installing battery, petrol engine models with battery in luggage compartment	13
5.3 Removing and installing battery, diesel engine models with battery in engine compartment	16
6 Specified torques: battery	18
6.1 Specified torques: battery in engine compartment	18
6.2 Specified torques: battery in luggage compartment	18
6.3 Specified torques: main fuse box	18
7 Battery system, 6-cylinder petrol engine	19
7.1 Components and locations of battery system	19
7.2 Part I - Components and locations of battery system in boot	20
7.3 Part II - Components and locations of battery system in engine compartment and underbody	21
7.4 Starter cable (B+ cable)	21
7.5 Removing and installing jump start point with suppression filter C24	22
7.6 Battery isolation igniter N253	24
8 Starter, vehicles with manual gearbox	28
8.1 Checking starter -B-	28
8.2 Starter, vehicles with 1.4 l, 90 kW TSI engine and manual gearbox MQ200-6F	29
8.3 Starter, vehicles with 1.4 l, 118 kW TSI engine and manual gearbox MQ250-6F	31
8.4 Starter, vehicles with 1.6 l FSI engine and manual gearbox	34
8.5 Starter, vehicles with 2.0 l FSI engine and manual gearbox	36
8.6 Starter, vehicles with 2.0 l TSI engine and manual gearbox	40
8.7 Starter, vehicles with 2.0 l TDI engine and manual gearbox	43
9 Starter, vehicles with dual clutch gearbox (DSG)	48
9.1 Removing and installing starter, 2.0 l TSI engine with dual clutch gearbox (DSG)	48
9.2 Removing and installing starter, 3.2 l injection engine with dual clutch gearbox (DSG)	51
9.3 Removing and installing starter, 2.0 l TDI engine with dual clutch gearbox (DSG)	55
10 Specified torques: starter	59
11 Alternator	60
11.1 Securing B+ (battery positive) wire to alternator	61
11.2 Checking alternator -C-	61
11.3 Checking poly V-belt	61
11.4 Voltage regulator for alternator	62



11.5	Alternator, 1.4 l, 90 kW TSI engine	64
11.6	Alternator, 1.4 l, 118 kW TSI engine	69
11.7	Alternator, 1.6 l FSI engine	74
11.8	Alternator, 2.0 l FSI engine	78
11.9	Alternator, 2.0 l TSI engine	84
11.10	Alternator, 3.2 l injection engine	89
11.11	Alternator, 2.0 l TDI unit injector engine	95
11.12	Alternator, 2.0 l TDI common rail injection engine	100
11.13	Removing and installing poly V-belt pulley on alternator	105
11.14	Specified torques: alternator	109
12	Cruise control system (CCS)	115
90	Gauges, instruments	116
1	Dash panel insert	116
1.1	Renewing dash panel insert	116
1.2	Removing and installing dash panel insert	117
1.3	Description of back of dash panel insert	118
1.4	Pin assignment of connectors on dash panel insert	118
1.5	Warning lamp symbols in dash panel insert	118
2	Service interval display	121
2.1	Resetting service interval display	121
92	Windscreen wash/wipe system	122
1	Windscreen wiper system	122
1.1	Assembly overview - windscreen wiper system	123
1.2	Removing and installing windscreen wiper system	124
1.3	Removing and installing wiper arms	129
1.4	Checking and adjusting wiper blade end position	130
1.5	Removing and installing joint-free wipers	131
1.6	Service and winter position of wiper arms	134
1.7	Deactivating alternating park position (APP) function of wiper motor	134
1.8	Removing and installing rain and light sensor G397	135
2	Windscreen washer system	139
2.1	Fitting location overview - windscreen washer system	139
2.2	Removing and installing washer fluid reservoir	140
2.3	Removing and installing windscreen washer pump	146
2.4	Removing and installing windscreen washer fluid level sender	146
2.5	Removing and installing windscreen washer system spray jets	147
2.6	Adjusting windscreen washer system spray jets	147
3	Headlight washer system	148
3.1	Fitting location overview - headlight washer system	148
3.2	Removing and installing headlight washer system pump	150
3.3	Removing and installing spray jet pop-up cylinders	150
3.4	Removing and installing spray jet assembly	151
3.5	Adjusting headlight washer system spray jets	152
3.6	Bleeding headlight washer system	152
4	Washer fluid line hose couplings	153
5	Hose repair	154
6	Specified torques: windscreen wash/wipe system	155
94	Lights, bulbs, switches - exterior	156
1	Headlight with halogen bulbs	156
1.1	Assembly overview - headlights with halogen bulbs	157
1.2	Replacing headlight bulbs, headlight manufactured by Valeo	158



1.3	Removing and installing headlight range control motor, headlight manufactured by Valeo	167
2	Headlights with gas discharge bulbs and cornering lights (AFS)	170
2.1	Electric and electronic components and locations for the AFS	171
2.2	Assembly overview - headlights with gas discharge bulbs and cornering lights (AFS)	174
2.3	Operation and safety notes for gas discharge bulbs	176
2.4	Replacing gas discharge bulb and cornering light bulb (for AFS) in headlights, manufacture: Valeo	178
2.5	Headlight range control motor, headlight manufacturer: Valeo	189
2.6	Dynamic cornering light control motor	191
2.7	Swivel module position sensor	191
2.8	Dipped beam screen	192
2.9	Power output module for headlight	192
2.10	Removing and installing gas discharge bulb control unit	194
2.11	Cornering light and headlight range control unit -J745	194
2.12	Vehicle level sender	198
3	Removing and installing headlight	202
3.1	Removing and installing headlight	202
3.2	Adjusting headlight installation position	203
4	Checking headlight settings and adjusting if necessary	206
4.1	General notes	206
4.2	Checking headlight settings and adjusting if necessary	206
5	Repairing retaining tabs of headlight	207
5.1	General notes	207
5.2	Repairing upper retaining tab	207
5.3	Repairing lower retaining tab	208
5.4	Repairing side retaining tab	208
6	Converting headlights for use when driving on the left or right	210
6.1	General description	210
6.2	Operation and safety notes	210
6.3	Applying masking film	211
6.4	Converting headlights designed for driving on the right to driving on the left	212
6.5	Converting headlights designed for driving on the left to driving on the right	213
6.6	Deactivating cornering light function	214
7	Fog lights	215
7.1	Assembly overview - fog lights	215
7.2	Removing and installing fog light	216
7.3	Removing and installing left and right fog light bulbs L22/L23	217
7.4	Adjusting fog lights	217
8	Removing and installing front side marker light in front bumper	218
8.1	Removing and installing front side marker light	218
9	Bulb for mirror turn signal and entry light in exterior mirror	219
9.1	Removing and installing turn signal repeater bulb	219
9.2	Removing and installing entry light in exterior mirror	220
10	Tail lights	222
10.1	Tail light in side panel	222
10.2	Tail light in rear lid	228
11	Number plate light	231
11.1	Bolted number plate light X	231
11.2	Clipped Number plate light X	233
12	Additional brake light	234
12.1	Removing and installing additional brake light M25	234
13	Steering column switch up to 10/2009	235
13.1	Assembly overview - steering column switch	235



13.2	Removing and installing steering column switch	237
13.3	Steering column electronics control unit J527	243
13.4	Steering angle sender G85	244
14	Steering column switch, vehicles from 11/09	245
14.1	General description	245
14.2	Assembly overview - steering column switch	245
14.3	Removal and installation sequence of components of steering column switch	246
14.4	Steering column electronics control unit J527	247
14.5	Steering column combination switch E595	251
14.6	Steering column switch base	252
15	Ignition/starter switch and lock cylinder, vehicles up to 10/09	257
15.1	Removing and installing steering lock housing	257
15.2	Removing and installing lock cylinder	257
15.3	Removing and installing ignition/starter switch	259
15.4	Removing and installing ignition key withdrawal lock solenoid N376	260
16	Ignition/starter switch and lock cylinder, vehicles from 11/09	262
16.1	Removing and installing steering lock housing	262
16.2	Removing and installing lock cylinder	262
16.3	Removing and installing ignition/starter switch	264
16.4	Removing and installing ignition key withdrawal lock solenoid N376	266
17	Parking aid (PDW) and boot lid assist (BLA)	267
17.1	Assembly overview - parking aid	268
17.2	Removing and installing parking aid control unit J446	268
17.3	Removing and installing rear parking aid senders	269
17.4	Removing and installing parking aid warning buzzer H15	272
17.5	Final control diagnosis	273
17.6	Bonding sender retainer in case of repair	273
18	Specified torques: lights, bulbs, switches - exterior	278
18.1	Specified torques: headlights	278
18.2	Specified torques: fog lights	278
18.3	Specified torques: tail light in side panel	278
18.4	Specified torques: tail light in rear lid	278
18.5	Specified torques: number plate light	278
18.6	Specified torques: additional brake light bulb M25	278
96	Lights, bulbs, switches - interior	279
1	Interior lights and switches	279
1.1	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	279
2	Lights and switches in engine compartment	281
2.1	Removing and installing bonnet contact switch F266	281
3	Lights and switches in dash panel	282
3.1	Removing and installing light switch E1	282
3.2	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20	283
3.3	Removing and installing glove compartment light W6	283
3.4	Removing and installing glove compartment light switch E26	285
3.5	Removing and installing front passenger side airbag deactivated warning lamp K145	285
3.6	Removing and installing hazard warning light switch E229	286
3.7	Removing and installing left footwell light W9 and right footwell light W10	286
3.8	Removing and installing key-operated switch to deactivate front passenger airbag E224	288
4	Lights and switches in doors	290
4.1	Removing and installing window regulator switch in front passenger door E107	290
4.2	Removing and installing switch element for mirror adjustment on driver side	290



4.3	Removing and installing driver side interior locking button for central locking system E308	291
4.4	Removing and installing driver side window regulator switch	291
4.5	Removing and installing fuel tank flap release button E319	293
4.6	Removing and installing rear lid remote release button E233	294
4.7	Removing and installing central locking deadlock function warning lamp -SAFE- K133	294
4.8	Door lock components	295
5	Lights and switches in luggage compartment	296
5.1	Removing and installing luggage compartment light W3	296
5.2	Removing and installing luggage compartment light switch F5	297
5.3	Removing and installing luggage cover contact switch F364	297
6	Lights and switches in roof trim	298
6.1	Interior light	298
6.2	Removing and installing front passenger side illuminated vanity mirror W14 and driver side illuminated vanity mirror W20	300
6.3	Garage door opener	301
7	Lights and switches in centre console	302
7.1	Removing and installing TCS and ESP button E256	302
7.2	Removing and installing convertible roof actuation button E137	303
7.3	Removing and installing sunroof button E325	304
8	Horn	305
8.1	Removing and installing treble horn H2 and bass horn H7	305
9	Immobilizer	306
9.1	Immobilizer control unit J362	306
9.2	Immobilizer reader coil D2	306
9.3	Ignition key	306
10	Anti-theft alarm (ATA)	308
10.1	Activating and deactivating anti-theft alarm	308
10.2	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	309
10.3	Removing and installing interior monitor send and receive module 1 G303	309
10.4	Removing and installing interior monitor send and receive module 2 G305	310
10.5	Removing and installing vehicle inclination sender G384	310
10.6	Central locking and anti-theft alarm system aerial R47	311
10.7	Alarm horn H12	311
97 - Wiring		314
1	Vehicle diagnosis, testing and information systems	314
2	Removing and installing fuse holder	315
2.1	Removing and installing fuse holder on left of dash panel	315
3	Relay carrier	317
3.1	Removing and installing relay carrier with automatic fuses on left of dash panel	317
3.2	Removing relay carrier from onboard supply control unit J519 on left in dash panel and installing	319
4	Electronics boxes	322
4.1	Removing and installing E-box on left side of engine compartment up to 10/2008	322
4.2	Removing and installing E-box on left side of engine compartment from 11/2008	325
5	Control units	330
5.1	Onboard supply control unit J519 , vehicles to 05/09	330
5.2	Onboard supply control unit J519 , vehicles from 06/09	332
5.3	Data bus diagnostic interface J533	335
5.4	Coding convenience system central control unit J393 (up to MY2009)	337
5.5	Driver door control unit J386	342
5.6	Front passenger door control unit J387	344
5.7	Coding rear left door control unit J388	345



5.8	Coding rear right door control unit J389	347
5.9	Trailer detector control unit J345	348
5.10	Garage door operation control unit J530	351
6	Wiring harness and connector repairs	352
7	Specified torques: wiring	353
7.1	Specified torques: fuse holder	353
7.2	Specified torques: E-box on left side of engine compartment up to 10/2008	353
7.3	Specified torques: electronics box (E-box) on left side of engine compartment from 11/2008	353
7.4	Specified torques: convenience system central control unit J393	353
7.5	Specified torques: trailer detector control unit J345	353