



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Tools	1
1.2 Automatic anti-dazzle interior mirror	1
1.3 Removing and installing interior mirror with rain sensor	2
1.4 Bonding on retaining plate for interior mirror with rain sensor	3
1.5 Removing and installing interior mirror	3
1.6 Bonding on retaining plate for interior mirror without rain sensor	4
2 Compartments, covers and trims	6
2.1 Tools	6
2.2 Removing and installing basic version centre console	6
2.3 Removing and installing centre console (Highline version)	10
2.4 Removing and installing cup holder in Highline centre console	18
2.5 Repairing cup holder in centre console, Highline	19
2.6 Removing and installing dash panel middle trim	22
2.7 Removing and installing dash panel end trims	23
2.8 Removing and installing steering column trim	24
2.9 Removing and installing left trim panel on driver side	25
2.10 Removing and installing right trim panel on driver side	27
2.11 Removing and installing centre cover	29
2.12 Removing and installing glove compartment	30
2.13 Removing and installing glove compartment lock cylinder	31
2.14 Removing and installing footwell cover on driver side	32
2.15 Removing and installing dash panel decorative trims	33
2.16 Removing and installing sun visor	34
3 Sill panel mouldings	37
3.1 Removing and installing sill panel mouldings	37
4 Repairing windbreak	39
4.1 Tools	39
4.2 Renewing broken-off bar	39
4.3 Renewing locking pin	41
4.4 Renewing middle joint	42
69 - Passenger protection	43
1 Seat belts	43
1.1 Safety regulations for belt tensioners	43
1.2 Disposal of belt tensioner units	43
1.3 Removing and installing front seat belts	43
1.4 Removing and installing front belt buckle	45
1.5 Removing and installing rear seat belts	47
1.6 Removing and installing rear belt buckles	48
1.7 Removing and installing rear seat belt end anchors	49
2 Inspecting seat belts	50
2.1 Points to check	50
3 Checking child seat anchors (ISOFIX) after an accident	53
3.1 Points to check	53
4 Roll-over bar	54
4.1 Safety regulations and notes for working on the roll-over bar	54
4.2 Removing and installing headrest cover	54
4.3 Removing and installing roll-over bar trim	55
4.4 Removing and installing roll-over bar trim support	56
4.5 Removing and installing roll-over bar	58



4.6	Retracting the roll-over bar	59
5	Airbag	61
5.1	Tools	61
5.2	Overview of locations - airbag systems	62
5.3	Safety precautions when working on airbag	63
5.4	Renewing airbag units following an accident	64
5.5	Removing and installing airbag control unit J234	65
5.6	Removing and installing driver airbag unit	68
5.7	Removing and installing return spring with slip ring	71
5.8	Removing and installing front passenger airbag unit	72
5.9	Removing and installing side airbags on driver and front passenger sides	76
5.10	Adapting components	79
6	Seat occupied sensor, front passenger side	80
6.1	Tools	80
6.2	Removing and installing seat occupied sensor, front passenger side G128	80
7	Seat occupied recognition (USA)	85
7.1	Safety precautions for when working on seat occupied recognition	85
7.2	Procedure after an accident when belt tensioner and/or airbag was triggered	85
7.3	Assembly overview - seat occupied recognition (USA)	86
7.4	Components of repair kit for seat occupied recognition	86
7.5	Removing components of seat occupied recognition (vehicles with manually operated seats)	87
7.6	Installing repair kit for seat occupied recognition (vehicles with manually adjusted seats)	89
7.7	Removing components of seat occupied recognition (vehicles with electrically operated seats)	90
7.8	Installing repair kit for seat occupied recognition (vehicles with electrically operated seats)	93
7.9	Importers reporting obligation	94
8	Crash sensors	95
8.1	Removing and installing front door crash sensors	95
70 - Trim, insulation		96
1	Dash panel	96
1.1	Tools	96
1.2	Removing and installing dash panel	96
1.3	Removing and installing assembly carrier, left-hand drive vehicle	101
2	Door and side trims	108
2.1	Tools	108
2.2	Removing and installing door trim on driver side	109
2.3	Removing and installing door trim on front passenger side	114
2.4	Removing and installing door trim cover	118
2.5	Removing and installing side trim	119
3	Pillar trims	122
3.1	Removing and installing upper trim for A-pillar	122
3.2	Removing and installing middle trim for A-pillar	123
3.3	Removing and installing lower trim for A-pillar	124
4	Rear lid trim	127
4.1	Tools	127
4.2	Removing and installing rear lid trim	127
5	Load and luggage compartment trims	130
5.1	Tools	130
5.2	Removing and installing lock carrier cover	130
5.3	Removing and installing luggage compartment cover	131
5.4	Removing and installing battery covers (6-cylinder petrol engine)	132



5.5	Removing and installing luggage and load compartment right side trim	133
5.6	Removing and installing luggage and load compartment left side trim	135
5.7	Removing and installing main bearing cover cap	136
5.8	Removing and installing back panel trim	137
6	Roof cross member	140
6.1	Removing and installing lower roof cross member trim	140
6.2	Removing trim from upper corner of windscreen and installing	141
72	- Seat frames	143
1	Front seats	143
1.1	Tools	143
1.2	Removing and installing front seat	144
1.3	Removing and installing trim on seat, on sill panel side	148
1.4	Removing and installing seat drawer mounting	149
1.5	Removing and installing trims of electrically adjustable seat, on sill panel side	151
1.6	Removing and installing seat drawer mounting	152
1.7	Removing and installing front seat bar and operating lever	153
1.8	Removing and installing bar and operating lever on electrically adjustable seat	154
1.9	Removing and installing trim on seat, on tunnel side	155
1.10	Removing and installing front seat backrest	157
1.11	Removing and installing backrest release Bowden cable	159
1.12	Removing and installing manually adjustable lumbar support frame	160
1.13	Removing and installing Easy Entry unit Bowden cable	162
1.14	Removing and installing seat adjustment switch in the backrest	163
1.15	Removing and installing electric longitudinal seat adjustment	164
1.16	Removing and installing seat pan on electrically adjustable seat	166
1.17	Removing and installing rake adjustment on electrically adjustable seat	168
1.18	Removing and installing height adjustment on electrically adjustable seat	169
1.19	Removing and installing lumbar support on electrically adjustable seat	171
1.20	Removing and installing drive for (electric) backrest adjustment	173
2	Rear seats	174
2.1	Tools	174
2.2	Removing and installing rear seat	174
2.3	Removing and installing backrest	176
2.4	Removing and installing through-loading aperture cover	177
2.5	Removing and installing through-loading aperture	178
74	- Seat - padding, covers	180
1	Front seat covers and padding	180
1.1	Tools	180
1.2	Removing and installing front seat cushion cover and padding	181
1.3	Removing and installing front seat backrest cover and padding	183
2	Rear seat covers and padding	190
2.1	Removing and installing bench seat cover and padding	190
2.2	Removing and installing backrest cover and padding	190