



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Assembly overview - lock carrier, service position	2
1.3 Service position	2
1.4 Removing and installing lock carrier with attachments	4
1.5 Assembly overview - air deflectors on lock carrier	6
2 Wings	7
2.1 Tools	7
2.2 Assembly overview - wing	7
2.3 Removing and installing wing	8
2.4 Removing and installing wing bracket	10
3 Noise insulation	11
3.1 Tools	11
3.2 Noise insulation	11
4 Underbody cover	13
4.1 Tools	13
4.2 Underbody trim panels	13
5 Plenum chamber bulkhead	15
5.1 Tools	15
5.2 Materials	15
5.3 Assembly overview - bulkhead	16
6 Bulkhead of plenum chamber	17
6.1 Tools	17
6.2 Assembly overview - plenum chamber bulkhead	17
7 Radius rod	18
7.1 Tools	18
7.2 Assembly overview - radius rod	18
8 Tunnel cross-piece	20
8.1 Tools	20
8.2 Assembly overview - tunnel cross-piece	20
55 - Bonnet, rear lid	21
1 Bonnet	21
1.1 Tools	21
1.2 Assembly overview - bonnet	21
1.3 Removing and installing bonnet	23
1.4 Removing gas strut	25
1.5 Releasing gas from gas strut	25
1.6 Removing and installing lid hinge	25
1.7 Removing and installing insulation	27
1.8 Assembly overview - bonnet lock and release components	27
1.9 Removing and installing lid lock	29
1.10 Bowden cable coupling	31
1.11 Adjusting bonnet	31
1.12 Removing and installing release lever	33
2 Tailgate	35
2.1 Tools	35
2.2 Assembly overview - rear lid	35
2.3 Removing and installing rear lid	36
2.4 Adjusting rear lid	38
2.5 Removing gas strut	41



2.6	Releasing gas from gas strut	41
2.7	Assembly overview - release element	41
2.8	Removing and installing release element	42
2.9	Removing and installing lid lock	44
2.10	Removing and installing striker pin with power latching motor	45
2.11	Removing and installing side striker pin	46
2.12	Adjusting adjustment buffer	47
2.13	Emergency release for rear lid	48
2.14	Rear lid seal	48
3	Tank flap unit	51
3.1	Tools	51
3.2	Assembly overview - tank flap unit and actuator	51
3.3	Removing and installing tank flap unit	53
3.4	Removing and installing actuator	55
57	Front doors, door components, central locking	56
1	Rear door	56
1.1	Tools	56
1.2	Assembly overview - front door	56
1.3	Assembly overview - door hinges	58
1.4	Removing and installing door	59
1.5	Adjusting door	61
2	Door components	63
2.1	Tools	63
2.2	Assembly overview - assembly carrier	65
2.3	Removing and installing subframe	65
2.4	Assembly overview - door handle and door lock	69
2.5	Removing and installing housing	70
2.6	Removing and installing door handle	71
2.7	Removing and installing door lock	71
2.8	Removing and installing mounting plate	72
2.9	Inner door seal	73
2.10	Removing and installing inner door seal	74
2.11	Removing and installing outer door seal	75
2.12	Assembly overview - insulation	76
3	Central locking	78
3.1	Tool	78
3.2	Fitting location overview - central locking components	78
3.3	Adapting radio remote control ignition keys to the convenience system	79
3.4	Adapting remote control keys to immobilizer	80
3.5	Assembly overview - battery for folding key with remote control	80
3.6	Battery for folding key with radio remote control	81
58	Rear doors, door components	83
60	Sunroof	84
1	Externally guided sliding roof with glass panel	84
61	Convertible roof, hardtop, canopy	85
1	Notes for working on the CSC roof	85
1.1	Notes for safety and working on the CSC roof	85
1.2	Rear lid service position	86
1.3	Opening CSC roof without electrohydraulic system	87
1.4	Closing CSC roof without electrohydraulic system	91
1.5	Repairing seals with Sipirol coatings	96
2	Sequence description	100



3	Assembly overview - CSC roof	106
4	Glass panel	107
4.1	Tool	107
4.2	Assembly overview - glass panel	107
4.3	Removing glass panel	109
4.4	Installing glass panel	114
4.5	Adjusting glass panel	116
4.6	Shut lines for glass panel	117
4.7	Removing Bowden cables for glass panel	119
4.8	Installing Bowden cables for glass panel	125
4.9	Removing sliding sunroof motor	127
4.10	Installing sliding sunroof motor	128
4.11	Glass panel seal (> 07.2007)	129
4.12	Cleaning water drainage hoses	130
4.13	Removing guide rail	131
4.14	Install guide rail	137
4.15	Adjusting guide rail	145
5	Roof	146
5.1	Tool	146
5.2	Removing centre roof section	146
5.3	Install middle section of roof.	153
5.4	Adjusting centre roof section	158
5.5	Removing seal for centre roof section	159
5.6	Installing seal for centre roof section	160
5.7	Shut lines for roof centre section	162
6	Rear window frame	163
6.1	Tool	163
6.2	Assembly overview - rear window frame	163
6.3	Removing rear window frame	164
6.4	Installing rear window frame	168
6.5	Adjusting rear window frame	169
6.6	Shut lines for rear window frame	170
6.7	Assembly overview - rear window frame seal	172
6.8	Removing and installing rear window frame seal	173
7	Roof member	175
7.1	Tool	175
7.2	Removing roof side member	176
7.3	Installing roof side member	184
7.4	Adjusting roof side member	190
7.5	Roof side member shut lines	191
7.6	Removing seal for roof side member	193
7.7	Installing seal for roof side member	196
7.8	Removing locking device for roof side member	199
7.9	Installing locking device for roof side member	200
7.10	Repairing water drain on roof side member	201
7.11	Repairing water drain point on roof side member	205
7.12	Assembly overview - lock fitting	207
8	CSC roof	208
8.1	Note on sender transferral when changing roof	208
8.2	Tools	208
8.3	Removing CSC roof	210
8.4	Setting CSC roof down	216
8.5	Removing new CSC roof from transportation box	217
8.6	Installing CSC roof	219
8.7	Basic settings for a newly installed CSC roof	223



9	Interior trim	232
9.1	Tool	232
9.2	Assembly overview - interior trim	232
9.3	Removing sliding headliner	234
9.4	Installing sliding headliner	237
9.5	Removing Bowden cables for sun visor	240
9.6	Installing Bowden cables for sliding headliner	243
9.7	Removing tensioned headlining	245
9.8	Installing tensioned headlining	248
9.9	Tensioning straps for tensioned headlining	251
9.10	Removing bracing bow for tensioned headlining	258
9.11	Installing bracing bow for tensioned headlining	259
9.12	Trim for roof side member	260
9.13	Preparing new trim for roof side member	261
9.14	Tensioning straps for roof side member trim	262
9.15	Lower trim for rear window frame	266
9.16	Upper trim for rear window frame	267
10	Roof side member flap	268
10.1	Tool	268
10.2	Assembly overview - trim for roof side member flap	268
10.3	Assembly overview - roof side member flap mechanism	269
10.4	Removing roof side member flap	270
10.5	Installing roof side member flap	273
10.6	Adjusting roof side member flaps	274
11	Cover flaps	275
11.1	Assembly overview - trim for cover flap	275
11.2	Removing cover flaps	276
11.3	Installing cover flaps	277
11.4	Adjusting cover flap	278
12	Rear shelf	279
12.1	Assembly overview - rear shelf	279
12.2	Removing rear shelf	280
12.3	Installing rear shelf	281
12.4	Installing stop buffer for rear shelf	283
12.5	Removing and installing rear shelf protective strip	284
12.6	Hinges for rear shelf with assembly frame	286
12.7	Covers for assembly frame	287
12.8	Repairing cables in assembly frame	288
13	Hinge for rear shelf	292
13.1	Assembly overview	292
13.2	Removing	293
13.3	Installing	294
14	Securing bracket	295
14.1	Assembly overview	295
14.2	Removing	296
14.3	Installing	297
15	Windscreen frame seal	298
15.1	Assembly overview - windscreen frame seal	298
15.2	Removing windscreen frame seal	299
15.3	Installing windscreen frame seal	300
16	Wind deflector	303
16.1	Assembly overview - wind deflector	303
17	Electrical components	304
17.1	Tool	304



17.2	Assembly overview	304
17.3	Front sender for position of roof side member (G556 / G557)	306
17.4	Sender for roof side member locked (G558 / G559)	307
17.5	Sender for rear window frame locked (G560 / G561)	308
17.6	Sender for rear window frame open (G562)	310
17.7	Sender roof side member flap open (G566 / G567)	312
17.8	Sender for rear shelf locked (G563 / G564)	313
17.9	Sender for roof stowed (G565) - vehicles > VIN 8V036221	314
17.10	Senders for roof stowed (G565 and G672) - vehicles with VIN 8V036222 >	315
17.11	Luggage cover contact switch (F364)	316
17.12	Convertible roof actuation control unit (J256)	317
17.13	Coding roof actuation control unit	317
18	Hydraulic system	319
18.1	Notes on hydraulic system	319
18.2	Rules for cleanliness	319
18.3	Filling and bleeding the hydraulic system	320
18.4	Tool	322
18.5	Assembly overview	322
18.6	Assembly overview - hydraulic pump	324
18.7	Hydraulic pump connection assignment	325
18.8	Removing hydraulic oil reservoir	330
18.9	Removing and installing hydraulic lines on hydraulic cylinder	331
18.10	Hydraulic cylinder in roof side member	332
18.11	Hydraulic cylinder in securing frame	334
18.12	Hydraulic cylinder on hinge	336
18.13	Hydraulic cylinder in main hinge	337
63	Bumpers	339
1	Front bumper cover > 12.2010	339
1.1	Tools	339
1.2	Repairing front bumper cover	339
1.3	Assembly overview - front bumper cover	339
1.4	Removing and installing front bumper cover	340
1.5	Front bumper cover add-on parts	342
1.6	Front bumper cover substructure parts	343
1.7	Assembly overview - front bumper carrier	344
1.8	Assembly overview - front bumper carrier (USA)	345
2	Front bumper cover 01.2011 >	346
2.1	Tools	346
2.2	Repairing front bumper cover	346
2.3	Assembly overview - front bumper cover	346
2.4	Removing and installing front bumper cover	347
2.5	Front bumper cover add-on parts	349
2.6	Front bumper cover substructure parts	350
2.7	Assembly overview - front bumper carrier	351
2.8	Assembly overview - front bumper carrier (USA)	352
2.9	Number plate carrier	353
3	Rear bumper cover > 12.2010	354
3.1	Tools	354
3.2	Repairing rear bumper cover	354
3.3	Installing brackets for parking aid system	354
3.4	Assembly overview - rear bumper cover	359
3.5	Removing and installing rear bumper cover	359
3.6	Rear bumper cover add-on parts	361
3.7	Rear bumper cover substructure parts	362



3.8	Assembly overview - rear bumper carrier	363
3.9	Assembly overview - rear bumper carrier (USA)	364
3.10	Assembly overview - towing bracket	364
4	Rear bumper cover 01.2011 >	366
4.1	Tools	366
4.2	Repairing rear bumper cover	366
4.3	Assembly overview - rear bumper cover	366
4.4	Removing and installing rear bumper cover	367
4.5	Rear bumper cover add-on parts	369
4.6	Rear bumper cover substructure parts	370
4.7	Assembly overview - rear bumper carrier	371
4.8	Assembly overview - rear bumper carrier (USA)	372
4.9	Assembly overview - towing bracket	372
64	- Glazing	374
1	Flush bonded windows	374
1.1	Tools	374
1.2	Materials	376
1.3	Repairing windscreen	376
1.4	Assembly overview - windscreen	376
1.5	Plenum chamber cover	378
1.6	Removing windscreen	381
1.7	Installing windscreen	381
1.8	Assembly overview - rear window	381
1.9	Removing undamaged rear window	383
1.10	Removing broken rear window	385
1.11	Installing rear window	386
1.12	Preparing old undamaged window for glazing	386
1.13	Preparing new window for glazing	386
1.14	Preparing body flange for glazing	387
1.15	Fitting instructions	389
1.16	Minimum curing period	391
1.17	Touching up paint damage	392
1.18	Cleaning in the event of dirt caused by adhesive sealing material	392
2	Door window	393
2.1	Tools	393
2.2	Assembly overview - door window	394
2.3	Removing door window	395
2.4	Installing door window	396
2.5	Adjusting door window	397
2.6	Door window adjustment dimensions	400
2.7	Removing window regulator motor	401
2.8	Installing window regulator motor	402
2.9	Removing window lifters	403
2.10	Installing window lifters	404
2.11	Basic settings for window regulator	405
2.12	Removing window channel and window slot seal	405
2.13	Installing window channel and window slot seal	407
3	Side window	408
3.1	Tools	408
3.2	Assembly overview - side window	408
3.3	Removing side window with window regulator	409
3.4	Installing side window with window regulator	410
3.5	Removing side window	411
3.6	Installing side window	412



3.7	Adjusting side window	413
3.8	Side window adjustment dimensions	416
3.9	Window regulator motor	417
3.10	Assembly overview - window slot seals	418
3.11	Assembly overview - intermediate plate	419
66	Exterior equipment	420
1	Wheel housing liner	420
1.1	Tools	420
1.2	Assembly overview - front wheel housing liner	420
1.3	Removing and installing front wheel housing liner	421
1.4	Assembly overview - rear wheel housing liner	423
1.5	Removing and installing rear wheel housing liner	424
2	Exterior mirror > 05.2008	426
2.1	Tools	426
2.2	Assembly overview - exterior mirror	427
2.3	Removing and installing mirror glass	427
2.4	Removing and installing mirror housing	428
2.5	Removing and installing trim	430
2.6	Removing and installing turn signal repeater	430
2.7	Removing and installing adjustment unit with motor	431
2.8	Removing and installing entry light	432
2.9	Removing and installing exterior mirror	433
3	Exterior mirror 06.2008 >	434
3.1	Tools	434
3.2	Assembly overview - exterior mirror	434
3.3	Removing and installing mirror glass	435
3.4	Removing and installing mirror housing	437
3.5	Removing and installing trim	438
3.6	Removing and installing side turn signal and entry light in exterior mirror	439
3.7	Removing and installing exterior mirror	441
4	Radiator grille > 12.2010	442
4.1	Assembly overview - radiator grille	442
4.2	Removing and installing radiator grille	443
4.3	Removing and installing emblem	445
4.4	Assembly overview - number plate carrier	445
4.5	Removing and installing number plate carrier	447
5	Radiator grille 01.2011 >	449
5.1	Removing radiator grille	449
5.2	Installing radiator grille	450
5.3	Removing and installing emblem	451
6	Mouldings and trims	453
6.1	Cover strip	453
6.2	Wheel arch trim	455
7	Lettering	457
7.1	Tools	457
7.2	Fitting instructions	457
7.3	Rear lettering dimensions > 12.2010	457
7.4	Rear lettering dimensions 01.2011 >	459
7.5	Lettering on wing	460