



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Identification plate	1
1.3 Vehicle data sticker	1
2 Safety instructions	2
3 Moulded foam elements	3
4 Galvanized body parts	4
4.1 Body	4
4.2 Platform	5
5 Strengthened steel body panels	6
5.1 Body	7
5.2 Platform	8
6 Laser welding	9
7 Body panel gaps/shut lines	10
7.1 Body - front	10
7.2 Body - rear	13
8 Body dimensions	16
8.1 Body - front	16
8.2 Body - centre	19
8.3 Body - rear	26
8.4 Floor group - front	29
8.5 Floor group - centre	31
8.6 Floor group - rear	32
9 Alignment bracket set	36
9.1 Overview	36
10 Portal / convertible roof gauge	37
10.1 Overview - portal gauge	37
10.2 Overview - convertible roof gauge	38
50 - Body - front	39
1 Renewing right console	39
1.1 Tools	39
1.2 Removing	40
1.3 Installing	41
2 Renewing left console	43
2.1 Tools	43
2.2 Removing	44
2.3 Installing	45
3 Renewing retaining bracket (for subframe)	47
3.1 Tools	47
3.2 Removing	48
3.3 Installing	49
4 Renewing bumper bracket	51
4.1 Tools	51
4.2 Removing	51
4.3 Installing	52
5 Renewing upper wheel housing longitudinal member	54
5.1 Tools	55
5.2 Removing	55
5.3 Installing	57



6	Renewing front wheel housing	60
6.1	Tools	60
6.2	Removing	61
6.3	Installing	63
7	Renewing front longitudinal member	70
7.1	Tools	70
7.2	Removing	71
7.3	Installing	73
8	Renewing front longitudinal member - partial renewal	78
8.1	Tools	78
8.2	Removing	79
8.3	Installing	81
9	Repairing threads for securing subframe (suspension subframe)	83
9.1	Tools	84
9.2	Contents of thread repair kit	84
9.3	Repairing thread	85
51 - Body - centre		88
1	Renewing windscreen frame	88
1.1	Tools	88
1.2	Removing	89
1.3	Installing	89
2	Renewing A-pillar	91
2.1	Tools	91
2.2	Removing	92
2.3	Installing	93
3	Renewing left and right upper A-pillars	99
3.1	Tools	99
3.2	Removing	100
3.3	Installing	101
4	Renewing A-pillar reinforcement	107
4.1	Tools	107
4.2	Removing	108
4.3	Installing	113
5	Renewing B-pillar reinforcement	121
5.1	Tools	122
5.2	Removing	122
5.3	Installing	124
6	Renewing outer side member	128
6.1	Tools	128
6.2	Removing	129
6.3	Installing	130
7	Renewing side member reinforcement	134
7.1	Tools	134
7.2	Removing	135
7.3	Installing	136
53 - Body - rear		139
1	Renewing rear cross panel	139
1.1	Tools	140
1.2	Removing	140
1.3	Installing	142
2	Renewing tail light mounting	144
2.1	Tools	144



2.2	Removing	145
2.3	Installing	147
3	Renewing rear longitudinal member - partial renewal	151
3.1	Tools	151
3.2	Removing	152
3.3	Installing	153
4	Renewing side panel	155
4.1	Tools	156
4.2	Removing	156
4.3	Installing	158
5	Renewing wheel housing liner	165
5.1	Tools	165
5.2	Removing	166
5.3	Installing	167
6	Renewing window lifter mounting	172
6.1	Tools	172
6.2	Removing	172
6.3	Installing	173
7	Renewing spare wheel well	176
7.1	Tools	176
7.2	Removing	177
7.3	Installing	180