



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Front-wheel drive - gearbox identification</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Front-wheel drive - identification codes, assembly allocation, Golf 2004 ▶	2
1.3 Front-wheel drive - identification codes, assembly allocation, Golf 2009 ▶	4
1.4 Identification codes, assembly allocation, Golf Plus 2005 ▶	6
1.5 Identification codes, assembly allocation, Golf Plus 2009 ▶	7
1.6 Front-wheel drive - identification codes, assembly allocation, Passat 2006 ▶	8
1.7 Identification codes, engine allocation, Passat CC 2009 ▶	11
1.8 Front-wheel drive, identification codes, assembly allocation, CC 2010 ▶	12
1.9 Identification codes, assembly allocation, Eos 2006 ▶	14
1.10 Identification codes, engine allocation, Touran 2003 ▶	16
<b>2 All-wheel drive - gearbox identification</b>	<b>19</b>
2.1 Location on gearbox	19
2.2 All-wheel drive - identification codes, assembly allocation, Golf 2004 ▶	20
2.3 All-wheel drive - identification codes, assembly allocation, Golf 2009 ▶	23
2.4 All-wheel drive - identification codes, assembly allocation, Passat 2006 ▶	24
2.5 All-wheel drive, identification codes, assembly allocation, CC 2010 ▶	25
<b>3 Capacities</b>	<b>26</b>
3.1 Capacity, manual gearbox	26
3.2 Capacity, bevel box	26
<b>4 Front-wheel drive - Overview power transmission</b>	<b>27</b>
<b>5 Overview - all-wheel drive power train</b>	<b>29</b>
<b>6 Calculating overall gear ratio "i"</b>	<b>31</b>
<b>7 All-wheel drive - notes on performance test</b>	<b>32</b>
<b>8 General repair instructions</b>	<b>33</b>
8.1 Special tool	33
8.2 Gearbox	33
8.3 Gaskets and seals	33
8.4 Sealant	33
8.5 Locking devices	34
8.6 Nuts and bolts	34
8.7 Bearings	34
8.8 Shims	34
8.9 Synchro-rings	35
8.10 Gear wheels	35
8.11 Synchromeshed gears	35
8.12 Clutch	35
<b>9 Safety precautions for vehicles with a start-stop system</b>	<b>36</b>
<b>30 - Clutch</b>	<b>37</b>
<b>1 Repairing clutch mechanism</b>	<b>37</b>
1.1 Overview	37
1.2 Assembly overview - Touran to 05.03 only, pedal cluster with clutch pedal switch F36	38
1.3 Assembly overview - Touran from 06.03, Golf, Golf Plus, Passat, Passat CC, CC and Eos - pedal cluster	39
1.4 Removing and installing over-centre spring	41
1.5 Removing and installing over-centre spring with mounting bracket installed (Touran from approx. 06.03)	60
1.6 Removing and installing clutch pedal	63
1.7 Removing and installing mounting bracket, Golf 2004 ▶	66
1.8 Removing and installing mounting bracket, Golf 2009 ▶ LHD	72



1.9	Removing and installing mounting bracket, Golf Plus left-hand drive	77
1.10	Removing and installing mounting bracket, Golf 2009 ▶ RHD and Golf Plus RHD	83
1.11	Removing and installing master cylinder	89
1.12	Assembly overview - hydraulics (LHD)	91
1.13	Assembly overview - hydraulics (RHD)	93
1.14	Touran: Removing and installing clutch pedal switch F36	95
1.15	Removing and installing mounting bracket (all Tourans)	96
1.16	Touran: removing and installing master cylinder with mounting bracket removed (to 05.03)	104
1.17	Removing and installing mounting bracket, Passat, Passat CC and CC	106
1.18	Removing and installing mounting bracket, Eos	110
<b>2</b>	<b>Removing and installing clutch position sender G476</b>	<b>115</b>
2.1	Removing	115
2.2	Installing	117
<b>3</b>	<b>Bleeding clutch system</b>	<b>119</b>
<b>4</b>	<b>Repairing clutch release mechanism</b>	<b>121</b>
4.1	Assembly overview	121
4.2	Removing line and bleeder from and installing on slave cylinder	122
4.3	Removing and installing slave cylinder with release bearing	123
4.4	Removing and installing line for clutch mechanism	124
<b>5</b>	<b>Repairing clutch, in conjunction with dual-mass flywheel</b>	<b>127</b>
5.1	Identifying make of clutch (vehicles with 2.0 l - 100 kW turbo diesel engine and vehicles with 2.0 l - 103 kW turbo diesel engine)	128
5.2	Removing and installing "Sachs" clutch	129
5.3	Repairing "Sachs" clutch	131
5.4	Removing and installing "LuK" clutch	132
5.5	Repairing LuK clutch	135
<b>6</b>	<b>Repairing clutch, in conjunction with one-piece flywheel</b>	<b>137</b>
<b>34 - Controls, housing</b>		<b>140</b>
<b>1</b>	<b>Repairing selector mechanism</b>	<b>140</b>
1.1	Installation position of selector mechanism	140
1.2	Overview of selector mechanism	141
1.3	Assembly overview - gear knob and cover	141
1.4	Removing and installing gaiter with gear knob and noise insulation, Golf and Eos	143
1.5	Removing and installing gaiter with gear knob and noise insulation, Golf Plus	144
1.6	Removing and installing gaiter with gear knob, Touran	146
1.7	Removing and installing gaiter with gear knob and noise insulation, Passat, Passat CC and CC	147
1.8	Repairing gear lever and selector housing (to 10.06)	149
1.9	Repairing gear lever and selector housing (from 11.06)	151
1.10	Assembly overview - removing and installing selector cables	156
1.11	Removing and installing selector mechanism	161
1.12	Adjusting selector mechanism	167
1.13	Checking selector mechanism	169
<b>2</b>		<b>171</b>
<b>3</b>	<b>Touran, identifying gearbox for removal and installation</b>	<b>174</b>
<b>4</b>	<b>Touran, removing and installing gearbox to gearbox date 31 10 4 (gearbox with stub shaft on right)</b>	<b>175</b>
4.1	Removing gearbox	177
4.2	Installing gearbox	183
<b>5</b>	<b>Touran, difference between removing and installing gearbox from gearbox date 01 11 4 (gearbox with right flange shaft)</b>	<b>190</b>
<b>6</b>	<b>Touran, removing and installing gearbox (to 11.06 = vehicles with small headlights, from 12.06 to 05.10 = vehicles with large headlights with curvature)</b>	<b>191</b>



6.1	Removing gearbox .....	194
6.2	Installing gearbox .....	204
<b>7</b>	.....	<b>212</b>
7.1	Removing gearbox .....	215
7.2	Installing gearbox .....	223
<b>8</b>	<b>Removing and installing gearbox, Golf 2004 ▶ front-wheel drive</b> .....	<b>233</b>
8.1	Removing gearbox .....	235
8.2	Installing gearbox .....	243
<b>9</b>	<b>Removing and installing gearbox, Golf 2009 ▶ front-wheel drive with turbo diesel engine</b> .....	<b>252</b>
9.1	Removing gearbox .....	255
9.2	Installing gearbox .....	263
<b>10</b>	<b>Removing and installing gearbox, Golf 2009 ▶ front-wheel drive with petrol engine</b> .....	<b>272</b>
10.1	Removing gearbox .....	275
10.2	Installing gearbox .....	283
<b>11</b>	<b>Removing and installing gearbox, Golf 2004 ▶ all-wheel drive</b> .....	<b>292</b>
11.1	Removing and installing gearbox in vehicles with turbo diesel engine .....	292
11.2	Removing and installing gearbox, vehicles with 6-cylinder petrol engine .....	311
<b>12</b>	<b>Removing and installing gearbox, Golf 2009 ▶ all-wheel drive</b> .....	<b>331</b>
12.1	Removing gearbox .....	334
12.2	Installing gearbox .....	344
<b>13</b>	<b>Removing and installing gearbox, Golf Plus 2005 ▶</b> .....	<b>355</b>
13.1	Removing gearbox .....	357
13.2	Installing gearbox .....	366
<b>14</b>	<b>Removing and installing gearbox, Golf Plus 2009 ▶</b> .....	<b>375</b>
14.1	Removing gearbox .....	378
14.2	Installing gearbox .....	388
<b>15</b>	<b>Removing and installing gearbox, Passat 2006 ▶ front-wheel drive</b> .....	<b>397</b>
15.1	Removing gearbox .....	398
15.2	Installing gearbox .....	407
<b>16</b>	<b>Removing and installing gearbox, Passat 2006 ▶ all-wheel drive</b> .....	<b>416</b>
16.1	Removing gearbox .....	417
16.2	Installing gearbox .....	426
<b>17</b>	<b>Removing and installing gearbox, Passat CC front-wheel drive and CC front-wheel drive, with turbo diesel engine</b> .....	<b>437</b>
17.1	Removing gearbox .....	439
17.2	Installing gearbox .....	448
<b>18</b>	<b>Removing and installing gearbox, Passat CC front-wheel drive and CC front-wheel drive, with petrol engine</b> .....	<b>457</b>
18.1	Removing gearbox .....	458
18.2	Installing gearbox .....	467
<b>19</b>	<b>Removing and installing gearbox, CC all-wheel drive</b> .....	<b>476</b>
19.1	Removing gearbox .....	479
19.2	Installing gearbox .....	488
<b>20</b>	<b>Removing and installing gearbox, Eos</b> .....	<b>500</b>
20.1	Removing gearbox .....	502
20.2	Installing gearbox .....	510
<b>21</b>	<b>Transporting gearbox</b> .....	<b>518</b>
21.1	Front-wheel drive - transporting gearbox .....	518
21.2	All-wheel drive - transporting gearbox .....	518
<b>22</b>	<b>Securing to engine and gearbox support</b> .....	<b>520</b>
<b>23</b>	<b>Gear oil</b> .....	<b>522</b>
23.1	Distinguishing between different manual gearbox types when filling oil .....	522



23.2	Checking gear oil level	522
<b>24</b>	<b>Removing and installing bevel box, vehicles with 6-cylinder petrol engine and vehicles with turbo diesel engine without particulate filter</b>	<b>527</b>
24.1	Removing bevel box	527
24.2	Installing bevel box	532
<b>25</b>	<b>Removing and installing bevel box, vehicles with turbo diesel engine and particulate filter, to approx. 10. 09</b>	<b>537</b>
25.1	Removing bevel box	538
25.2	Installing bevel box	543
<b>26</b>	<b>Removing and installing bevel box, vehicles with turbo diesel engine and particulate filter, from approx. 11. 09</b>	<b>546</b>
26.1	Removing bevel box	546
26.2	Installing bevel box	550
<b>27</b>	<b>Checking or topping up gear oil in bevel box</b>	<b>553</b>
27.1	Checking gear oil in bevel box	554
27.2	Topping up gear oil in bevel box	554
<b>28</b>	<b>Dismantling and assembling gearbox</b>	<b>558</b>
28.1	Overview - gearbox, front-wheel drive, Golf 2004 ▶ and Touran	558
28.2	Overview - gearbox, front-wheel drive, Golf 2009 ▶, Golf Plus, Passat, Passat CC, CC, Eos	559
28.3	Overview - gearbox, all-wheel drive	560
28.4	Assembly overview - front-wheel drive	561
28.5	Assembly overview - all-wheel drive	562
28.6	Assembly overview - removing and installing gearbox housing and selector unit	563
28.7	Assembly overview - front-wheel drive - removing and installing input shaft, output shafts, differential and selector rods; Touran and Golf 2004 ▶	565
28.8	Assembly overview - front-wheel drive - removing and installing input shaft, output shafts, differential and selector rods; Golf 2009 ▶, Golf Plus, Passat, Passat CC, CC and Eos	567
28.9	All-wheel drive - removing and installing input shaft, output shafts, differential, bevel box and selector rods	568
28.10	Installation position of shafts and selector rods in gearbox	570
28.11	Assembly order, gearbox »without« circlip A for input shaft cover made from sheet metal	570
28.12	Assembly order: I = gearbox »with« circlip A for input shaft cover made from sheet metal; II = gearbox with input shaft cover made from plastic	586
<b>29</b>	<b>Repairing gearbox housing</b>	<b>602</b>
<b>30</b>	<b>Front-wheel drive - repairing clutch housing</b>	<b>613</b>
<b>31</b>	<b>four-wheel drive - repairing clutch housing</b>	<b>617</b>
<b>32</b>	<b>Repairing selector unit</b>	<b>621</b>
32.1	Renewing selector shaft seal	622
<b>33</b>	<b>Repairing selector forks</b>	<b>624</b>
<b>35 - Gears, shafts</b>		<b>627</b>
<b>1</b>	<b>Input shaft</b>	<b>627</b>
1.1	Assembly overview - input shaft	627
1.2	Dismantling and assembling input shaft	629
1.3	Renewing input shaft seal	634
<b>2</b>	<b>Output shaft for 1st to 4th gears</b>	<b>636</b>
2.1	Assembly overview - output shaft for 1st to 4th gears	636
2.2	Dismantling and assembling output shaft for 1st to 4th gears	638
2.3	Adjusting output shaft for 1st to 4th gears	660
<b>3</b>	<b>Output shaft for 5th and 6th gears and reverse gear</b>	<b>665</b>
3.1	Assembly overview - output shaft for 5th, 6th and reverse gears	665
3.2	Dismantling and assembling output shaft for 5th, 6th and reverse gears	667
3.3	Adjusting output shaft for 5th, 6th and reverse gears	676



<b>39 - Final drive - differential</b>	<b>682</b>
<b>1 Front-wheel drive - renewing seals for flange shafts or stub shaft with gearbox installed</b>	<b>682</b>
1.1 Renewing oil seal for left flange shaft	682
1.2 Identifying gearbox to renew right oil seal, Golf and Touran	684
1.3 Renewing stub shaft seal - Golf and Touran to gearbox manufacture date 31 10 4	685
1.4 Renewing oil seal for right flange shaft, Golf and Touran from gearbox manufacture date 01 11 4, Golf Plus, Passat, Passat CC, Eos	686
<b>2 All-wheel drive - renewing flange shaft oil seals with gearbox and bevel box installed</b>	<b>689</b>
2.1 Renewing oil seal for left flange shaft	689
2.2 Renewing seal for right flange shaft	689
<b>3 Renewing seal between gearbox and bevel box, in gearbox</b>	<b>692</b>
<b>4 Assembly overview - seals, flange shaft mount and output flange mount in bevel box</b>	<b>694</b>
<b>5 Renewing seal between gearbox and bevel box with bevel box removed</b>	<b>696</b>
<b>6 Renewing bevel box output flange oil seal (bevel box removed)</b>	<b>698</b>
<b>7 Renewing output flange and redetermining thickness of shim (bevel box removed)</b>	<b>708</b>
<b>8 Renewing polygon needle bearing and seal on right flange shaft</b>	<b>709</b>
8.1 Removing	710
8.2 Installing	711
<b>9 Adjustment overview - manual gearbox</b>	<b>713</b>
<b>10 Differential</b>	<b>714</b>
10.1 Front-wheel drive - dismantling and assembling differential	714
10.2 All-wheel drive - dismantling and assembling differential	721
10.3 Adjusting differential	728