



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Identification codes, assembly allocation, ratios and capacities</b>	<b>2</b>
2.1 Identification codes, assembly allocation, ratios and capacities, Golf 2004 ▶	2
2.2 Identification codes, assembly allocation, ratios and capacities, Golf 2009 ▶	5
2.3 Identification codes, assembly allocation, ratios and capacities, Golf Plus 2005 ▶	6
2.4 Identification codes, assembly allocation, ratios and capacities, Golf Plus 2009 ▶	8
2.5 Identification codes, assembly allocation and capacities, Passat 2006 ▶	9
2.6 Identification code, assembly allocation, transmission ratios and capacities, Passat 2011 ▶	10
2.7 Identification codes, assembly allocation, gear ratios and capacities, Passat CC 2009 ▶	11
2.8 Identification codes, assembly allocation, gear ratios and capacities, CC 2010 ▶	12
2.9 Identification codes, assembly allocation and capacities, Eos 2006 ▶	13
2.10 Identification codes, assembly allocation, ratios and capacities, Scirocco 2009 ▶	13
2.11 Calculating overall gear ratio "i"	14
<b>3 Overview - power transmission</b>	<b>15</b>
<b>4 General repair instructions</b>	<b>17</b>
<b>5 Safety precautions</b>	<b>20</b>
5.1 Safety precautions for vehicles with a start-stop system	20
<b>30 - Clutch</b>	<b>21</b>
<b>1 Clutch operation</b>	<b>21</b>
1.1 Overview - clutch actuation	21
1.2 Assembly overview - pedal cluster	23
1.3 Removing and installing over-centre spring	25
1.4 Removing and installing clutch pedal	45
1.5 Removing and installing mounting bracket	48
1.6 Removing and installing master cylinder	77
1.7 Removing and installing clutch position sender G476	79
1.8 Assembly overview - hydraulics (LHD)	82
1.9 Assembly overview - hydraulics (RHD)	84
1.10 Removing and installing slave cylinder	85
1.11 Bleeding clutch system	87
<b>2 Clutch release mechanism</b>	<b>89</b>
2.1 Assembly overview - clutch release mechanism	89
2.2 Repairing clutch release mechanism	90
<b>3 Clutch</b>	<b>91</b>
3.1 Clutch in connection with dual mass flywheel	91
3.2 Clutch in connection with simple flywheel	99
<b>34 - Controls, housing</b>	<b>103</b>
<b>1 Selector mechanism</b>	<b>103</b>
1.1 Installation position of selector mechanism	103
1.2 Overview - selector mechanism	104
1.3 Assembly overview - gear knob and cover	104
1.4 Removing and installing gear knob with gaiter and noise insulation	106
1.5 Assembly overview - Gear lever and selector housing	111
1.6 Dismantling and assembling selector mechanism (from 11.06)	114
1.7 Assembly overview - Selector cables	119
1.8 Removing and installing selector mechanism	127



1.9	Adjusting selector mechanism	131
<b>2</b>	<b>Removing and installing gearbox</b>	<b>135</b>
2.1	Removing and installing gearbox, Golf 2004 ▶	135
2.2	Removing and installing gearbox, Golf 2009 ▶ with 1.4 l engine	149
2.3	Removing and installing gearbox, Golf 2009 ▶ with 1.8 l engine	166
2.4	Removing and installing gearbox, Golf Plus 2005 ▶	184
2.5	Removing and installing gearbox, Golf Plus 2009 ▶	199
2.6	Removing and installing gearbox, Passat 2006 ▶	216
2.7	Removing and installing gearbox, Passat 2011 ▶ with turbo diesel engine	231
2.8	Removing and installing gearbox, Passat 2011 ▶ with 1.4 l petrol engine and CC with 1.4 l petrol engine	246
2.9	Removing and installing gearbox, Passat 2011 ▶ with 1.8 l petrol engine, Passat CC and CC with 1.8 l petrol engine	263
2.10	Removing and installing gearbox, Eos	280
2.11	Removing and installing gearbox - Scirocco	294
<b>3</b>	<b>Transporting gearbox</b>	<b>312</b>
<b>4</b>	<b>Assembly overview - assembly mountings</b>	<b>313</b>
<b>5</b>	<b>Gear oil</b>	<b>315</b>
5.1	Checking and topping up gear oil	315
<b>6</b>	<b>Dismantling and assembling gearbox</b>	<b>318</b>
6.1	Overview - gearbox	318
6.2	Overview - dismantling and assembling gearbox	319
6.3	Assembly overview - removing and installing cover for gearbox housing and 5th and 6th gears	320
6.4	Assembly overview - removing and installing gearbox housing and selector mechanism	323
6.5	Assembly overview - removing and installing input shaft, output shaft, differential and selector forks	324
6.6	Assembly sequence - Removing and installing cover for gearbox housing and 5th and 6th gear	325
6.7	Assembly sequence - Dismantling and assembling gearbox completely	331
<b>7</b>	<b>Gearbox housing and clutch housing</b>	<b>352</b>
7.1	Assembly overview - gearbox housing and clutch housing	352
7.2	Repairing gearbox housing and clutch housing	354
<b>8</b>	<b>Gearbox housing cover</b>	<b>363</b>
8.1	Assembly overview - gearbox housing cover	363
8.2	Repairing gearbox housing cover	364
<b>9</b>	<b>Selector unit</b>	<b>367</b>
9.1	Assembly overview - selector unit	367
9.2	Repairing selector unit	369
<b>10</b>	<b>Selector forks</b>	<b>371</b>
10.1	Assembly overview - selector forks in connection with reverse synchromeshed gear arrow	371
10.2	Assembly overview - selector forks in connection with reverse gear locking collar arrow	372
10.3	Repairing selector forks	374
<b>35 - Gears, shafts</b>		<b>378</b>
<b>1</b>	<b>Input shaft</b>	<b>378</b>
1.1	Assembly overview - input shaft	378
1.2	Dismantling and assembling input shaft	380
1.3	Adjusting input shaft	386
1.4	Renewing input shaft seal	391
<b>2</b>	<b>Output shaft</b>	<b>393</b>
2.1	Assembly overview - output shaft	393
2.2	Dismantling and assembling output shaft	396



2.3	Adjusting output shaft	406
<b>3</b>	<b>Reverse shaft</b>	<b>411</b>
3.1	Assembly overview - reverse shaft with reverse synchromeshed gear arrow	411
3.2	Assembly overview - reverse shaft with reverse gear locking collar arrow	412
3.3	Dismantling and assembling reverse shaft	414
<b>39</b>	<b>Final drive - differential</b>	<b>417</b>
<b>1</b>	<b>Oil seals</b>	<b>417</b>
1.1	Renewing left flange shaft oil seal with gearbox installed	417
1.2	Distinguishing seals for right flange shaft	419
1.3	Renewing right seal with manual gearbox installed (two-part seal for flange shaft and sleeve)	419
1.4	Renewing right seal and sleeve together with manual gearbox installed (one-piece seal and sleeve for flange shaft)	422
<b>2</b>	<b>Adjustment overview</b>	<b>426</b>
<b>3</b>	<b>Differential</b>	<b>427</b>
3.1	Assembly overview - differential	427
3.2	Dismantling and assembling differential	429
3.3	Adjusting differential	434