



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 General repair instructions | 1 |
| 1.1 Tools | 1 |
| 1.2 Gearbox | 1 |
| 1.3 Overview | 1 |
| 1.4 Seals | 2 |
| 1.5 DSG® oil | 3 |
| 1.6 Oil filter change - »Yes or no?« | 3 |
| 1.7 Oil drain and inspection plug A | 3 |
| 1.8 Nuts and bolts | 4 |
| 1.9 Electrical components | 4 |
| 2 Fault finding | 5 |
| 2.1 General notes on fault finding | 5 |
| 2.2 Useful information about the "behaviour of the control unit in the event of a gearbox fault" | 5 |
| 2.3 Special notes on fault finding | 6 |
| 3 Identification of gearbox | 8 |
| 3.1 Reading gearbox code letters | 8 |
| 4 Code - engine allocation | 10 |
| 4.1 Golf Plus 2009 ▶ | 10 |
| 4.2 Golf Plus 2005 ▶ | 10 |
| 4.3 Golf 2009 ▶ | 11 |
| 4.4 Scirocco 2009 ▶ | 11 |
| 4.5 Golf 2004 ▶ | 11 |
| 4.6 Touran 2003 ▶ | 12 |
| 4.7 Passat 2006 ▶ | 13 |
| 4.8 Eos 2006 ▶ | 13 |
| 4.9 Passat CC 2009 ▶; CC 2010 ▶ | 14 |
| 4.10 Sharan 2011 ▶ | 14 |
| 5 Capacity | 15 |
| 30 - Clutch | 16 |
| 1 Clutch | 16 |
| 1.1 Assembly overview - dual clutch | 16 |
| 1.2 Removing and installing clutch end cover | 18 |
| 1.3 Removing dual clutch | 24 |
| 1.4 Installing dual clutch | 25 |
| 34 - Controls, housing | 31 |
| 1 Electrical and electronic components and their locations DSG® | 31 |
| 1.1 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox installed) | 31 |
| 1.2 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox removed) | 40 |
| 1.3 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509 | 47 |
| 2 Removing and installing gear oil cooler | 48 |
| 3 Removing and installing oil pump | 51 |
| 4 Renewing selector shaft lever oil seal with gearbox removed | 55 |
| 5 Emergency release of selector lever | 57 |
| 6 Removing and installing selector lever handle | 58 |
| 6.1 Moving push-button in the handle to installation position | 60 |



| | | |
|-----------|---|------------|
| 7 | Selector mechanism up to 02.2009 | 62 |
| 7.1 | Overview of selector mechanism up to 02.2009 | 62 |
| 7.2 | Removing and installing selector lever cable up to 02.2009 | 63 |
| 7.3 | Checking selector lever cable | 70 |
| 7.4 | Adjusting selector lever cable | 70 |
| 8 | Checking selector mechanism | 72 |
| 8.1 | Selector lever in "P" position and ignition switched on | 72 |
| 8.2 | Selector lever in "N" position and ignition switched on | 72 |
| 8.3 | Selector lever in position "Tiptronic" | 72 |
| 8.4 | Ignition and light switched on | 72 |
| 8.5 | Selector lever position indicator | 72 |
| 9 | Selector mechanism from 03.2009 onwards | 73 |
| 9.1 | Overview of selector mechanism in vehicles from 03.2009 onwards | 73 |
| 9.2 | Removing and installing selector mechanism, from 03.2009 | 74 |
| 10 | Removing and installing gearbox | 78 |
| 10.1 | Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with 2.0 l petrol engine | 78 |
| 10.2 | Removing gearbox, Golf 2009 ▶ , Golf Plus 2009 ▶ with 2.0 l petrol engine | 87 |
| 10.3 | Removing gearbox, Golf Plus 2005 ▶ with 1.4 l petrol engine | 96 |
| 10.4 | Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ diesel engine | 103 |
| 10.5 | Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with diesel engine, all-wheel drive | 113 |
| 10.6 | Removing gearbox, Golf Plus 2009 ▶ with 2.0 l diesel engine | 122 |
| 10.7 | Removing gearbox, Golf 2009 ▶ 2.0 l diesel engine | 130 |
| 10.8 | Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with 3.6 l - V6 engine (all-wheel drive) | 137 |
| 10.9 | Removing gearbox, Golf 2004 ▶ with 1.9 l and 2.0 l diesel engine | 144 |
| 10.10 | Removing gearbox, Golf 2004 ▶ with 125 kW - 2.0 l diesel engine | 151 |
| 10.11 | Removing gearbox, Eos 2006 ▶ , with 3.2 and 3.6 l - V6 engine | 157 |
| 10.12 | Removing gearbox, Golf 2004 ▶ with 1.4 l petrol engine | 164 |
| 10.13 | Removing gearbox, Golf 2004 ▶ with 2.0 l petrol engine | 171 |
| 10.14 | Removing gearbox, Golf 2004 ▶ , with 3.2 l - V6 engine (R32 all-wheel drive) | 176 |
| 10.15 | Removing gearbox, Golf Plus 2005 ▶ with 1.9 l and 2.0 l diesel engine, with 2.0 l petrol engine | 185 |
| 10.16 | Removing gearbox, Eos 2006 ▶ with 2.0 l petrol engine | 192 |
| 10.17 | Removing gearbox, Eos 2005 ▶ with 2.0 l diesel engine | 199 |
| 10.18 | Removing gearbox, Touran 2003 ▶ | 206 |
| 10.19 | Removing gearbox, Passat 2006 ▶ with 2.0 l diesel engine | 214 |
| 10.20 | Removing gearbox, Passat 2006 ▶ with 2.0 l petrol engine | 222 |
| 10.21 | Removing gearbox, Passat 2006 ▶ with 3.6 l - V6 engine (all-wheel drive) | 227 |
| 10.22 | Removing gearbox, Scirocco 2009 ▶ with 2.0 l diesel engine | 233 |
| 10.23 | Removing gearbox, Scirocco 2009 ▶ with 2.0 l petrol engine | 242 |
| 10.24 | Removing gearbox, Sharan 2011 ▶ with 2.0 l diesel engine | 251 |
| 10.25 | Removing gearbox, Sharan 2011 ▶ with 1.8 l and 2.0 l petrol engine | 259 |
| 10.26 | Removing gearbox, Sharan 2011 ▶ with 1.4 l petrol engine | 268 |
| 10.27 | Install gearbox | 275 |
| 11 | Torque settings »gearbox to engine« | 277 |
| 11.1 | Torque settings (ELSA) | 277 |
| 12 | Transporting gearbox and securing to assembly stand | 285 |
| 13 | Removing and installing bevel box, Golf 2004 ▶ and Passat 2006 ▶ | 286 |
| 14 | Removing and installing bevel box, Passat CC 2009 ▶ , CC 2010 ▶ with diesel engine | 291 |
| 14.1 | Specified torques | 297 |
| 15 | Removing and installing bevel box, Passat CC 2009 ▶ , CC 2010 ▶ with 3.6 l V6 engine | 299 |
| 16 | Oil and oil filter | 303 |
| 16.1 | Oil filter: renewing | 303 |
| 16.2 | Checking oil level and topping up | 304 |



| | | |
|-----------|---|------------|
| 16.3 | Draining and filling oil | 307 |
| 35 | - Gears, shafts | 311 |
| 1 | Currently, no repairs can be made to gears and shafts | 311 |
| 39 | - Final drive - differential | 312 |
| 1 | Overview - seals | 312 |
| 1.1 | Renewing seals for right flange shaft or stub shaft - front-wheel drive | 313 |
| 2 | Renewing oil seal for left flange shaft - front and all-wheel drive | 315 |
| 2.1 | Renewing oil seal for right flange shaft - all-wheel drive | 316 |
| 2.2 | Dismantling and assembling flange shaft | 318 |
| 3 | Renewing oil seal for propshaft drive flange at bevel box | 320 |
| 4 | Assembly overview - Flange shafts and seals on bevel box | 326 |
| 4.1 | Renewing seal on gearbox between bevel box and gearbox | 327 |
| 4.2 | Removing and installing right flange shaft | 328 |
| 4.3 | Renewing seal for right flange shaft on outside of bevel box | 330 |
| 4.4 | Renewing needle bearing (polygon bearing) for right output shaft drive flange | 331 |
| 4.5 | Renewing seal on bevel box between gearbox and bevel box | 333 |
| 5 | Checking and topping up gear oil in bevel box | 335 |
| 5.1 | Checking gear oil in bevel box | 335 |
| 5.2 | Topping up gear oil in bevel box | 336 |