



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>2</b>
<b>1 Removing and installing engine</b>	<b>2</b>
1.1 Removing engine	2
1.2 Installing engine	10
<b>13 - Crankshaft group</b>	<b>14</b>
<b>1 Dismantling and assembling engine</b>	<b>14</b>
1.1 Assembly overview	15
1.2 Removing and installing poly-V-belt	19
<b>2 Sealing flange and flywheel</b>	<b>21</b>
2.1 Assembly overview - sealing flange	21
2.2 Renewing crankshaft oil seal - belt pulley end	22
2.3 Removing and installing sealing flange - pulley end	25
2.4 Removing and installing crankshaft sealing flange - flywheel end	27
2.5 Removing and installing flywheel	28
<b>3 Crankshaft</b>	<b>30</b>
3.1 Assembly overview - crankshaft	31
3.2 Pulling needle bearing out of and driving into crankshaft	32
3.3 Crankshaft dimensions	33
<b>4 Pistons and conrods</b>	<b>35</b>
4.1 Assembly overview - pistons and conrods	35
4.2 Checking pistons, piston rings and cylinder bores	36
4.3 Piston and cylinder dimensions	38
<b>15 - Cylinder head, valve gear</b>	<b>39</b>
<b>1 Cylinder head</b>	<b>39</b>
1.1 Assembly overview - cylinder head	40
1.2 Removing and installing cylinder head cover	41
1.3 Removing and installing cylinder head	43
1.4 Removing and installing toothed belt	48
1.5 Checking compression	57
<b>2 Valve gear</b>	<b>59</b>
2.1 Assembly overview - valve gear	60
2.2 Valve dimensions	61
2.3 Checking valve guides	61
2.4 Renewing valve stem oil seals	62
2.5 Renewing exhaust camshaft oil seal	66
2.6 Removing and installing camshaft adjuster	68
2.7 Removing and installing inlet camshaft control valve 1 N205	72
2.8 Removing and installing camshafts	73
<b>17 - Lubrication</b>	<b>77</b>
<b>1 Parts of lubrication system</b>	<b>77</b>
1.1 Engine oil	77
1.2 Assembly overview - parts of lubrication system	78
1.3 Draining oil filter housing	82
1.4 Removing and installing sump	83



1.5	Removing and installing oil pump with balancer shaft gear assembly	85
1.6	Removing and installing oil filter bracket	89
1.7	Checking oil pressure and oil pressure switch	90
<b>19</b>	<b>- Cooling</b>	<b>92</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>92</b>
1.1	Assembly overview - parts of cooling system, engine side	93
1.2	Assembly overview - coolant circulation pump V50 , engine code BWA	94
1.3	Assembly overview - coolant circulation pump V50 , engine code BPY	95
1.4	Assembly overview - parts of cooling system, body side	96
1.5	Coolant hose schematic diagram, engine code BWA	97
1.6	Coolant hose schematic diagram, engine code BPY	98
1.7	Bypass thermostat	99
1.8	Draining and filling coolant	100
1.9	Removing and installing coolant pump	103
1.10	Removing and installing coolant thermostat housing with thermostat	106
1.11	Removing and installing radiator fan V7 and radiator fan 2 V177	107
1.12	Removing and installing radiator	108
1.13	Checking cooling system for leaks	110
<b>20</b>	<b>- Fuel supply system</b>	<b>112</b>
<b>1</b>	<b>Safety precautions</b>	<b>112</b>
1.1	Safety precautions when working on fuel supply system and ignition system	112
1.2	Reducing pressure in high pressure area	113
<b>2</b>	<b>Fuel tank</b>	<b>115</b>
2.1	Rules for cleanliness	115
2.2	Assembly overview - fuel tank, engine code BPY	116
2.3	Assembly overview - fuel tank, engine code BWA	118
2.4	Emptying fuel tank	119
2.5	Removing and installing fuel tank	122
<b>3</b>	<b>Repairing fuel supply system</b>	<b>125</b>
3.1	Safety precautions when working on fuel supply system	125
3.2	Rules for cleanliness	126
3.3	Removing and installing fuel delivery unit	126
3.4	Removing and installing fuel gauge sender G	128
3.5	Checking fuel pump.	129
3.6	Assembly overview - high-pressure pump	137
3.7	Removing and installing high-pressure pump	138
<b>4</b>	<b>Electronic power control (EPC)</b>	<b>140</b>
4.1	Function of EPC system	140
4.2	Assembly overview - accelerator module	141
4.3	Removing and installing accelerator module	141
<b>5</b>	<b>Activated charcoal filter system, engine code BWA</b>	<b>143</b>
5.1	Function	143
5.2	Assembly overview - activated charcoal filter system	144
5.3	Checking fuel tank breather	144
<b>6</b>	<b>Activated charcoal filter system, engine code BPY</b>	<b>147</b>
6.1	Schematic diagram of activated charcoal filter system	147
6.2	Assembly overview - activated charcoal filter system	149
6.3	Removing and installing activated charcoal filter	149
6.4	Removing and installing fuel system diagnostic pump V144	151
6.5	Checking fuel system for leaks	152
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>155</b>
<b>1</b>	<b>Turbocharger</b>	<b>155</b>



1.1	Rules for cleanliness .....	155
1.2	Assembly overview - turbocharger .....	156
1.3	Removing and installing turbocharger .....	160
1.4	Checking turbocharger vacuum unit .....	167
1.5	Removing and installing turbocharger vacuum unit .....	168
1.6	Adjusting turbocharger vacuum unit .....	169
<b>2</b>	<b>Charge air system .....</b>	<b>172</b>
2.1	Assembly overview - charge air cooling .....	172
2.2	Schematic diagram of turbocharging system .....	173
2.3	Checking charge air system for leaks .....	173
<b>24</b>	<b>Mixture preparation - injection .....</b>	<b>176</b>
<b>1</b>	<b>Injection system .....</b>	<b>176</b>
1.1	General notes on injection .....	176
1.2	Rules for cleanliness .....	177
1.3	Technical data .....	177
1.4	Assembly overview - intake manifold .....	178
1.5	Assembly overview - fuel rail .....	179
1.6	Assembly overview - air filter/engine cover .....	180
1.7	Removing and dismantling air filter/engine cover .....	180
1.8	Removing and installing throttle valve module J338 .....	181
1.9	Removing and installing intake manifold .....	182
1.10	Removing and installing fuel pressure sender G247 .....	185
1.11	Removing and installing injectors .....	187
1.12	Renewing Teflon seal on injector .....	188
<b>2</b>	<b>Checking components .....</b>	<b>191</b>
2.1	Checking double non-return valve .....	191
<b>3</b>	<b>Engine control unit .....</b>	<b>192</b>
3.1	Removing and installing engine control unit .....	192
3.2	Removing and installing anti-theft engine control unit .....	192
<b>26</b>	<b>Exhaust system .....</b>	<b>196</b>
<b>1</b>	<b>Removing and installing parts of exhaust system .....</b>	<b>196</b>
1.1	Assembly overview - exhaust system .....	196
1.2	Separating middle and rear silencers .....	198
1.3	Removing and installing front exhaust pipe with catalytic converter .....	199
1.4	Aligning exhaust system stress free .....	201
<b>28</b>	<b>Ignition system .....</b>	<b>202</b>
<b>1</b>	<b>Repairing ignition system .....</b>	<b>202</b>
1.1	General notes on ignition system .....	202
1.2	Assembly overview - ignition system .....	203
1.3	Removing and installing ignition coils with output stage .....	203
1.4	Spark plug test data .....	204