



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine on engine and gearbox support VAS 6095	10
1.3 Installing engine	11
1.4 Specified torques for assembly mounting	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Assembly overview - parts I and II	15
1.2 Assembly overview - part I: chain drive	17
1.3 Part II: Assembly overview - crankshaft drive	19
1.4 Removing and installing poly-V belt	20
1.5 Removing and installing vibration damper	22
2 Sealing flanges and flywheel	24
2.1 Assembly overview - sealing flange	24
2.2 Removing and installing crankshaft seal on gearbox side	25
2.3 Renewing crankshaft sealing flange, vibration damper side	26
2.4 Removing and installing flywheel	28
2.5 Removing and installing drive plate	29
3 Crankshaft	32
3.1 Assembly overview - crankshaft	32
3.2 Allocation of main bearing shells	33
3.3 Fitting sender wheel to crankshaft	37
3.4 Pulling needle bearing out of and driving into crankshaft	38
4 Pistons and conrods	40
4.1 Assembly overview - pistons and conrods	40
4.2 Checking pistons, piston rings and cylinder bores	42
4.3 Installing piston	43
4.4 Piston and cylinder dimensions	44
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing cylinder head	48
1.3 Assembly overview - cover	56
1.4 Checking valve timing	58
1.5 Removing and installing camshaft adjuster	64
1.6 Removing and installing camshaft timing chain and intermediate shaft drive chain	78
1.7 Removing and installing cylinder head cover	100
1.8 Checking compression	101
2 Valve gear	104
2.1 Assembly overview	104
2.2 Removing and installing camshafts	106
2.3 Removing and installing camshaft control valves	112
2.4 Valve stem seals	116
2.5 Checking valve guides	120
2.6 Reworking valve seats	120



17 - Lubrication	123
1 Parts of lubrication system	123
1.1 Engine oil:	123
1.2 Assembly overview - sump	123
1.3 Removing and installing sump	126
1.4 Assembly overview - oil filter bracket	128
1.5 Removing and installing oil filter bracket	130
1.6 Assembly overview - oil pump	131
1.7 Checking oil pressure and oil pressure switch	133
19 - Cooling	137
1 Removing and installing parts of cooling system	137
1.1 Assembly overview - parts of cooling system, body side	138
1.2 Assembly overview - cooling system, engine side (vehicles with manual gearbox)	140
1.3 Assembly overview - cooling system, engine side (vehicles with DSG®)	141
1.4 Assembly overview - thermostat housing	143
1.5 Coolant hose connection diagram	145
1.6 Draining and adding coolant	146
1.7 Removing and installing fan mounting with fans	149
1.8 Removing and installing radiator	150
1.9 Checking continued coolant circulation pump	152
1.10 Removing and installing coolant pump	153
1.11 Removing and installing thermostat housing	156
1.12 Removing and installing thermostat	159
1.13 Removing and installing coolant pipe	160
1.14 Checking cooling system for leaks	162
20 - Fuel supply system	164
1 Safety measures when working on fuel supply	164
2 Rules for cleanliness	165
3 Fuel	166
3.1 Assembly overview - fuel tank	166
3.2 Assembly overview - fuel tank (vehicles for USA and Canada)	168
3.3 Emptying fuel tank	170
3.4 Removing and installing fuel tank	174
4 Repairing fuel supply	178
4.1 Removing and installing fuel delivery unit	178
4.2 Removing and installing fuel gauge sender G	181
4.3 Assembly overview - fuel filter with attachments	183
4.4 Removing and installing fuel filter	184
4.5 Checking fuel pump	185
4.6 Bleeding fuel system	193
5 Electronic power control (EPC)	196
5.1 Assembly overview - accelerator module	196
5.2 Removing and installing accelerator pedal module	196
6 Activated charcoal filter system	199
6.1 Assembly overview - activated charcoal filter system	199
6.2 Checking fuel tank breather	199
7 Activated charcoal filter system (vehicles for USA and Canada)	202
7.1 Overview of activated charcoal filter system	202
7.2 Assembly overview - activated charcoal filter system	203
7.3 Removing and installing activated charcoal filter	204
7.4 Removing and installing fuel system diagnostic pump V144	206
7.5 Checking fuel system for leaks	206



24 - Mixture preparation - injection	214
1 Repairing injection system	214
1.1 General notes on the injection system	214
1.2 Technical data	214
1.3 Assembly overview - intake manifold	215
1.4 Removing and installing throttle valve module J338	219
1.5 Removing and installing intake manifold	219
1.6 Assembly overview - fuel rail	222
1.7 Assembly overview - air filter	223
1.8 Checking intake air preheating	223
2 Checking components	225
2.1 Checking vacuum unit for intake manifold flaps	225
2.2 Checking injectors for leaks and quantity injected	226
2.3 Checking fuel pressure regulator and holding pressure	231
3 Engine control unit	235
3.1 Removing and installing engine control unit	235
3.2 Removing and installing anti-theft engine control unit	235
26 - Exhaust system	239
1 Exhaust manifold, front exhaust pipe with catalytic converters and Lambda probes	239
1.1 Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters and front silencers	240
1.2 Removing and installing Lambda probe G39 and Lambda probe 2 G108	242
1.3 Removing and installing exhaust manifold	243
1.4 Removing and installing front exhaust pipe with catalytic converters	245
2 Silencer with mountings	248
2.1 Assembly overview - silencers with mountings	248
2.2 Clamps	249
2.3 Separating centre and rear silencers	249
2.4 Aligning exhaust system free of stress	250
3 Secondary air system (engine code BUB)	252
3.1 Function	252
3.2 Assembly overview - secondary air system	252
3.3 Removing and installing secondary air pump motor V101	253
3.4 Checking combination valve for secondary air system	254
3.5 Removing and installing combination valve for secondary air system	254
4 Secondary air system (engine code CBRA)	256
4.1 Function	256
4.2 Assembly overview - secondary air system	256
4.3 Checking secondary air combination valves	258
4.4 Removing and installing left combination valve for secondary air system	259
4.5 Removing and installing right combination valve for secondary air system	259
28 - Ignition system	261
1 Ignition system	261
1.1 General notes on ignition system	261
1.2 Safety precautions	261
1.3 Assembly overview - parts of ignition system	262
1.4 Removing and installing ignition coils with output stage	263
1.5 Test data, spark plugs	265