



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Engine number</b> .....	<b>1</b>
<b>2 Engine data</b> .....	<b>2</b>
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing engine .....	4
1.2 Installing engine .....	11
<b>13 - Crankshaft group</b> .....	<b>16</b>
<b>1 Cylinder block attachments</b> .....	<b>16</b>
1.1 Assembly overview - cylinder block attachments .....	16
1.2 Removing and installing poly-V belt .....	23
<b>2 Sealing flange and flywheel or drive plate</b> .....	<b>24</b>
2.1 Assembly overview - sealing flange .....	24
2.2 Renewing crankshaft oil seal - pulley end .....	25
2.3 Removing and installing sealing flange - pulley end .....	27
2.4 Removing and installing crankshaft sealing flange - flywheel end .....	30
2.5 Removing and installing flywheel .....	34
2.6 Removing and installing drive plate .....	35
<b>3 Crankshaft</b> .....	<b>37</b>
3.1 Assembly overview - crankshaft .....	37
3.2 Removing and installing sender wheel .....	38
3.3 Crankshaft dimensions .....	38
3.4 Identification of crankshaft upper bearing .....	38
<b>4 Pistons and conrods</b> .....	<b>40</b>
4.1 Assembly overview - pistons and conrods .....	40
4.2 Separating new conrod .....	41
4.3 Bearing shells - installation position .....	42
4.4 Checking pistons, piston rings and cylinder bores .....	42
4.5 Piston and cylinder dimensions .....	44
<b>15 - Cylinder head, valve gear</b> .....	<b>45</b>
<b>1 Cylinder head</b> .....	<b>45</b>
1.1 Assembly overview - cylinder head .....	45
1.2 Removing and installing cylinder head cover .....	47
1.3 Removing and installing cylinder head .....	48
1.4 Removing and installing toothed belt, vehicles without split toothed belt guard (Passat) ..	54
1.5 Removing and installing toothed belt, vehicles without split toothed belt guard (Eos) ..	63
1.6 Removing and installing toothed belt, vehicles with split toothed belt guard (Passat) ..	71
1.7 Removing and installing toothed belt, vehicles with split toothed belt guard (Eos) ..	80
1.8 Checking compression .....	89
<b>2 Valve gear</b> .....	<b>92</b>
2.1 Assembly overview - valve gear .....	92
2.2 Valve dimensions .....	94
2.3 Checking valve guides .....	94
2.4 Renewing valve stem seals .....	95
2.5 Renewing exhaust camshaft seal .....	99
2.6 Removing and installing camshaft adjuster .....	102
2.7 Removing and installing inlet camshaft control valve 1 N205 .....	106
2.8 Removing and installing camshafts .....	107



<b>17 - Lubrication</b>	<b>111</b>
<b>1 Parts of lubrication system</b>	<b>111</b>
1.1 Engine oil:	111
1.2 Assembly overview - parts of lubrication system	112
1.3 Drain oiling filter housing	117
1.4 Removing and installing sump, engine codes BLX, BLY, BLR	118
1.5 Removing and installing sump, engine codes BVX, BVY, BVZ	120
1.6 Removing and installing oil pump with balance shaft gear assembly	123
1.7 Removing and installing oil filter bracket	128
1.8 Checking oil pressure and oil pressure switch	129
<b>19 - Cooling</b>	<b>132</b>
<b>1 Parts of cooling system</b>	<b>132</b>
1.1 Assembly overview - parts of cooling system, engine side, (engine codes BLX, BLY, BLR)	132
1.2 Assembly overview - parts of cooling system, engine side, (engine codes BVX, BVY, BVZ)	134
1.3 Assembly overview - parts of cooling system, body side	135
1.4 Coolant hose schematic diagram, (engine codes BLX, BLY, BLR)	136
1.5 Coolant hose schematic diagram, (engine codes BVX, BVY, BVZ)	137
1.6 Draining and adding coolant	138
1.7 Removing and installing coolant pump	142
1.8 Removing and installing coolant pipe	143
1.9 Mapped cooling, (engine codes BLX, BLY, BLR)	144
1.10 Removing and installing coolant distributor housing with thermostat	149
1.11 Removing and installing radiator fan V7 and radiator fan 2 V177	149
1.12 Removing and installing radiator	151
1.13 Checking cooling system for leaks	152
<b>20 - Fuel supply system</b>	<b>155</b>
<b>1 Safety precautions</b>	<b>155</b>
1.1 Safety regulations for working on fuel supply	155
1.2 Releasing pressure in high-pressure area	156
<b>2 Fuel tank, vehicles with four-wheel drive (Passat)</b>	<b>158</b>
2.1 Rules for cleanliness	158
2.2 Assembly overview - fuel tank	158
2.3 Emptying fuel tank	160
2.4 Removing and installing fuel tank (vehicles to 06/2007)	166
2.5 Removing and installing fuel tank (vehicles from 06/2007)	171
2.6 Removing and installing fuel gauge sender 2 G169	176
2.7 Removing and installing suction-jet pump	179
<b>3 Fuel tank, vehicles with front-wheel drive (Passat)</b>	<b>181</b>
3.1 Rules for cleanliness	181
3.2 Assembly overview - fuel tank	181
3.3 Emptying fuel tank	183
3.4 Removing and installing fuel tank	187
<b>4 Fuel tank (Eos)</b>	<b>191</b>
4.1 Rules for cleanliness	191
4.2 Assembly overview - fuel tank	191
4.3 Emptying fuel tank	193
4.4 Removing and installing fuel tank	197
<b>5 Repairing fuel supply system (Passat)</b>	<b>201</b>
5.1 Rules for cleanliness	201
5.2 Removing and installing fuel delivery unit	201
5.3 Removing and installing fuel gauge sender G	206



5.4	Checking fuel pump G6	207
<b>6</b>	<b>Repairing fuel supply system (Eos)</b>	<b>217</b>
6.1	Safety regulations for working on fuel supply	217
6.2	Rules for cleanliness	217
6.3	Removing and installing fuel delivery unit	218
6.4	Removing and installing fuel gauge sender G	221
6.5	Checking fuel pump G6	222
<b>7</b>	<b>Electronic power control (EPC)</b>	<b>235</b>
7.1	Function of EPC system	235
7.2	Assembly overview - accelerator module	235
7.3	Removing and installing accelerator pedal module	236
<b>8</b>	<b>Activated charcoal filter system (Passat)</b>	<b>239</b>
8.1	Function	239
8.2	Assembly overview - activated charcoal filter system	239
8.3	Checking fuel tank breather	240
<b>9</b>	<b>Activated charcoal filter system (Eos)</b>	<b>242</b>
9.1	Function	242
9.2	Assembly overview - activated charcoal filter system	242
9.3	Checking fuel tank breather	243
<b>24 -</b>	<b>Mixture preparation - injection</b>	<b>246</b>
<b>1</b>	<b>Injection system</b>	<b>246</b>
1.1	General notes on injection	246
1.2	Rules for cleanliness	247
1.3	Technical data	247
1.4	Assembly overview - intake manifold	247
1.5	Assembly overview - fuel rail with intake manifold flap motor V157 - (engine codes BLR, BLX, BLY)	251
1.6	Assembly overview - fuel rail with intake manifold flap motor V157 - (engine codes BVX, BVY, BVZ)	252
1.7	Assembly overview - air filter	254
1.8	Removing and installing intake manifold	255
1.9	Removing and installing fuel rail with intake manifold flaps	256
1.10	Assembly overview - high-pressure pump	258
1.11	Removing and installing high-pressure pump	259
1.12	Removing and installing fuel pressure sender G247	261
1.13	Checking fuel pressure sender G247	262
1.14	Removing and installing injectors	266
1.15	Renewing Teflon seal on injector	268
1.16	Cleaning throttle valve module J338	270
<b>2</b>	<b>Checking components</b>	<b>272</b>
<b>3</b>	<b>Engine control unit J623 (Passat)</b>	<b>274</b>
3.1	Removing and installing engine (motor) control unit J623	274
3.2	Removing and installing anti-theft engine control unit J623 (with locking plate)	275
3.3	Removing and installing anti-theft engine control unit J623 (with locking clip)	278
<b>4</b>	<b>Engine control unit J623 (Eos)</b>	<b>281</b>
4.1	Removing and installing engine (motor) control unit J623	281
4.2	Removing and installing anti-theft engine control unit J623	281
<b>26 -</b>	<b>Exhaust system</b>	<b>284</b>
<b>1</b>	<b>Parts of exhaust system</b>	<b>284</b>
1.1	Assembly overview - exhaust manifold with catalytic converter, (engine codes BLR, BLX, BVX)	284
1.2	Assembly overview - exhaust manifold with catalytic converter, (engine code BVY)	286
1.3	Assembly overview - exhaust manifold, (engine codes BLY, BVZ)	287



1.4	Removing and installing exhaust manifold .....	288
1.5	Assembly overview - exhaust system, engine codes BLR, BVY (Passat) .....	292
1.6	Assembly overview - exhaust system, engine codes BLX, BVX (Passat) .....	294
1.7	Assembly overview - exhaust system, engine codes BLY, BVZ (Passat) .....	296
1.8	Assembly overview - exhaust system, engine code BVY (Eos) .....	298
1.9	Assembly overview - exhaust system, engine code BVZ (Eos) .....	300
1.10	Removing and installing front exhaust pipe with catalytic converter .....	301
1.11	Separating centre and rear silencers .....	304
1.12	Aligning exhaust system free of stress .....	308
1.13	Installation position and specified torque of clamp .....	309
<b>2</b>	<b>Exhaust gas recirculation system, (engine codes BLR, BLX, BVX and BVY)</b> .....	<b>311</b>
2.1	Assembly overview - exhaust gas recirculation system .....	311
<b>28</b>	<b>Ignition system</b> .....	<b>313</b>
<b>1</b>	<b>Repairing ignition system</b> .....	<b>313</b>
1.1	General notes on ignition system .....	313
1.2	Safety precautions .....	313
1.3	Assembly overview - ignition system .....	313
1.4	Removing and installing ignition coils with output stage .....	314
1.5	Test data, spark plugs .....	315