



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Engine number</b> .....	<b>1</b>
<b>2 Engine data</b> .....	<b>2</b>
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing engine .....	4
1.2 Securing engine on engine and gearbox support VAS 6095 .....	11
1.3 Installing engine .....	12
1.4 Specified torques for assembly mounting .....	14
<b>13 - Crankshaft group</b> .....	<b>16</b>
<b>1 Dismantling and assembling engine (engine code CDVA, BLV, BWS up to 01.2011)</b> .....	<b>16</b>
1.1 Part I .....	18
1.2 Part II .....	21
1.3 Removing and installing vibration damper (engine codes BWS, CDVA) .....	22
1.4 Removing and installing vibration damper (engine code BLV) .....	23
1.5 Removing and installing bracket for ancillaries .....	25
1.6 Assembly overview - poly V-belt drive .....	25
1.7 Removing and installing poly-V belt .....	27
1.8 Removing and installing tensioner for poly V-belt .....	28
<b>2 Dismantling and assembling engine (engine code CNNA, BWS from 01.2011)</b> .....	<b>30</b>
2.1 Part I .....	31
2.2 Part II .....	33
2.3 Removing and installing vibration damper .....	35
2.4 Removing and installing bracket for ancillaries .....	35
2.5 Assembly overview - poly V-belt drive .....	36
2.6 Removing and installing poly-V belt .....	37
2.7 Removing and installing tensioner for poly V-belt .....	38
<b>3 Sealing flange and flywheel or drive plate</b> .....	<b>40</b>
3.1 Assembly overview - sealing flanges and flywheel .....	40
3.2 Assembly overview - sealing flanges and drive plate .....	42
3.3 Assembly overview - timing chain covers .....	43
3.4 Removing and installing crankshaft seal on gearbox side .....	43
3.5 Removing and installing sealing flange on gearbox side .....	45
3.6 Removing and installing flywheel .....	48
3.7 Removing and installing drive plate .....	49
3.8 Renewing crankshaft sealing flange -vibration damper end- (engine code BLV) .....	50
3.9 Renewing crankshaft sealing flange -vibration damper end- (engine code BWS, CDVA, CNNA) .....	52
<b>4 Assembly overview - crankshaft</b> .....	<b>55</b>
4.1 Fitting sender wheel to crankshaft .....	56
4.2 Pulling needle bearing out of and driving into crankshaft .....	57
4.3 Allocation of main bearing shells .....	59
<b>5 Pistons and conrods</b> .....	<b>64</b>
5.1 Assembly overview - pistons and conrods .....	64
5.2 Checking pistons, piston rings and cylinder bores .....	65
5.3 Piston and cylinder dimensions .....	69
<b>15 - Cylinder head, valve gear</b> .....	<b>70</b>
<b>1 Cylinder head</b> .....	<b>70</b>
1.1 Assembly overview - cylinder head .....	70



1.2	Removing and installing cylinder head	73
1.3	Checking valve timing	81
1.4	Removing and installing camshaft adjuster	86
1.5	Removing and installing chain drive for oil pump	98
1.6	Removing and installing camshaft drive timing chain	109
1.7	Removing and installing chain drive sprocket for high-pressure pump	112
1.8	Removing and installing cylinder head cover	113
1.9	Assembly overview - mechanical vacuum pump	116
1.10	Removing and installing mechanical vacuum pump	117
1.11	Installing cover oil seals	119
1.12	Checking compression	120
<b>2</b>	<b>Valve gear</b>	<b>123</b>
2.1	Assembly overview - valve gear	123
2.2	Camshafts, checking axial clearance	125
2.3	Assembly overview - valve timing housing (engine codes CDVA, BLV, BWS up to 01.2011)	126
2.4	Assembly overview - valve timing housing (engine codes CNNA, BWS from 01.2011)	127
2.5	Removing and installing camshaft control valves	128
2.6	Removing and installing camshafts	132
2.7	Camshaft identification	139
2.8	Renewing valve stem seals	139
2.9	Valve dimensions	142
2.10	Checking valve guides	142
2.11	Reworking valve seats	143
<b>17</b>	<b>Lubrication</b>	<b>145</b>
<b>1</b>	<b>Parts of lubrication system</b>	<b>145</b>
1.1	Engine oil:	145
1.2	Assembly overview - oil sump, oil pump and oil filter bracket (engine code CDVA, BLV, BWS up to 01.2011)	146
1.3	Assembly overview - oil sump, oil pump and oil filter bracket (engine code CNNA, BWS from 01.2011)	148
1.4	Removing and installing oil spray jet	149
1.5	Removing and installing sump	150
1.6	Removing and installing oil pump	152
1.7	Assembly overview - oil filter housing (engine codes CDVA, BWS up to 01.2011)	161
1.8	Assembly overview - oil filter housing (engine codes CNNA, BWS from 01.2011)	163
1.9	Assembly overview - oil filter housing (engine code BLV)	164
1.10	Checking oil pressure and oil pressure switch (engine code CDVA, BLV, BWS up to 01.2011)	166
1.11	Checking oil pressure and oil pressure switch (engine code CNNA, BWS from 01.2011)	168
<b>19</b>	<b>Cooling</b>	<b>172</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>172</b>
1.1	Assembly overview - parts of cooling system, body side	173
1.2	Assembly overview - cooling system, engine side	174
1.3	Coolant hose connection diagram	176
1.4	Draining and adding coolant	177
1.5	Removing and installing fan mounting with fans	180
1.6	Removing and installing radiator	182
1.7	Removing and installing coolant pump	184
1.8	Removing and installing thermostat	187
1.9	Checking cooling system for leaks	189
<b>20</b>	<b>Fuel supply system</b>	<b>191</b>
<b>1</b>	<b>Safety precautions and rules for cleanliness</b>	<b>191</b>



1.1	Safety measures when working on fuel supply	191
1.2	Releasing pressure in high-pressure area	192
1.3	Rules for cleanliness	193
<b>2</b>	<b>Fuel tank (Passat CC with front-wheel drive)</b>	<b>194</b>
2.1	Assembly overview - fuel tank	194
2.2	Emptying fuel tank	196
2.3	Removing and installing fuel tank	200
2.4	Removing and installing fuel gauge sender G	203
<b>3</b>	<b>Fuel tank (Passat CC with four-wheel drive)</b>	<b>205</b>
3.1	Assembly overview - fuel tank (engine code BWS)	205
3.2	Assembly overview - fuel tank (engine code BLV, CNNA)	208
3.3	Emptying fuel tank	209
3.4	Removing and installing fuel tank	215
3.5	Removing and installing fuel gauge sender 2 G169	220
3.6	Removing and installing suction-jet pump	223
<b>4</b>	<b>Repairing fuel supply (Passat CC)</b>	<b>225</b>
4.1	Removing and installing fuel delivery unit	225
4.2	Removing and installing fuel gauge sender G	230
4.3	Checking fuel pump	231
<b>5</b>	<b>Activated charcoal filter system (Passat CC with engine code BLV, CNNA)</b>	<b>242</b>
5.1	Function	242
5.2	Assembly overview - activated charcoal filter system	242
5.3	Checking fuel system for leaks	243
<b>6</b>	<b>Activated charcoal filter system (Passat CC with engine code BWS)</b>	<b>251</b>
6.1	Function	251
6.2	Assembly overview - activated charcoal filter system	251
6.3	Checking fuel tank breather	252
<b>7</b>	<b>Fuel tank (Eos)</b>	<b>254</b>
7.1	Assembly overview - fuel tank	254
7.2	Emptying fuel tank	256
7.3	Removing and installing fuel tank	260
<b>8</b>	<b>Repairing fuel supply (Eos)</b>	<b>264</b>
8.1	Removing and installing fuel delivery unit	264
8.2	Removing and installing fuel gauge sender G	267
8.3	Checking fuel pump G6	268
<b>9</b>	<b>Activated charcoal filter system (Eos)</b>	<b>280</b>
9.1	Assembly overview - activated charcoal filter system	280
9.2	Checking fuel tank breather	280
<b>10</b>	<b>Electronic power control (EPC)</b>	<b>283</b>
10.1	Assembly overview - accelerator module	283
10.2	Removing and installing accelerator pedal module	283
<b>24</b>	<b>Mixture preparation - injection</b>	<b>286</b>
<b>1</b>	<b>Injection system</b>	<b>286</b>
1.1	General notes on the injection system	287
1.2	Rules for cleanliness	287
1.3	Technical data	287
1.4	Assembly overview - intake manifold	288
1.5	Assembly overview - fuel rail with high-pressure pump and injectors	289
1.6	Assembly overview - air filter	292
1.7	Checking intake air preheating	293
1.8	Removing and installing intake manifold upper part	293
1.9	Removing and installing lower part of intake manifold with fuel rail	296
1.10	Removing and installing high-pressure pump	300



1.11	Checking fuel pressure sender G247	303
1.12	Removing and installing injectors	306
1.13	Renewing seals on injectors	310
<b>2</b>	<b>Engine control unit J623 (Passat)</b>	<b>314</b>
2.1	Removing and installing engine (motor) control unit J623	314
2.2	Removing and installing anti-theft engine control unit J623	315
<b>3</b>	<b>Engine control unit J623 (Eos)</b>	<b>318</b>
3.1	Removing and installing engine control unit	318
3.2	Removing and installing anti-theft engine control unit	319
<b>26</b>	<b>- Exhaust system</b>	<b>323</b>
<b>1</b>	<b>Exhaust manifold, front exhaust pipes, catalytic converters and Lambda probes (engine codes BWS, CDVA)</b>	<b>323</b>
1.1	Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters and front silencers	325
1.2	Removing and installing exhaust manifold	326
1.3	Removing and installing Lambda probe G39 and Lambda probe 2 G108	327
1.4	Removing and installing front exhaust pipes with catalytic converters and front silencers	329
<b>2</b>	<b>Exhaust manifolds, front exhaust pipes, catalytic converters and Lambda probes (engine code CNNA, BLV)</b>	<b>332</b>
2.1	Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters and front silencers	334
2.2	Removing and installing exhaust manifold	335
2.3	Removing and installing Lambda probe G39 and Lambda probe 2 G108	336
2.4	Removing and installing front exhaust pipes with catalytic converters and front silencers (vehicles with four-wheel drive)	338
2.5	Removing and installing front exhaust pipes with catalytic converters and front silencers (vehicles with front-wheel drive)	340
<b>3</b>	<b>Silencers with mountings (vehicles with four-wheel drive)</b>	<b>343</b>
3.1	Assembly overview - silencers with mountings	343
<b>4</b>	<b>Silencers with mountings (Passat CC with front-wheel drive)</b>	<b>347</b>
4.1	Assembly overview - silencers with mountings	347
<b>5</b>	<b>Silencer with mountings (Eos)</b>	<b>350</b>
5.1	Assembly overview - silencers with mountings	350
5.2	Clamps	351
5.3	Separating centre and rear silencers	351
5.4	Aligning exhaust system free of stress	352
<b>28</b>	<b>- Ignition system</b>	<b>354</b>
<b>1</b>	<b>Ignition system</b>	<b>354</b>
1.1	General notes on ignition system	354
1.2	Assembly overview - ignition system	354
1.3	Test data, spark plugs	356
1.4	Removing and installing ignition coils with output stage	356