



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	2
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Assembly mountings	11
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Assembly overview - toothed belt drive	12
1.2 Assembly overview - poly V-belt drive	14
1.3 Removing and installing poly V-belt	14
1.4 Assembly overview - crankcase	16
2 Removing and installing sealing flange and flywheel	19
2.1 Assembly overview - sealing flange and flywheel	19
2.2 Renewing crankshaft oil seal - pulley end	20
2.3 Removing and installing sealing flange - pulley end	22
2.4 Renewing crankshaft sealing flange - flywheel end	24
3 Crankshaft	33
3.1 Assembly overview - crankshaft	33
3.2 Crankshaft dimensions	34
3.3 Pulling needle bearing out of and driving into crankshaft	34
4 Pistons and conrods	36
4.1 Assembly overview - pistons and conrods	36
4.2 Separating new conrods	37
4.3 Checking piston projection at TDC	38
4.4 Piston and cylinder dimensions	39
4.5 Piston rings, cylinder bore and piston installation position	39
15 - Cylinder head, valve gear	42
1 Cylinder head	42
1.1 Assembly overview - cylinder head	42
1.2 Removing and installing cylinder head cover	45
1.3 Removing, installing and tensioning toothed belt	46
1.4 Removing and installing cylinder head	53
1.5 Checking compression	57
2 Repairing valve gear	59
2.1 Assembly overview - valve gear	59
2.2 Checking valve guides	61
2.3 Renewing valve stem seals	62
2.4 Removing and installing camshaft	64
2.5 Removing and installing camshaft oil seal	68
17 - Lubrication	71
1 Engine oil	71
1.1 Oil capacities	71
1.2 Engine oil specifications	71



1.3	Checking engine oil level	71
2	Parts of lubrication system	72
2.1	Assembly overview - oil pump, sump	72
2.2	Removing and installing oil sump	73
3	Oil filter bracket, oil pressure and oil cooler	76
3.1	Assembly overview - oil filter bracket and oil cooler	76
3.2	Checking oil pressure and oil pressure switch	77
19	Cooling	79
1	Parts of cooling system	79
1.1	Parts of cooling system, body side	79
1.2	Parts of cooling system - engine side	81
1.3	Coolant hose schematic diagram	83
1.4	Draining and filling coolant	84
1.5	Removing and installing fan mounting with fans	88
1.6	Removing and installing radiator	89
1.7	Removing and installing coolant pump	91
1.8	Removing and installing thermostat	92
1.9	Checking cooling system for leaks	94
1.10	Checking oil cooler for leaks	96
20	Fuel supply system	99
1	Safety precautions when working on fuel supply system	99
2	Rules for cleanliness	100
3	Fuel tank	101
3.1	Assembly overview - fuel tank	101
3.2	Emptying fuel tank	103
3.3	Removing and installing fuel tank	105
3.4	Removing and installing fuel delivery unit	107
3.5	Removing and installing fuel gauge sender G	109
3.6	Checking fuel pump	109
4	Repairing fuel supply system	112
4.1	Assembly overview - fuel filter	112
4.2	Removing and installing fuel cooler	113
4.3	Checking tandem pump	114
4.4	Removing and installing tandem pump	118
4.5	Assembly overview - accelerator mechanism	121
21	Turbocharging/supercharging	123
1	Charge air system with turbocharger	123
1.1	Safety precautions	123
1.2	Rules for cleanliness	123
1.3	Assembly of hose connections	124
1.4	Assembly overview - turbocharger	125
1.5	Removing and installing turbocharger	127
1.6	Assembly overview - charge air cooling	128
1.7	Checking charge air system for leaks	129
23	Mixture preparation - injection	132
1	Repairing diesel direct injection system	132
1.1	Safety precautions	132
1.2	Rules for cleanliness	133
1.3	Assembly overview - unit injector	133
1.4	Removing and installing O-rings for unit injector	134
1.5	Removing and installing unit injector	135



1.6	Assembly overview - intake manifold with intake manifold flap	138
1.7	Assembly overview - air filter	140
2	Engine control unit	141
2.1	Reading and erasing engine control unit fault memory	141
2.2	Adapting functions and components	142
2.3	Removing and installing anti-theft engine control unit	143
2.4	Removing and installing engine control unit	146
26	Exhaust system	147
1	Parts of the exhaust system	147
1.1	Assembly overview - front exhaust pipe with particulate filter	147
1.2	Assembly overview - silencers with mountings	149
1.3	Aligning exhaust system free of stress	150
2	Exhaust gas recirculation system	151
2.1	Assembly overview - exhaust gas recirculation	151
2.2	Assembly overview - exhaust gas recirculation cooler	152
2.3	Vacuum hose schematic diagram	153
28	Glow plug system	154
1	Checking glow plug system	154
1.1	Characteristics of ceramic glow plugs	154
1.2	Removing, installing and checking ceramic glow pin plugs	154