



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine data</b>	<b>1</b>
<b>2 Safety precautions</b>	<b>2</b>
2.1 Safety precautions when working on fuel supply system	2
2.2 Safety precautions for when using test and measuring equipment during a road test	3
<b>3 General repair notes</b>	<b>4</b>
3.1 Rules for cleanliness	4
<b>20 - Fuel supply system</b>	<b>5</b>
<b>1 Fuel tank</b>	<b>5</b>
1.1 Assembly overview - fuel tank	5
1.2 Removing and installing fuel tank	6
1.3 Emptying fuel tank	9
<b>2 Fuel delivery unit, fuel gauge sender</b>	<b>16</b>
2.1 Assembly overview - fuel delivery unit and fuel gauge sender	16
2.2 Removing and installing fuel delivery unit, fuel gauge sender	18
2.3 Removing and installing fuel gauge sender	21
<b>3 Detaching plug-in connectors</b>	<b>23</b>
<b>4 Fuel filter</b>	<b>27</b>
4.1 Assembly overview - fuel filter	27
4.2 Removing and installing fuel filter	27
<b>5 Activated charcoal filter system</b>	<b>29</b>
5.1 Assembly overview - activated charcoal filter system	29
5.2 Checking fuel tank breather	29
<b>6 Accelerator mechanism</b>	<b>32</b>
6.1 Assembly overview - accelerator module	32
6.2 Removing and installing accelerator module	32
<b>7 Fuel pump</b>	<b>34</b>
7.1 Checking fuel pump	34