



## Contents

<b>00 - Technical data</b>	<b>1</b>
1     Identification	1
1.1 Engine number, engine data	1
2     Safety instructions	2
2.1 Safety precautions when working on fuel supply system	2
2.2 Safety precautions during road tests in which testing and measuring equipment is used	3
2.3 Safety precautions when working on vehicles with a start/stop system	4
3     General notes	5
3.1 Cleanliness specifications for working on the auxiliary heater and fuel system	5
<b>20 - Fuel supply system</b>	<b>6</b>
1     Procedure when filling with incorrect fuel	6
1.1 Step 1 (Engine was started with incorrect fuel)	6
1.2 Step 2 (Engine was not started with incorrect fuel)	7
1.3 Step 3 (There are metal particles in fuel delivery unit and fuel tank)	8
1.4 Step 4 (There are no metal particles in fuel delivery unit and fuel tank)	9
1.5 Step 5 (There are metal particles in high-pressure pump)	9
1.6 Step 6 (There are no metal particles in high-pressure pump)	10
2     Fuel tank	11
2.1 Assembly overview - fuel tank	11
2.2 Removing and installing fuel tank	13
2.3 Emptying fuel tank	16
3     Fuel delivery unit, fuel gauge sender	22
3.1 Removing and installing fuel delivery unit, fuel gauge sender	22
3.2 Removing and installing fuel gauge sender	24
4     Detaching push-on connectors	26
5     Fuel filter	30
5.1 Assembly overview - fuel filter	30
5.2 Removing and installing fuel filter	31
6     Accelerator mechanism	35
6.1 Assembly overview - accelerator module	35
6.2 Removing and installing accelerator module	35
7     Fuel pump	39
7.1 Checking fuel pump	39
7.2 Removing and installing fuel pump	49