

| | |
|---|-------|
| 001 - Basic equipment | 1-23 |
| 1. Basic equipment | 1 |
| 2. Left headlight, onboard supply control unit | 2 |
| 3. Right headlight, onboard supply control unit | 3 |
| 4. Switches and instruments illumination regulator, headlight range control regulator, left and right fog light bulb | 4 |
| 5. Light switch, fog light switch, rear fog light switch | 5 |
| 6. Left and right tail light, rear left fog light, rear turn signal, brake light, rear left and right side marker bulb | 6 |
| 7. Right reversing light, high level brake light bulb, number plate light | 7 |
| 8. Steering column electronics control unit, wiper switch, washer pump switch, intermittent wiper regulator | 8 |
| 9. Cruise control system switch, multifunction display call-up button, cruise control system (CCS) button, steering angle sender, steering column electronics control unit | 9 |
| 10. Ignition/starter switch, turn signal switch, headlight dipper/flasher hand operated switch, coil connector, horn plate, turn signal relay, ignition key removal lock | 10 |
| 11. Bonnet contact switch, rain and light detector sensor, windscreen wiper motor, washer jet heater element, double washer pump relay 2 | 11 |
| 12. Washer pump, treble tone horn, bass tone horn, front left and right footwell illumination bulb, double washer pump relay 1 | 12 |
| 13. Tank filler flap locking motor, luggage compartment light, glove compartment light, dual tone horn relay, convenience system central control unit | 13 |
| 14. Heated rear window, interior light, ambient lighting, heated rear window relay | 14 |
| 15. Driver vanity mirror contact switch, illuminated vanity mirror, cigarette lighter, 12 V socket, hazard warning light switch | 15 |
| 16. Air conditioning system control unit, fresh air blower switch, fresh air blower, fresh air blower series resistor with overheating fuse | 16 |
| 17. Dash panel insert, handbrake warning switch, brake fluid level warning contact, immobilizer reader coil, warning lamps | 17 |
| 18. Ambient temperature sensor, coolant shortage indicator sender, washer fluid level warning lamp, brake pad wear sender, warning lamps | 18 |
| 19. Oil pressure switch, dash panel insert, warning lamps | 19 |
| 20. Dash panel insert, data bus diagnostic interface, warning lamps | 20 |
| 21. Data bus diagnostic interface, self-diagnosis connection | 21 |
| 22. Driver and front passenger side exterior mirror turn signal bulb, driver and front passenger door control unit | 22 |
| 23. Brake light switch, reversing light switch | 23 |
| 002 - Convenience system | 24-37 |
| 1. Convenience system | 24 |
| 2. Driver door control unit, window regulator switch in driver door | 25 |
| 3. Driver door control unit, central switch for window regulators in driver door, interior locking button, central locking deadlock function warning lamp, interior locking warning lamp | 26 |
| 4. Driver door control unit, mirror adjustment switch, exterior mirror heater button, fold-in mirror switch, rear lid remote release button, fuel tank flap release button | 27 |
| 5. Driver door control unit, electric exterior mirror on driver side with mirror adjustment fold-in mirrors, entrance light, turn signal light, automatically dimming and heated, | 28 |
| 6. Driver- and front passenger door control unit, driver side central locking lock unit, driver door contact switch, central locking deadlock function warning lamp on front passenger side | 29 |
| 7. Front passenger door control unit, window regulator switch in front passenger door, front passenger side central locking lock unit, front passenger door contact switch | 30 |
| 8. Front passenger door control unit, electric exterior mirror on front passenger side with mirror adjustment fold-in mirrors, entrance light, turn signal light, automatically dimming and heated, | 31 |
| 9. Interior monitoring deactivation switch, deactivation button for vehicle inclination sender, convenience system central control unit, fuse | 32 |
| 10. Rear lid lock unit, luggage compartment light switch, rear lid handle release button, tank filler flap locking motor | 33 |
| 11. Interior monitor send and receive module 1 and 2, vehicle inclination sender, alarm horn | 34 |
| 12. Convertible roof actuation control unit, fuses, rear left and right door control unit, data bus diagnosis interface | 35 |
| 13. Sliding sunroof adjustment control unit, convertible roof actuation and sunroof button, convertible roof actuation control unit | 36 |
| 14. Bonnet contact switch, automatic anti-dazzle interior mirror | 37 |
| 003 - Fuse concept | 38-51 |
| 1. Fuse concept | 38 |
| 2. Battery, fuses SA5, SA6 | 39 |
| 3. Fuses SC1. SC2. terminal 15 voltage supply relay 2 | 40 |

| | |
|---|-------|
| 4. Fuses SC3, SC4 | 41 |
| 5. Fuses SC5, SC6 | 42 |
| 6. Fuses SC7, SC8, SC10, SC11, SC12 | 43 |
| 7. Fuses SC13, SC14, SC15, SC16, SC17 | 44 |
| 8. Fuses SC18, SC19, SC20, SC21, SC22, SC23 | 45 |
| 9. Fuses SC24, SC25, SC26 | 46 |
| 10. Fuses SC27, SC28, SC29, SC30, SC31, SC32 | 47 |
| 11. Fuses SC33, SC34, SC35 | 48 |
| 12. Fuses SC36, SC37, SC38 | 49 |
| 13. Fuses SC40, SC41, SC42 | 50 |
| 14. Fuses SC43, SC44, SC45, SC46, SC47, SC49 | 51 |
| 004 - Climatic | 52-56 |
| 1. Climatic | 52 |
| 2. Air conditioning system control unit, air conditioning system switch, air conditioning system compressor regulating valve, centre vent temperature sender, fuses | 53 |
| 3. Air conditioning system control unit, high pressure sender, air recirculation flap control motor, footwell vent temperature sender, evaporator out-flow temperature sender | 54 |
| 4. Air conditioning system control unit, temperature flap control motor, temperature flap control motor potentiometer, fresh air blower | 55 |
| 5. Air conditioning system control unit, fresh air blower, fresh air blower series resistor with overheating fuse, fresh air blower switch, data bus diagnostic interface | 56 |
| 005 - Climatronic | 57-63 |
| 1. Climatronic | 57 |
| 2. Climatronic control unit, high pressure sender, fuses | 58 |
| 3. Climatronic control unit, sunlight penetration photosensor, left and right vent temperature sender, evaporator out-flow temperature sender | 59 |
| 4. Left temperature flap control motor, potentiometer for air recirculation flap control motor, temperature sensor, left and right footwell vent temperature sender | 60 |
| 5. Defroster flap control motor, right temperature flap control motor, defroster flap control motor potentiometer, potentiometer for right temperature flap control motor | 61 |
| 6. Climatronic control unit, air flow flap control motor potentiometer, central flap control motor potentiometer, central flap control motor, air flow flap control motor | 62 |
| 7. Climatronic control unit, fresh air blower control unit, compressor regulating valve, air conditioning system compressor regulating valve, fresh air blower | 63 |
| 006 - Position of fuses, (SA, SB), electronics box low | 64-73 |
| 1. Position of fuses, (SA, SB), electronics box low | 64 |
| 2. Battery, fuses SA1, SA2, SA3, SA5 | 65 |
| 3. Fuses SA6, SA7 | 66 |
| 4. Fuses SB1, SB2, SB3, SB4, SB6 and SB7 | 67 |
| 5. Fuses SB8, SB9 and SB10 | 68 |
| 6. Fuses SB11, SB12, SB13 and SB14 | 69 |
| 7. Fuses SB15, SB16, SB17, SB18 and SB19 | 70 |
| 8. Fuses SB20, SB21, SB22, SB23 and SB24 | 71 |
| 9. Fuses SB25, SB26, SB27, SB28 and SB29 | 72 |
| 10. Fuses SB30 | 73 |
| 007 - Position of fuses, (SA, SB), electronics box high | 74-84 |
| 1. Position of fuses, (SA, SB), electronics box high | 74 |
| 2. Battery, fuses SA1, SA2, and SA3 | 75 |
| 3. Fuses SA6, SA7, SB1, SB2, SB3 and SB4 | 76 |
| 4. Fuses SB5, SB6, SB7, SB8, SB9, SB10 and SB11 | 77 |
| 5. Fuses SB12 and SB15, terminal 30 voltage supply relay, coolant pump relay | 78 |
| 6. Fuses SB16, SB17, SB18 and SB19 | 79 |
| 7. Fuses SB20, SB23, SB24 and SB25, terminal 30 voltage supply relay | 80 |
| 8. Fuses SB28, SB30 and SB31 | 81 |
| 9. Fuses SB38, SB39, SB40 and SB42 | 82 |
| 10. Fuses SB47, SB48 and SB49, terminal 15 voltage supply relay 2 | 83 |
| 11. Fuses SB52 and SB53 | 84 |
| 008 - Auxiliary air heater (PTC) | 85-86 |
| 1. Auxiliary air heater (PTC) | 85 |
| 2. Auxiliary air heater control unit, auxiliary air heater element | 86 |
| 009 - Gas discharge headlights (Bi-Xenon) | 87-93 |
| 1. Gas discharge headlights (Bi-Xenon) | 87 |
| 2. Front left headlight, power output module for left headlight, left gas discharge light, left cornering light bulb, front left turn signal bulb | 88 |
| 3. Right headlight, power output module for right headlight, right gas discharge light, right cornering light bulb, front right turn signal bulb | 89 |

| | |
|---|---------|
| 4. Right headlight, power output module for right headlight, cornering light and headlight range control unit, front left vehicle level sender | 90 |
| 5. Cornering light and headlight range control unit, rear left vehicle level sender, data bus diagnostic interface, self-diagnosis connection | 91 |
| 6. Turn signal switch, headlight dipper/flasher switch, front left and right side marker bulb | 92 |
| 7. Light switch, fog light switch, rear fog light switch | 93 |
| 010 - CAN and Lin-bus network | 94-101 |
| 1. CAN and Lin-bus network | 94 |
| 2. Fuse, data bus diagnostic interface, self-diagnosis connection | 95 |
| 3. Data bus diagnostic interface, self-diagnosis connection, onboard supply control unit, cornering light and headlight range control unit, control unit in dash panel insert | 96 |
| 4. ABS control unit, airbag, auxiliary heater, mobile telephone operating electronics, power steering, Control unit with display for radio and navigation system, radio, digital satellite radio tuner | 97 |
| 5. Magnetic field sender for compass, convertible roof actuation control unit, trailer detector control unit, control unit with display for TV, radio navigation, steering column electronics control unit, selector lever sensors control unit | 98 |
| 6. Auxiliary air heater control unit, convenience system central control unit, interior monitor send and receive module 1, vehicle inclination sender, alarm horn | 99 |
| 7. Climatronic control unit, air conditioning system control unit, driver door control unit, front passenger door control unit, parking aid control unit | 100 |
| 8. Rain and light detector sensor, wiper motor control unit, rear left and right door control unit | 101 |
| 011 - Garage door opener | 102-103 |
| 1. Garage door opener | 102 |
| 2. Garage door operating unit, garage door opener button, garage door opener warning lamp | 103 |
| 012 - 2.0 l/110 kW Motronic, engine code BVY | 104-122 |
| 1. 2.0 l/110 kW Motronic, engine code BVY | 104 |
| 2. Battery, alternator, starter, fuses | 105 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 106 |
| 4. Fuel pump control unit, fuel gauge sender, fuel pump | 107 |
| 5. Terminal 30 voltage supply relay | 108 |
| 6. Engine control unit | 109 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 110 |
| 8. Engine control unit, throttle valve module, fuel pressure sender for low pressure, coolant temperature sender | 111 |
| 9. Engine control unit, engine speed sender, knock sensors, fuel pressure sender | 112 |
| 10. Engine control unit, Hall sender, intake air temperature sender, intake manifold pressure sender, intake manifold flap potentiometer, intake manifold flap motor, exhaust gas recirculation valve | 113 |
| 11. Engine control unit, injectors | 114 |
| 12. Activated charcoal filter system solenoid valve, inlet camshaft control valve, fuel pressure regulating valve, intake manifold flap valve, map-controlled engine cooling system thermostat | 115 |
| 13. Engine control unit, lambda probe, accelerator position sender | 116 |
| 14. Engine control unit, lambda probe 1 after catalytic converter, radiator outlet coolant temperature sender, intake air temperature sender 2 | 117 |
| 15. Engine control unit, lambda probe 2 after catalytic converter, lambda probe 3 upstream of catalytic converter | 118 |
| 16. Engine control unit, brake light switch | 119 |
| 17. Engine control unit, clutch position sender | 120 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electric power control fault lamp, multifunction display | 121 |
| 19. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge sender, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, buzzer and gong | 122 |
| 013 - 2.0 l - Motronic/147 kW, engine codes BPY, BWA | 123-141 |
| 1. 2.0 l - Motronic/147 kW, engine codes BPY, BWA | 123 |
| 2. Battery, alternator, starter, fuses | 124 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 125 |
| 4. Engine component current supply relay | 126 |
| 5. Fuel pump control unit, coolant pump relay, coolant circulation pump, fuel gauge sender, fuel pump | 127 |
| 6. Terminal 30 voltage supply relay | 128 |
| 7. Engine control unit | 129 |
| 8. Engine control unit, ignition coils with output stage, spark plugs | 130 |
| 9. Engine control unit, throttle valve module, intake manifold flap motor, intake manifold flap potentiometer, fuel pressure sender for low-pressure | 131 |
| 10. Engine control unit. knock sensors. engine speed sender. coolant temperature sender | 132 |

| | |
|--|---------|
| 11. Engine control unit, fuel pressure sender, Hall sender, intake air temperature sender | 133 |
| 12. Engine control unit, injectors, inlet camshaft control valve | 134 |
| 13. Engine control unit, turbocharger air recirculation valve, activated charcoal filter system solenoid valve, turbocharger air recirculation valve, fuel pressure regulating valve, charge air pressure sender | 135 |
| 14. Engine control unit, radiator outlet coolant temperature sender, Lambda probe after catalytic converter, air mass meter | 136 |
| 15. Engine control unit, Lambda probe, accelerator position sender | 137 |
| 16. Engine control unit, brake light switch | 138 |
| 17. Engine control unit, clutch position sender | 139 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 140 |
| 19. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 141 |
| 014 - Convertible top control, electrohydraulic | 142-149 |
| 1. Convertible top control, electrohydraulic | 142 |
| 2. Convertible roof actuation control unit, fuses, rear left and right door control unit | 143 |
| 3. Convertible roof actuation switch and sunroof, convertible roof actuation switch, power latching control unit, power latching motor | 144 |
| 4. Luggage cover contact switch, front sender for position of left and right roof member, convertible roof actuation control unit | 145 |
| 5. Central switch for window regulators in driver door, left sender for rear window frame locked, sender for rear window frame open, convertible roof actuation control unit | 146 |
| 6. Sender for left and right roof member locked, right sender for rear window frame locked, sender for roof stowed, convertible roof actuation control unit | 147 |
| 7. Left and right sender for rear shelf locked, sender for left and right roof member flap open, convertible roof actuation control unit, sliding sunroof adjustment control unit | 148 |
| 8. Convertible roof actuation hydraulic pump, power operated convertible roof valves, hydraulic pump temperature sender, convertible roof actuation control unit | 149 |
| 015 - Electromechanical power steering | 150-153 |
| 1. Electromechanical power steering | 150 |
| 2. Power steering control unit, steering moment sender, fuse, electromechanical power steering motor | 151 |
| 3. Onboard supply control unit, steering angle sender, steering column electronics control unit | 152 |
| 4. Electromechanical power steering warning lamp, self-diagnosis connection, data bus diagnostic interface | 153 |
| 016 - Trailer operation | 154-157 |
| 1. Trailer operation | 154 |
| 2. Trailer detector control unit, brake light switch | 155 |
| 3. Trailer detector control unit, trailer socket | 156 |
| 4. Trailer operation warning lamp, self-diagnosis connection, data bus diagnostic interface | 157 |
| 017 - Airbag systems | 158-164 |
| 1. Airbag systems | 158 |
| 2. Airbag control unit, coil connector, front passenger side airbag deactivated warning lamp, driver side airbag igniter, battery isolation igniter | 159 |
| 3. Airbag control unit, key operated switch to deactivate front passenger airbag, driver side belt switch | 160 |
| 4. Airbag control unit, side airbag crash sensor on driver and front passenger side, side airbag igniter on driver and front passenger side | 161 |
| 5. Airbag control unit, front passenger side belt switch, driver and front passenger side seat belt tensioner igniter 1, driver side and front passenger side roll-over bar solenoid | 162 |
| 6. Airbag control unit, seat occupied recognition control unit, pressure sensor for seat occupied recognition, seat belt force sensor for seat occupied recognition | 163 |
| 7. Airbag control unit, data bus diagnostic interface, seat belt warning system warning lamp, airbag warning lamp | 164 |
| 018 - Radio system RCD 500 radio Top CD with digital sound package , radio/navigation system RNS MFD 2 DVD with digital sound package , 10 loudspeakers, CD changer | 165-171 |
| 1. Radio system RCD 500 radio Top CD with digital sound package , radio/navigation system RNS MFD 2 DVD with digital sound package , 10 loudspeakers, CD changer | 165 |
| 2. Radio, control unit with display for radio and navigation system, CD changer | 166 |
| 3. Radio, control unit with display for radio and navigation system, self-diagnosis connection, mobile telephone operating electronics control unit | 167 |
| 4. Amplifier | 168 |
| 5. Amplifier, front left loudspeaker, rear left loudspeaker | 169 |
| 6. Amplifier, front right loudspeaker, rear right loudspeaker | 170 |
| 7. Aerials, aerial selection control unit | 171 |
| 019 - Headlight washer system | 172-174 |

| | |
|--|---------|
| 1. Headlight washer system | 172 |
| 2. Headlight washer system pump, headlight washer system relay, intermittent wiper switch, washer pump switch | 173 |
| 3. Windscreen washer fluid level sender, washer fluid level warning lamp, data bus diagnostic interface | 174 |
| 020 - Parking aid (PDC) | 175-178 |
| 1. Parking aid (PDC) | 175 |
| 2. Parking aid control unit, rear parking aid warning buzzer, self-diagnosis connection | 176 |
| 3. Parking aid control unit, rear left parking aid sender, rear centre left parking aid sender | 177 |
| 4. Parking aid control unit, rear centre right parking aid sender, rear right parking aid sender | 178 |
| 021 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) | 179-186 |
| 1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) | 179 |
| 2. Brake light switch, ABS control unit, fuses | 180 |
| 3. ABS control unit, speed sensor | 181 |
| 4. ABS control unit, TCS and ESP button, ESP sensor unit, ESP and TCS warning lamp 2 | 182 |
| 5. ABS control unit, tyre pressure monitor display button, brake pressure sender 1 | 183 |
| 6. Steering angle sender, steering column electronics control unit, onboard supply control unit | 184 |
| 7. Control unit in dash panel insert, data bus diagnostic interface, tyre pressure monitor warning lamp, self-diagnosis connection | 185 |
| 8. Handbrake warning switch, brake fluid level warning contact, front left brake pad wear sender, control unit in dash panel insert, warning lamps | 186 |
| 022 - Direct shift gearbox 02E | 187-194 |
| 1. Direct shift gearbox 02E | 187 |
| 2. Fuses | 188 |
| 3. Terminal 15 voltage supply relay 2, mechatronics for direct shift gearbox, fuses | 189 |
| 4. Mechatronic unit for direct shift gearbox, hydraulic pressure sender, gearbox input speed sender, solenoid valves, clutch temperature sender | 190 |
| 5. Mechatronics for direct shift gearbox, selector lever locked in position P switch, selector lever lock solenoid, selector lever sensors control unit, pressure regulating valves | 191 |
| 6. Mechatronics for direct shift gearbox, selector lever lock solenoid, selector lever sensors control unit, selector lever position display, gear selector movement sensor, reversing light switch | 192 |
| 7. Mechatronics for direct shift gearbox, input shaft speed sender, gearbox output speed sender, gearbox oil temperature sender, temperature sender in control unit | 193 |
| 8. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, multifunction display | 194 |
| 023 - Radio system RCD 300 radio CD , radio system RCD 300 plus , radio system RCD 500 radio Top CD , radio/navigation system RNS 300 , radio/navigation system RNS MFD 2 DVD , 2 channel/ 4 loudspeakers, 4 channel/ 8 loudspeakers, CD changer | 195-199 |
| 1. Radio system RCD 300 radio CD , radio system RCD 300 plus , radio system RCD 500 radio Top CD , radio/navigation system RNS 300 , radio/navigation system RNS MFD 2 DVD , 2 channel/ 4 loudspeakers, 4 channel/ 8 loudspeakers, CD changer | 195 |
| 2. Radio, control unit with display for radio and navigation system, CD changer | 196 |
| 3. Radio, control unit with display for radio and navigation sytem, front left and right loudspeaker, self-diagnosis connection | 197 |
| 4. Radio, control unit with display for radio and navigation sytem, rear left and right loudspeaker | 198 |
| 5. Aerials, aerial selection control unit | 199 |
| 024 - Auxiliary heater | 200-206 |
| 1. Auxiliary heater | 200 |
| 2. Fresh air blower relay, fuses SA1, SA6, SC16, SC25 | 201 |
| 3. Terminal 15 voltage supply relay, auxiliary heater operation relay, fuses | 202 |
| 4. Auxiliary heater control unit, heater coolant shut-off valve, combustion air blower, circulation pump, temperature sensor, overheating sensor | 203 |
| 5. Auxiliary heater control unit, remote control receiver for auxiliary coolant heater, metering pump, fuel pre-heating heater element, glow plug with flame monitor | 204 |
| 6. Heater/heat output switch, air conditioning system control unit, Climatronic control unit, instant heating button | 205 |
| 7. Data bus diagnostic interface, multifunction display | 206 |
| 025 - Electric seat adjustment with easy entry | 207-215 |
| 1. Electric seat adjustment with easy entry | 207 |
| 2. Driver seat adjustment thermal fuse 1, driver side easy entry control unit | 208 |
| 3. Driver side easy entry control unit, driver seat backrest adjustment switch and motor, driver seat rake adjustment switch and motor | 209 |
| 4. Driver side easy entry control unit, entry assistance button on driver side, driver seat longitudinal adjustment button. motor and sender. driver seat height adjustment button and motor | 210 |

| | |
|--|---------|
| 5. Driver side easy entry control unit, data bus diagnostic interface, driver seat lumbar support adjustment switch, driver seat lumbar support longitudinal adjustment motor | 211 |
| 6. Front passenger side easy entry control unit | 212 |
| 7. Front passenger side easy entry control unit, front passenger seat backrest adjustment switch and motor, front passenger seat rake adjustment button and motor | 213 |
| 8. Front passenger side easy entry control unit, front passenger seat longitudinal adjustment switch, motor and sender, entry assistance button on front passenger side, front passenger seat height adjustment button and motor | 214 |
| 9. Front passenger side easy entry control unit, front passenger seat lumbar support adjustment switch, front passenger seat lumbar support longitudinal adjustment motor | 215 |
| 026 - Seat heating | 216-220 |
| 1. Seat heating | 216 |
| 2. Fuses | 217 |
| 3. Heated driver seat control unit, heated driver seat, heated driver seat cushion lateral support, heated driver seat backrest, driver seat temperature sensor | 218 |
| 4. Heated front passenger seat control unit, heated front passenger seat, heated front passenger seat cushion lateral support, heated front passenger seat backrest, front passenger seat temperature sensor | 219 |
| 5. Heated driver seat regulator, heated front passenger seat regulator, Climatronic control unit, air conditioning system control unit | 220 |
| 027 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) | 221-228 |
| 1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) | 221 |
| 2. Brake light switch, ABS control unit, fuses | 222 |
| 3. ABS control unit, speed sensor | 223 |
| 4. ABS control unit, TCS and ESP button, ESP sensor unit, ESP and TCS warning lamp 2 | 224 |
| 5. ABS control unit, tyre pressure monitor display button, brake pressure sender 1 | 225 |
| 6. Steering angle sender, steering column electronics control unit, onboard supply control unit | 226 |
| 7. Control unit in dash panel insert, data bus diagnostic interface, tyre pressure monitor warning lamp, self-diagnosis connection | 227 |
| 8. Handbrake warning switch, brake fluid level warning contact, front left brake pad wear sender, control unit in dash panel insert, warning lamps | 228 |
| 028 - 1.6 l/85 kW Motronic, engine code BLF | 229-245 |
| 1. 1.6 l/85 kW Motronic, engine code BLF | 229 |
| 2. Battery, alternator, starter, fuses | 230 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 231 |
| 4. Fuel pump control unit, fuel gauge sender, fuel pump | 232 |
| 5. Motronic current supply relay | 233 |
| 6. Engine control unit | 234 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 235 |
| 8. Engine control unit, throttle valve module, engine speed sender, intake air temperature sender 2, coolant temperature sender | 236 |
| 9. Engine control unit, exhaust gas recirculation potentiometer, fuel pressure sender, exhaust gas recirculation valve, fuel pressure sender for low pressure, intake manifold flap potentiometer | 237 |
| 10. Engine control unit, Hall sender, intake air temperature sender, intake manifold pressure sender, knock sensor, fuel pressure regulating valve | 238 |
| 11. Engine control unit, injectors, accelerator position sender | 239 |
| 12. Engine control unit, activated charcoal filter system solenoid valve, inlet camshaft control valve, intake manifold flap valve, lambda probe after catalytic converter | 240 |
| 13. Engine control unit, lambda probe, radiator outlet coolant temperature sender, brake servo pressure sensor | 241 |
| 14. Engine control unit, clutch position sender, brake light switch, brake pedal switch | 242 |
| 15. Engine control unit | 243 |
| 16. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electric power control fault lamp, multifunction display | 244 |
| 17. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge sender, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 245 |
| 029 - 2.0 l/103 kW - turbo diesel engine with unit injectors, engine code BMM | 246-261 |
| 1. 2.0 l/103 kW - turbo diesel engine with unit injectors, engine code BMM | 246 |
| 2. Battery, alternator, starter, fuses | 247 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 248 |
| 4. Automatic glow period control unit, engine glow plugs | 249 |
| 5. Terminal 30 voltage supply relay, fuel pump relay, fuel gauge sender, fuel pump | 250 |
| 6. Engine control unit | 251 |

| | |
|--|---------|
| 7. Engine control unit, intake air temperature sender, charge air pressure sender, accelerator position sender | 252 |
| 8. Engine control unit, Hall sender, engine speed sender, coolant temperature sender, radiator outlet coolant temperature sender, fuel temperature sender | 253 |
| 9. Engine control unit, unit injector valves | 254 |
| 10. Engine control unit, pressure differential sender, intake manifold flap motor, Lambda probe | 255 |
| 11. Engine control unit, air mass meter, exhaust gas recirculation cooler change-over valve, heater element for crankcase breather | 256 |
| 12. Engine control unit, temperature sender before particulate filter, temperature sender before turbocharger, temperature sender after particulate filter, exhaust gas recirculation valve | 257 |
| 13. Engine control unit, clutch position sender, brake light switch, brake pedal switch | 258 |
| 14. Engine control unit | 259 |
| 15. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 260 |
| 16. Dash panel insert, oil level and oil temperature sender, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, diesel particulate filter warning lamp | 261 |
| 030 - Basic equipment | 262-284 |
| 1. Basic equipment | 262 |
| 2. Left headlight, onboard supply control unit | 263 |
| 3. Right headlight, onboard supply control unit | 264 |
| 4. Switches and instruments illumination regulator, headlight range control regulator, left and right fog light bulb | 265 |
| 5. Light switch, fog light switch, rear fog light switch | 266 |
| 6. Left and right tail light, rear left fog light, rear turn signal, brake light, rear left and right side marker bulb | 267 |
| 7. Right reversing light, high level brake light bulb, number plate light | 268 |
| 8. Steering column electronics control unit, wiper switch, washer pump switch, intermittent wiper regulator | 269 |
| 9. Cruise control system switch, multifunction display call-up button, cruise control system (CCS) button, steering angle sender, steering column electronics control unit | 270 |
| 10. Ignition/starter switch, turn signal switch, headlight dipper/flasher hand operated switch, coil connector, horn plate, turn signal relay, ignition key removal lock | 271 |
| 11. Bonnet contact switch, rain and light detector sensor, windscreen wiper motor, washer jet heater element, double washer pump relay 2 | 272 |
| 12. Washer pump, treble tone horn, bass tone horn, front left and right footwell illumination bulb, double washer pump relay 1 | 273 |
| 13. Tank filler flap locking motor, luggage compartment light, glove compartment light, dual tone horn relay, convenience system central control unit | 274 |
| 14. Heated rear window, interior light, ambient lighting, heated rear window relay | 275 |
| 15. Driver vanity mirror contact switch, illuminated vanity mirror, cigarette lighter, 12 V socket, hazard warning light switch | 276 |
| 16. Air conditioning system control unit, fresh air blower switch, fresh air blower, fresh air blower series resistor with overheating fuse | 277 |
| 17. Dash panel insert, handbrake warning switch, brake fluid level warning contact, immobilizer reader coil, warning lamps | 278 |
| 18. Ambient temperature sensor, coolant shortage indicator sender, washer fluid level warning lamp, brake pad wear sender, warning lamps | 279 |
| 19. Oil pressure switch, dash panel insert, warning lamps | 280 |
| 20. Dash panel insert, data bus diagnostic interface, warning lamps | 281 |
| 21. Data bus diagnostic interface, self-diagnosis connection | 282 |
| 22. Driver and front passenger side exterior mirror turn signal bulb, driver and front passenger door control unit | 283 |
| 23. Brake light switch | 284 |
| 031 - Convenience system | 285-298 |
| 1. Convenience system | 285 |
| 2. Driver door control unit, window regulator switch in driver door | 286 |
| 3. Driver door control unit, central switch for window regulators in driver door, interior locking button, Central locking deadlock function warning lamp, interior locking warning lamp | 287 |
| 4. Driver door control unit, mirror adjustment switch, exterior mirror heater button, mirror fold-in feature system switch, key operated switch to block release of rear lid remote, rear lid remote release button, fuel tank flap release button | 288 |
| 5. Driver door control unit, driver side electric exterior mirror with mirror adjustment, entry light, turn signal, automatic anti-dazzle and heated | 289 |
| 6. Driver door control unit, driver side central locking lock unit, driver door contact switch | 290 |
| 7. Front passenger side door control unit, window regulator switch in front passenger door, front passenger side central locking lock unit, front passenger door contact switch | 291 |

| | |
|---|---------|
| 8. Front passenger door control unit, driver side electric exterior mirror with mirror adjustment, entry light, turn signal, front passenger side interior locking button | 292 |
| 9. Interior monitoring deactivation switch, convenience system central control unit, fuse | 293 |
| 10. Rear lid lock unit, luggage compartment light switch, rear lid handle release button, tank filler flap locking motor | 294 |
| 11. Interior monitor send and receive module 1 and 2, alarm horn, vehicle inclination sender | 295 |
| 12. Convertible roof actuation control unit, fuses, rear left and right door control unit, data bus diagnostic interface | 296 |
| 13. Sliding sunroof adjustment control unit, convertible roof actuation and sunroof button, convertible roof actuation control unit | 297 |
| 14. Bonnet contact switch, automatic anti-dazzle interior mirror | 298 |
| 032 - CAN and Lin-bus network | 299-306 |
| 1. CAN and Lin-bus network | 299 |
| 2. Fuse, data bus diagnosis interface, self-diagnosis connection | 300 |
| 3. Data bus diagnosis interface, self-diagnosis connection, onboard supply control unit, cornering light and headlight range control unit, control unit in dash panel insert | 301 |
| 4. ABS control unit, airbag, auxiliary heater, telephone transmitter and receiver unit, power steering, control unit with display for radio and navigation, radio, amplifier, digital satellite radio tuner | 302 |
| 5. Magnetic field sender for compass, control unit for convertible roof actuation, trailer detector control unit, control unit with display for TV, radio navigation, control unit for steering column electronics, control unit for selector lever sensors | 303 |
| 6. Auxiliary air heater control unit, convenience system central control unit, interior monitor send and receive module 1, vehicle inclination sender, alarm horn | 304 |
| 7. Driver door control unit, front passenger door control unit, rear left door control unit | 305 |
| 8. Climatronic control unit, air conditioning control unit, parking aid control unit | 306 |
| 033 - Radio system "Premium" with digital satellite radio tuner SDARS | 307-311 |
| 1. Radio system "Premium" with digital satellite radio tuner SDARS | 307 |
| 2. Voltage supply, radio and CD changer | 308 |
| 3. Radio, digital satellite radio tuner, front left and right treble loudspeaker, front left and right bass loudspeaker | 309 |
| 4. Radio, rear left and right loudspeaker | 310 |
| 5. Aerials | 311 |
| 034 - Radio system "Premium" with digital satellite radio tuner SDARS | 312-317 |
| 1. Radio system "Premium" with digital satellite radio tuner SDARS | 312 |
| 2. Voltage supply, radio, CD changer | 313 |
| 3. Voltage supply amplifier, radio, digital satellite radio tuner, aerial connection | 314 |
| 4. Treble loudspeaker, mid-range loudspeaker and bass loudspeaker front left and right, amplifier | 315 |
| 5. Bass loudspeaker and rear left and right treble loudspeaker, amplifier | 316 |
| 6. Aerials | 317 |
| 035 - Universal cellphone preparation (UHV) - Low | 318-321 |
| 1. Universal cellphone preparation (UHV) - Low | 318 |
| 2. Control unit for mobile telephone operating electronics, telephone microphone, mobile telephone aerial, mobile telephone holder | 319 |
| 3. Control unit for mobile telephone operating electronics, control unit with display for radio and navigation system, mobile telephone holder | 320 |
| 4. Data bus diagnosis interface, control unit in dash panel insert, multifunction display, multifunction buttons on left in steering wheel | 321 |
| 036 - 3.2 l/184 kW Motronic, engine code BUB | 322-341 |
| 1. 3.2 l/184 kW Motronic, engine code BUB | 322 |
| 2. Battery, starter, fuses, terminal 30 wiring junction | 323 |
| 3. Alternator, terminal 50 voltage supply relay, fuses | 324 |
| 4. Terminal 15 voltage supply relay 2, fuses | 325 |
| 5. Engine component current supply relay | 326 |
| 6. Additional coolant pump relay, continued coolant circulation pump, fuel gauge sender, fuel pump | 327 |
| 7. Terminal 30 voltage supply relay | 328 |
| 8. Engine control unit, winter driving program button | 329 |
| 9. Engine control unit, ignition coil 1-3 with output stage, spark plugs, fuel system diagnostic pump | 330 |
| 10. Engine control unit, ignition coil 4 -6 with output stage, spark plugs, heater element for crankcase breather | 331 |
| 11. Engine control unit, exhaust flap 1 valve, inlet camshaft control valve, activated charcoal filter system solenoid valve 1 | 332 |
| 12. Engine control unit, injectors | 333 |
| 13. Engine control unit, throttle valve drive, hall sender, coolant temperature sender | 334 |
| 14. Engine control unit. knock sensors. engine speed sender | 335 |

| | |
|---|---------|
| 15. Engine control unit, lambda probe, accelerator position sender | 336 |
| 16. Engine control unit, lambda probe 1 after catalytic converter, lambda probe 2 upstream of catalytic converter | 337 |
| 17. Engine control unit, lambda probe 2 after catalytic converter, air mass meter, intake air temperature sender, radiator outlet coolant temperature sender | 338 |
| 18. Engine control unit, brake light switch, brake pedal switch, secondary air pump relay, secondary air pump motor | 339 |
| 19. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electric power control fault lamp, multifunction display | 340 |
| 20. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge sender, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 341 |
| 037 - Multimedia system | 342-345 |
| 1. Multimedia system | 342 |
| 2. Control unit with display for radio and navigation system, iPod holder | 343 |
| 3. Radio, USB connection retainer (Apple iPod) | 344 |
| 4. Connection for external audio source (AUX) | 345 |
| 038 - Climatic | 346-350 |
| 1. Climatic | 346 |
| 2. Air conditioning system control unit, air conditioning system switch, air conditioning system compressor regulating valve, centre vent temperature sender, fuses | 347 |
| 3. Air conditioning system control unit, high-pressure sender, air recirculation flap control motor, footwell vent temperature sender, evaporator out-flow temperature sender | 348 |
| 4. Air conditioning system control unit, temperature flap control motor, temperature flap control motor potentiometer | 349 |
| 5. Air conditioning system control unit, fresh air blower, fresh air blower series resistor with overheating fuse, fresh air blower switch, data bus diagnostic interface | 350 |
| 039 - Climatronic | 351-357 |
| 1. Climatronic | 351 |
| 2. Climatronic control unit, high pressure sender, fuses | 352 |
| 3. Climatronic control unit, sunlight penetration photosensor, left and right vent temperature sender, evaporator out-flow temperature sender | 353 |
| 4. Left temperature flap control motor, potentiometer for air recirculation flap control motor, left and right footwell vent temperature sender | 354 |
| 5. Defroster flap control motor, right temperature flap control motor, defroster flap control motor potentiometer, potentiometer for right temperature flap control motor | 355 |
| 6. Climatronic control unit, air flow flap control motor potentiometer, central flap control motor potentiometer, central flap control motor, air flow flap control motor | 356 |
| 7. Climatronic control unit, fresh air blower control unit, compressor regulating valve, air conditioning system compressor regulating valve, fresh air blower | 357 |
| 041 - Double clutch gearbox 02E | 358-365 |
| 1. Double clutch gearbox 02E | 358 |
| 2. Fuses | 359 |
| 3. Terminal 15 voltage supply relay 2, mechatronics for direct shift gearbox, fuses | 360 |
| 4. Mechatronic unit for direct shift gearbox, hydraulic pressure sender, gearbox input speed sender, solenoid valves, clutch temperature sender | 361 |
| 5. Mechatronics for direct shift gearbox, selector lever locked in position P switch, selector lever lock solenoid, selector lever sensors control unit, pressure regulating valves | 362 |
| 6. Mechatronics for direct shift gearbox, selector lever lock solenoid, selector lever sensors control unit, selector lever position display, gear selector movement sensor, reversing light switch | 363 |
| 7. Mechatronics for direct shift gearbox, input shaft speed sender, gearbox output speed sender, gearbox oil temperature sender, temperature sender in control unit | 364 |
| 8. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, multifunction display | 365 |
| 042 - 2.0 l/110 kW Motronic, engine code BVY | 366-384 |
| 1. 2.0 l/110 kW Motronic, engine code BVY | 366 |
| 2. Battery, alternator, starter, fuses | 367 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 368 |
| 4. Fuel pump control unit, fuel gauge sender, fuel pump | 369 |
| 5. Terminal 30 voltage supply relay | 370 |
| 6. Engine control unit | 371 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 372 |
| 8. Engine control unit, throttle valve module, fuel pressure sender for low pressure, coolant temperature sender | 373 |
| 9. Engine control unit, engine speed sender, knock sensors, fuel pressure sender | 374 |
| 10. Engine control unit. Hall sender. intake air temperature sender. intake manifold pressure sender. | 375 |

| | |
|--|---------|
| intake manifold flap potentiometer, intake manifold flap motor, exhaust gas recirculation valve | |
| 11. Engine control unit, injectors | 376 |
| 12. Activated charcoal filter system solenoid valve, inlet camshaft control valve, fuel pressure regulating valve, intake manifold flap valve, map-controlled engine cooling system thermostat | 377 |
| 13. Engine control unit, lambda probe, accelerator position sender | 378 |
| 14. Engine control unit, lambda probe 1 after catalytic converter, radiator outlet coolant temperature sender, intake air temperature sender 2 | 379 |
| 15. Engine control unit, lambda probe 2 after catalytic converter, lambda probe 3 upstream of catalytic converter | 380 |
| 16. Engine control unit, brake light switch | 381 |
| 17. Engine control unit, clutch position sender | 382 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electric power control fault lamp, multifunction display | 383 |
| 19. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge sender, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, buzzer and gong | 384 |
| 043 - 2.0 l - Motronic/147 kW, engine code BWA | 385-403 |
| 1. 2.0 l - Motronic/147 kW, engine code BWA | 385 |
| 2. Battery, alternator, starter, fuses | 386 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 387 |
| 4. Engine component current supply relay | 388 |
| 5. Fuel pump control unit, coolant pump relay, coolant circulation pump, fuel gauge sender, fuel pump | 389 |
| 6. Terminal 30 voltage supply relay | 390 |
| 7. Engine control unit | 391 |
| 8. Engine control unit, ignition coils with output stage, spark plugs | 392 |
| 9. Engine control unit, throttle valve module, intake manifold flap motor, intake manifold flap potentiometer, fuel pressure sender for low-pressure | 393 |
| 10. Engine control unit, knock sensors, engine speed sender, coolant temperature sender | 394 |
| 11. Engine control unit, fuel pressure sender, Hall sender, intake air temperature sender | 395 |
| 12. Engine control unit, injectors, inlet camshaft control valve | 396 |
| 13. Engine control unit, turbocharger air recirculation valve, activated charcoal filter system solenoid valve, turbocharger air recirculation valve, fuel pressure regulating valve, charge air pressure sender | 397 |
| 14. Engine control unit, radiator outlet coolant temperature sender, Lambda probe after catalytic converter, air mass meter | 398 |
| 15. Engine control unit, Lambda probe, accelerator position sender | 399 |
| 16. Engine control unit, fuel system diagnostic pump, brake light switch | 400 |
| 17. Engine control unit, clutch position sender | 401 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 402 |
| 19. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 403 |
| 044 - Garage door opener | 404-405 |
| 1. Garage door opener | 404 |
| 2. Garage door operating unit, garage door opener button, garage door opener warning lamp | 405 |
| 045 - Trailer operation | 406-409 |
| 1. Trailer operation | 406 |
| 2. Trailer detector control unit, brake light switch | 407 |
| 3. Trailer detector control unit, trailer socket | 408 |
| 4. Trailer operation warning lamp, self-diagnosis connection, data bus diagnostic interface | 409 |
| 046 - Auxiliary heater | 410-416 |
| 1. Auxiliary heater | 410 |
| 2. Fresh air blower relay, fuses SA1, SA6, SC16, SC25 | 411 |
| 3. Terminal 15 voltage supply relay, auxiliary heater operation relay, fuses | 412 |
| 4. Auxiliary heater control unit, heater coolant shut-off valve, combustion air blower, circulation pump, temperature sensor, overheating sensor | 413 |
| 5. Auxiliary heater control unit, remote control receiver for auxiliary coolant heater, metering pump, fuel pre-heating heater element, glow plug with flame monitor | 414 |
| 6. Heater/heat output switch, air conditioning system control unit, Climatronic control unit, instant heating button | 415 |
| 7. Data bus diagnostic interface, multifunction display | 416 |
| 047 - Radio/navigation system RNS 300 , radio/navigation system RNS MFD 2 DVD , satellite radio, 4-channel/ 8 loudspeaker, CD changer | 417-421 |
| 1. Radio/navigation system RNS 300 , radio/navigation system RNS MFD 2 DVD , satellite radio, 4-channel/ 8 loudspeaker. CD changer | 417 |

| | |
|---|---------|
| 2. Control unit with display for radio and navigation system, CD changer | 418 |
| 3. Radio/ control unit with display for radio and navigation, digital satellite radio tuner, aerial connection, front loudspeaker | 419 |
| 4. Control unit with display for radio and navigation system, rear left and right loudspeaker | 420 |
| 5. Aerials, control unit with display for radio and navigation system | 421 |
| 048 - Radio/navigation system "RNS MFD 2 DVD Dynaudio Sound" | 422-428 |
| 1. Radio/navigation system "RNS MFD 2 DVD Dynaudio Sound" | 422 |
| 2. Control unit with display for radio and navigation system, CD changer | 423 |
| 3. Radio/ control unit with display for radio and navigation, digital satellite radio tuner | 424 |
| 4. Amplifier | 425 |
| 5. Amplifier, front left loudspeaker, rear left loudspeaker | 426 |
| 6. Amplifier, front right loudspeaker, rear right loudspeaker | 427 |
| 7. Aerials | 428 |
| 049 - Gas discharge headlights (bi-xenon) | 429-435 |
| 1. Gas discharge headlights (bi-xenon) | 429 |
| 2. Front left headlight, power output module for left headlight, left gas discharge light, left cornering light bulb, front left turn signal bulb | 430 |
| 3. Right headlight, power output module for right headlight, right gas discharge light, right cornering light bulb, front right turn signal bulb | 431 |
| 4. Right headlight, power output module for right headlight, cornering light and headlight range control unit, front left vehicle level sender | 432 |
| 5. Cornering light and headlight range control unit, rear left vehicle level sender, data bus diagnosis interface, self-diagnosis connection | 433 |
| 6. Turn signal switch, headlight dipper/flasher switch, front left and right side marker bulb | 434 |
| 7. Light switch, fog light switch, rear fog light switch | 435 |
| 051 - Radiator fan, variable for one speed/two speed radiator fan | 436-438 |
| 1. Radiator fan, variable for one speed/two speed radiator fan | 436 |
| 2. Terminal 30 voltage supply relay, battery | 437 |
| 3. Radiator fan control unit, radiator fan | 438 |
| 052 - Compass | 439-440 |
| 1. Compass | 439 |
| 2. Magnetic field sender for compass, data bus diagnostic interface | 440 |
| 053 - Fuse concept | 441-454 |
| 1. Fuse concept | 441 |
| 2. Battery, fuses SA5, SA6 | 442 |
| 3. Fuses SC1, SC2, terminal 15 voltage supply relay 2 | 443 |
| 4. Fuses SC1, SC2, terminal 15 voltage supply relay 2 | 444 |
| 5. Fuses SC3, SC4 | 445 |
| 6. Fuses SC5, SC6 | 446 |
| 7. Fuses SC12, SC13 | 447 |
| 8. Fuses SC14, SC15, SC17 | 448 |
| 9. Fuses SC18, SC19, SC20, SC21, SC22, SC23 | 449 |
| 10. Fuses SC24, SC25, SC26 | 450 |
| 11. Fuse SC27, SC28, SC29, SC30, SC31, SC32 | 451 |
| 12. Fuses SC33, SC34, SC35, SC36, SC37, headlight washer system relay | 452 |
| 13. Fuses SC38, SC39, SC40, SC41, X-contact relief relay, auxiliary heater operation relay | 453 |
| 14. Fuses SC42, SC43, SC44, SC45, SC47, SC48, SC49, blocking diode 2 | 454 |
| 054 - Position of fuses, (SA, SB), electronics box low | 455-464 |
| 1. Position of fuses, (SA, SB), electronics box low | 455 |
| 2. Battery, fuses SA1, SA2, SA3, SA6 | 456 |
| 3. Fuses SA5, SA7 | 457 |
| 4. Fuses SB2, SB3, SB4 and SB6 | 458 |
| 5. Fuses SB8, SB9, SB10, Motronic current supply relay | 459 |
| 6. Fuses SB11, SB12, SB13 and SB14 | 460 |
| 7. Fuses SB15, SB16, SB17, SB18 and SB19 | 461 |
| 8. Fuses SB21, SB22, SB23 and SB24 | 462 |
| 9. Fuses SB25, SB26, SB28 and SB29 | 463 |
| 10. Fuses SB30, X-contact relief relay, terminal 15 voltage supply relay 2 | 464 |
| 055 - Fuse assignment, (SA, SB), E-box high | 465-475 |
| 1. Fuse assignment, (SA, SB), E-box high | 465 |
| 2. Battery, fuses SA1, SA2, and SA3 | 466 |
| 3. Fuses SA6, SA7, SB1, SB2, SB3 and SB4 | 467 |
| 4. Fuses SB5, SB6, SB7, SB8, SB9, SB10 and SB11 | 468 |
| 5. Fuses SB12 and SB15, terminal 30 voltage supply relay, coolant pump relay | 469 |
| 6. Fuse SB16, SB17, SB18, SB19 | 470 |
| 7. Fuses SB20, SB23, SB24 and SB25, terminal 30 voltage supply relay | 471 |

| | |
|--|---------|
| 8. Fuses SB28, SB30 and SB31 | 472 |
| 9. Fuses SB38, SB39, SB40 and SB42 | 473 |
| 10. Fuses SB47, SB48 and SB49, terminal 15 voltage supply relay 2 | 474 |
| 11. Fuses SB52 and SB53 | 475 |
| 056 - Multifunction steering wheel | 476-481 |
| 1. Multifunction steering wheel | 476 |
| 2. Steering column electronics control unit | 477 |
| 3. Steering column electronics control unit, multifunction steering wheel control unit, cruise control system switch, driver side airbag igniter, horn plate | 478 |
| 4. Steering column electronics control unit, multifunction steering wheel control unit, ignition/starter switch, multifunction buttons on left in steering wheel | 479 |
| 5. Multifunction steering wheel control unit, multifunction buttons on right in steering wheel, Tiptronic switch in steering wheel | 480 |
| 6. Dash panel insert, data bus diagnostic interface, self-diagnosis connection | 481 |
| 057 - Radio sound system | 482-485 |
| 1. Radio sound system | 482 |
| 2. Voltage supply, radio, front loudspeakers | 483 |
| 3. Radio, rear left and right loudspeaker | 484 |
| 4. Aerials | 485 |
| 058 - Radio system RCD 300 and RCD 500, 2 channel/ 4 loudspeakers, 4 channel/ 8 loudspeakers, CD changer | 486-490 |
| 1. Radio system RCD 300 and RCD 500, 2 channel/ 4 loudspeakers, 4 channel/ 8 loudspeakers, CD changer | 486 |
| 2. Radio, CD changer | 487 |
| 3. Radio, front loudspeakers | 488 |
| 4. Radio, rear left and right loudspeaker | 489 |
| 5. Aerials | 490 |
| 059 - Radio system "RCD 500 DYNAUDIO Sound" | 491-497 |
| 1. Radio system "RCD 500 DYNAUDIO Sound" | 491 |
| 2. Radio, CD changer | 492 |
| 3. Radio, connection infotainment CAN bus | 493 |
| 4. Amplifier | 494 |
| 5. Amplifier, front left loudspeaker, rear left loudspeaker | 495 |
| 6. Amplifier, front right loudspeaker, rear right loudspeaker | 496 |
| 7. Aerials | 497 |
| 060 - Preparation for radio and navigation system (models for Japan) | 498-502 |
| 1. Preparation for radio and navigation system (models for Japan) | 498 |
| 2. Preparation for radio/navigation system | 499 |
| 3. Preparation for radio and navigation system, front left and right loudspeaker | 500 |
| 4. Preparation for radio/navigation system, rear left and right loudspeaker | 501 |
| 5. Aerials, aerial selection control unit | 502 |
| 061 - Convenience system | 503-516 |
| 1. Convenience system | 503 |
| 2. Driver door control unit, window regulator switch in driver door | 504 |
| 3. Driver door control unit, central switch for window regulators in driver door, interior locking button, Central locking deadlock function warning lamp, interior locking warning lamp | 505 |
| 4. Driver door control unit, mirror adjustment switch, exterior mirror heater button, mirror fold-in feature system switch, key operated switch to block release of rear lid remote, rear lid remote release button, fuel tank flap release button | 506 |
| 5. Driver door control unit, driver side electric exterior mirror with mirror adjustment, automatic anti-dazzle and heated, entry light, turn signal | 507 |
| 6. Driver door control unit, driver side central locking lock unit, driver door contact switch | 508 |
| 7. Front passenger side door control unit, window regulator switch in front passenger door, front passenger side central locking lock unit, front passenger door contact switch | 509 |
| 8. Front passenger door control unit, front passenger side electric exterior mirror with mirror adjustment, entry light, turn signal, front passenger side interior locking button | 510 |
| 9. Interior monitoring deactivation switch, convenience system central control unit, fuse, alarm horn, alarm horn relay | 511 |
| 10. Rear lid lock unit, luggage compartment light switch, rear lid handle release button, tank filler flap locking motor | 512 |
| 11. Interior monitor send and receive module 1 and 2, alarm horn, vehicle inclination sender | 513 |
| 12. Convertible roof actuation control unit, fuses, rear left and right door control unit, data bus diagnostic interface | 514 |
| 13. Sliding sunroof adjustment control unit, convertible roof actuation and sunroof button, convertible roof actuation control unit | 515 |
| 14. Bonnet contact switch. automatic anti-dazzle interior mirror | 516 |

| | |
|--|---------|
| 062 - 2.0 l/110 kW Motronic, engine code BVY | 517-535 |
| 1. 2.0 l/110 kW Motronic, engine code BVY | 517 |
| 2. Battery, alternator, starter, fuses | 518 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 519 |
| 4. Fuel pump control unit, fuel gauge sender, fuel pump | 520 |
| 5. Terminal 30 voltage supply relay | 521 |
| 6. Engine control unit | 522 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 523 |
| 8. Engine control unit, throttle valve module, fuel pressure sender for low pressure, coolant temperature sender | 524 |
| 9. Engine control unit, engine speed sender, knock sensors, fuel pressure sender | 525 |
| 10. Engine control unit, Hall sender, intake air temperature sender, intake manifold pressure sender, intake manifold flap potentiometer, intake manifold flap motor, exhaust gas recirculation valve | 526 |
| 11. Engine control unit, injectors | 527 |
| 12. Activated charcoal filter system solenoid valve, inlet camshaft control valve, fuel pressure regulating valve, intake manifold flap valve, map-controlled engine cooling system thermostat | 528 |
| 13. Engine control unit, lambda probe, accelerator position sender | 529 |
| 14. Engine control unit, Lambda probe 1 after catalytic converter, radiator outlet coolant temperature sender, intake air temperature sender 2 | 530 |
| 15. Engine control unit, Lambda probe 2 after catalytic converter, Lambda probe 3 after catalytic converter | 531 |
| 16. Engine control unit, brake light switch | 532 |
| 17. Engine control unit, clutch position sender | 533 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 534 |
| 19. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer and gong | 535 |
| 063 - 2.0 l - Motronic/147 kW, engine code BWA | 536-554 |
| 1. 2.0 l - Motronic/147 kW, engine code BWA | 536 |
| 2. Battery, alternator, starter, fuses | 537 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 538 |
| 4. Engine component current supply relay | 539 |
| 5. Fuel pump control unit, coolant pump relay, coolant circulation pump, fuel gauge sender, fuel pump | 540 |
| 6. Terminal 30 voltage supply relay | 541 |
| 7. Engine control unit | 542 |
| 8. Engine control unit, ignition coils with output stage, spark plugs | 543 |
| 9. Engine control unit, throttle valve module, intake manifold flap motor, intake manifold flap potentiometer, fuel pressure sender for low-pressure | 544 |
| 10. Engine control unit, knock sensors, engine speed sender, coolant temperature sender | 545 |
| 11. Engine control unit, fuel pressure sender, Hall sender, intake air temperature sender | 546 |
| 12. Engine control unit, injectors, inlet camshaft control valve | 547 |
| 13. Engine control unit, turbocharger air recirculation valve, activated charcoal filter system solenoid valve, turbocharger air recirculation valve, fuel pressure regulating valve, charge air pressure sender | 548 |
| 14. Engine control unit, radiator outlet coolant temperature sender, Lambda probe after catalytic converter, air mass meter | 549 |
| 15. Engine control unit, Lambda probe, accelerator position sender | 550 |
| 16. Engine control unit, fuel system diagnostic pump, brake light switch | 551 |
| 17. Engine control unit, clutch position sender | 552 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 553 |
| 19. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 554 |
| 064 - Auxiliary air heater (PTC) | 555-556 |
| 1. Auxiliary air heater (PTC) | 555 |
| 2. Auxiliary air heater control unit, auxiliary air heater element | 556 |
| 065 - 3.2 l/184 kW - Motronic, engine code CBRA | 557-577 |
| 1. 3.2 l/184 kW - Motronic, engine code CBRA | 557 |
| 2. Battery, starter, fuses, terminal 30 wiring junction | 558 |
| 3. Alternator, terminal 50 voltage supply relay, fuses | 559 |
| 4. Terminal 15 voltage supply relay 2, fuses | 560 |
| 5. Motronic current supply relay, fuses | 561 |
| 6. Additional coolant pump relay, continued coolant circulation pump, fuel gauge sender, fuel pump | 562 |
| 7. Terminal 30 voltage supply relay | 563 |

| | |
|--|---------|
| 8. Engine control unit, winter driving program button | 564 |
| 9. Engine control unit, ignition coil 1-3 with output stage, spark plugs, fuel system diagnostic pump | 565 |
| 10. Engine control unit, ignition coil 4 to 6 with output stage, spark plugs, crankcase breather heater element | 566 |
| 11. Engine control unit, secondary air inlet valves, exhaust flap 1 valve, fuel system diagnosis pump | 567 |
| 12. Engine control unit, variable valve timing, activated charcoal filter solenoid valve 1 | 568 |
| 13. Engine control unit, injectors | 569 |
| 14. Engine control unit, throttle valve module, Hall sender, coolant temperature sender | 570 |
| 15. Engine control unit, knock sensors, engine speed sender | 571 |
| 16. Engine control unit, Lambda probe, accelerator position sender | 572 |
| 17. Engine control unit, Lambda probe 1 after catalytic converter, Lambda probe 2 before catalytic converter | 573 |
| 18. Engine control unit, Lambda probe 2 after catalytic converter, air mass meter, intake air temperature sender, coolant temperature sender at radiator outlet, secondary air pressure sender 1 | 574 |
| 19. Engine control unit, brake light switch, brake pedal switch, secondary air pump relay, secondary air pump motor | 575 |
| 20. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 576 |
| 21. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 577 |
| 066 - 3.2 l/184 kW - Motronic, engine code BUB | 578-597 |
| 1. 3.2 l/184 kW - Motronic, engine code BUB | 578 |
| 2. Battery, starter, fuses, terminal 30 wiring junction | 579 |
| 3. Alternator, terminal 50 voltage supply relay, fuses | 580 |
| 4. Terminal 15 voltage supply relay 2, fuses | 581 |
| 5. Motronic current supply relay, fuses | 582 |
| 6. Additional coolant pump relay, continued coolant circulation pump, fuel gauge sender, fuel pump | 583 |
| 7. Terminal 30 voltage supply relay | 584 |
| 8. Engine control unit, winter driving program button | 585 |
| 9. Engine control unit, ignition coil 1-3 with output stage, spark plugs, fuel system diagnostic pump | 586 |
| 10. Engine control unit, ignition coil 4 to 6 with output stage, spark plugs, crankcase breather heater element | 587 |
| 11. Engine control unit, exhaust flap 1 valve, inlet camshaft control valves, activated charcoal filter system solenoid valve 1 | 588 |
| 12. Engine control unit, injectors | 589 |
| 13. Engine control unit, throttle valve module, Hall sender, coolant temperature sender | 590 |
| 14. Engine control unit, knock sensors, engine speed sender | 591 |
| 15. Engine control unit, Lambda probe, accelerator position sender | 592 |
| 16. Engine control unit, Lambda probe 1 after catalytic converter, Lambda probe 2 before catalytic converter | 593 |
| 17. Engine control unit, Lambda probe 2 after catalytic converter, air mass meter, intake air temperature sender, radiator outlet coolant temperature sender | 594 |
| 18. Engine control unit, brake light switch, brake pedal switch, secondary air pump relay, secondary air pump motor | 595 |
| 19. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 596 |
| 20. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 597 |
| 067 - Radio/navigation system "RNS MFD 2 DVD Dynaudio Sound" | 598-604 |
| 1. Radio/navigation system "RNS MFD 2 DVD Dynaudio Sound" | 598 |
| 2. Control unit with display for radio and navigation system, CD changer | 599 |
| 3. Radio/ control unit with display for radio and navigation, digital satellite radio tuner | 600 |
| 4. Amplifier | 601 |
| 5. Amplifier, front left loudspeaker, rear left loudspeaker | 602 |
| 6. Amplifier, front right loudspeaker, rear right loudspeaker | 603 |
| 7. Aerials | 604 |
| 068 - 1.6 l/85 kW Motronic, engine code BLF | 605-621 |
| 1. 1.6 l/85 kW Motronic, engine code BLF | 605 |
| 2. Battery, alternator, starter, fuses | 606 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 607 |
| 4. Fuel pump control unit, fuel gauge sender, fuel pump | 608 |
| 5. Motronic current supply relay | 609 |
| 6. Engine control unit | 610 |

| | |
|---|---------|
| 7. Engine control unit, ignition coils with output stage, spark plugs | 611 |
| 8. Engine control unit, throttle valve module, engine speed sender, intake air temperature sender 2, coolant temperature sender | 612 |
| 9. Engine control unit, exhaust gas recirculation potentiometer, fuel pressure sender, exhaust gas recirculation valve, fuel pressure sender for low pressure, intake manifold flap potentiometer | 613 |
| 10. Engine control unit, Hall sender, intake air temperature sender, intake manifold pressure sender, knock sensor, fuel pressure regulating valve | 614 |
| 11. Engine control unit, injectors, accelerator position sender | 615 |
| 12. Engine control unit, activated charcoal filter system solenoid valve, inlet camshaft control valve, intake manifold flap valve, lambda probe after catalytic converter | 616 |
| 13. Engine control unit, lambda probe, radiator outlet coolant temperature sender, brake servo pressure sensor | 617 |
| 14. Engine control unit, clutch position sender, brake light switch, brake pedal switch | 618 |
| 15. Engine control unit | 619 |
| 16. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electric power control fault lamp, multifunction display | 620 |
| 17. Dash panel insert, oil level and oil temperature sender, exhaust emissions warning lamp, fuel gauge sender, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 621 |
| 069 - 2.0 I - Turbodiesel with unit injectors/103 kW, engine code BMM | 622-638 |
| 1. 2.0 I - Turbodiesel with unit injectors/103 kW, engine code BMM | 622 |
| 2. Battery, alternator, starter, fuses | 623 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2, fuses | 624 |
| 4. Automatic glow period control unit, engine glow plugs | 625 |
| 5. Terminal 30 voltage supply relay, fuel pump relay, fuel gauge sender, fuel pump | 626 |
| 6. Engine control unit | 627 |
| 7. Engine control unit, intake air temperature sender, charge air pressure sender, accelerator position sender | 628 |
| 8. Engine control unit, Hall sender, engine speed sender, coolant temperature sender, radiator outlet coolant temperature sender, fuel temperature sender | 629 |
| 9. Engine control unit, unit injector valves | 630 |
| 10. Engine control unit, pressure differential sender, intake manifold flap motor, lambda probe | 631 |
| 11. Engine control unit, air mass meter, exhaust gas recirculation cooler changeover valve, heater element for crankcase breather | 632 |
| 12. Engine control unit, temperature sender before particulate filter, temperature sender before turbocharger, temperature sender after particulate filter, exhaust gas recirculation valve | 633 |
| 13. Engine control unit, clutch position sender, brake light switch, brake pedal switch | 634 |
| 14. Engine control unit | 635 |
| 15. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 636 |
| 16. Dash panel insert, oil level and oil temperature sender, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, diesel particulate filter warning lamp | 637-638 |
| 070 - Basic equipment | 639-661 |
| 1. Basic equipment | 639 |
| 2. Left headlight, onboard supply control unit | 640 |
| 3. Right headlight, onboard supply control unit | 641 |
| 4. Switches and instruments illumination regulator, headlight range control regulator, left and right fog light bulb | 642 |
| 5. Light switch, fog light switch, rear fog light switch | 643 |
| 6. Left and right tail light, rear left fog light, rear turn signal, brake light, rear left and right side marker bulb | 644 |
| 7. Right reversing light, high level brake light bulb, number plate light | 645 |
| 8. Steering column electronics control unit, wiper switch, washer pump switch, intermittent wiper regulator | 646 |
| 9. Cruise control system switch, multifunction display call-up button, cruise control system (CCS) button, steering angle sender, steering column electronics control unit | 647 |
| 10. Ignition/starter switch, turn signal switch, headlight dipper/flasher hand operated switch, coil connector, horn plate, turn signal relay, ignition key removal lock | 648 |
| 11. Bonnet contact switch, rain and light detector sensor, windscreen wiper motor, washer jet heater element, double washer pump relay 2 | 649 |
| 12. Washer pump, treble tone horn, bass tone horn, front left and right footwell illumination bulb, double washer pump relay 1 | 650 |
| 13. Tank filler flap locking motor, luggage compartment light, glove compartment light, dual tone horn relay, convenience system central control unit | 651 |
| 14. Heated rear window, interior light, ambient lighting, heated rear window relay | 652 |
| 15. Driver vanity mirror contact switch. illuminated vanity mirror. cigarette lighter. 12 V socket. | 653 |

| | |
|---|---------|
| hazard warning light switch | |
| 16. Air conditioning system control unit, fresh air blower switch, fresh air blower, fresh air blower series resistor with overheating fuse | 654 |
| 17. Dash panel insert, handbrake warning switch, brake fluid level warning contact, immobilizer reader coil, warning lamps | 655 |
| 18. Ambient temperature sensor, coolant shortage indicator sender, washer fluid level warning lamp, brake pad wear sender, warning lamps | 656 |
| 19. Oil pressure switch, dash panel insert, warning lamps | 657 |
| 20. Dash panel insert, data bus diagnostic interface, warning lamps | 658 |
| 21. Data bus diagnostic interface, self-diagnosis connection | 659 |
| 22. Driver and front passenger side exterior mirror turn signal bulb, driver and front passenger door control unit | 660 |
| 23. Brake light switch, reversing light switch | 661 |
| 071 - Basic equipment | 662-684 |
| 1. Basic equipment | 662 |
| 2. Onboard supply control unit, left headlight, front left side marker light bulb | 663 |
| 3. Onboard supply control unit, right headlight, front right side marker light bulb | 664 |
| 4. Switches and instruments illumination regulator, headlight range control regulator, left and right fog light bulb | 665 |
| 5. Light switch, fog light switch, rear fog light switch | 666 |
| 6. Left and right tail light, rear left fog light, rear turn signal, brake light, rear left and right side marker bulb | 667 |
| 7. Right reversing light, high level brake light bulb, number plate light | 668 |
| 8. Steering column electronics control unit, wiper switch, washer pump switch, intermittent wiper regulator | 669 |
| 9. Steering column electronics control unit, cruise control system switch, multifunction display call-up button, cruise control system (CCS) button, steering angle sender | 670 |
| 10. Ignition/starter switch, turn signal switch, headlight dipper/flasher hand operated switch, coil connector, horn plate, turn signal relay, ignition key removal lock | 671 |
| 11. Dual tone horn relay, treble tone horn, bass tone horn, rain and light detection sensor, windscreen wiper motor | 672 |
| 12. Windscreen washer pump, double washer pump relay 1, double washer pump relay 2, front left and right footwell illumination bulbs | 673 |
| 13. Fuel tank filler flap locking motor, luggage compartment light, glove compartment light, convenience system central control unit | 674 |
| 14. Heated rear window, interior light, ambient lighting, heated rear window relay | 675 |
| 15. Driver vanity mirror contact switch, illuminated vanity mirror, cigarette lighter, 12 V socket, hazard warning light switch | 676 |
| 16. X-contact relief relay, air conditioning system control unit, fresh air blower switch, fresh air blower, fresh air blower series resistor with overheating fuse | 677 |
| 17. Dash panel insert, handbrake warning switch, brake fluid level warning contact, immobilizer reader coil, warning lamps | 678 |
| 18. Ambient temperature sensor, coolant shortage indicator sender, washer fluid level warning lamp, brake pad wear sender, warning lamps | 679 |
| 19. Oil pressure switch, dash panel insert, warning lamps | 680 |
| 20. Dash panel insert, data bus diagnostic interface, warning lamps | 681 |
| 21. Data bus diagnostic interface, self-diagnosis connection | 682 |
| 22. Driver and front passenger side exterior mirror turn signal bulb, driver and front passenger door control unit | 683 |
| 23. Brake light switch, reversing light switch, spray jet heater element, bonnet contact switch | 684 |
| 072 - Convenience system | 685-698 |
| 1. Convenience system | 685 |
| 2. Driver door control unit, window regulator switch in driver door | 686 |
| 3. Driver door control unit, central switch for window regulators in driver door, interior locking button, central locking deadlock function warning lamp, interior locking warning lamp | 687 |
| 4. Driver door control unit, mirror adjustment switch, exterior mirror heater button, fold-in mirror switch, key operated switch to block release of rear lid remote, rear lid remote release button, fuel tank flap release button | 688 |
| 5. Driver door control unit, electric exterior mirror on driver side with mirror adjustment, automatically dimming and heated, fold-in mirrors, entrance light, turn signal light | 689 |
| 6. Driver door control unit, driver side central locking lock unit, driver door contact switch | 690 |
| 7. Front passenger door control unit, window regulator switch in front passenger door, front passenger side central locking lock unit, front passenger door contact switch, microswitch for window lowering | 691 |
| 8. Front passenger door control unit, front passenger side electric exterior mirror with mirror adjustment, fold-in mirror, entry light, front passenger side interior locking button | 692 |

| | |
|---|---------|
| 9. Interior monitoring deactivation switch, convenience system central control unit, fuse, alarm horn, alarm horn relay | 693 |
| 10. Rear lid lock unit, luggage compartment light switch, rear lid handle release button, tank filler flap locking motor | 694 |
| 11. Interior monitor send and receive module 1 and 2, alarm horn, vehicle inclination sender | 695 |
| 12. Convertible roof actuation control unit, fuses, rear left and right door control unit, data bus diagnosis interface | 696 |
| 13. Sliding sunroof adjustment control unit, button to operate convertible roof and sliding sunroof, convertible roof actuation control unit, fuses | 697 |
| 14. Bonnet contact switch, automatic anti-dazzle interior mirror | 698 |
| 073 - Parking aid (PDC) | 699-702 |
| 1. Parking aid (PDC) | 699 |
| 2. Parking aid control unit, rear parking aid warning buzzer, self-diagnosis connection | 700 |
| 3. Parking aid control unit, rear left parking aid sender, rear centre left parking aid sender | 701 |
| 4. Parking aid control unit, rear centre right parking aid sender, rear right parking aid sender | 702 |
| 074 - CAN and LIN bus network | 703-709 |
| 1. CAN and LIN bus network | 703 |
| 2. Fuse, data bus diagnostic interface, self-diagnosis connection | 704 |
| 3. Data bus diagnostic interface, self-diagnosis connection, onboard supply control unit, cornering light and headlight range control unit, control unit in dash panel insert | 705 |
| 4. ABS control unit, airbag, auxiliary heater, telephone transmitter and receiver unit, power steering, control unit with display for radio and navigation, radio, amplifier, satellite digital radio tuner | 706 |
| 5. Magnetic field sender for compass, control unit for convertible roof actuation, trailer detector control unit, control unit with display for TV, radio navigation, control unit for steering column electronics, control unit for selector lever sensors | 707 |
| 6. Auxiliary air heater control unit, convenience system central control unit, interior monitor send and receive module 1, vehicle inclination sender, alarm horn | 708 |
| 7. Climatronic control unit, air conditioning control unit, driver door control unit, front passenger door control unit, rear door control units, parking aid control unit | 709 |
| 075 - Climatronic | 710-716 |
| 1. Climatronic | 710 |
| 2. Climatronic control unit, high-pressure sender, fuses | 711 |
| 3. Climatronic control unit, sunlight penetration photosensor, left and right vent temperature sender, evaporator output temperature sender | 712 |
| 4. Left temperature flap control motor, potentiometer, left and right footwell vent temperature senders | 713 |
| 5. Defroster flap control motor, right temperature flap control motor, defroster flap control motor potentiometer, potentiometer for right temperature flap control motor | 714 |
| 6. Climatronic control unit, potentiometer for air flow flap control motor, potentiometer for centre flap control motor, centre flap control motor, air flow flap control motor | 715 |
| 7. Climatronic control unit, fresh air blower control unit, compressor regulating valve, air conditioning system compressor regulating valve, fresh air blower | 716 |
| 076 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation programme (ESP) | 717-724 |
| 1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation programme (ESP) | 717 |
| 2. Brake light switch, ABS control unit, fuses | 718 |
| 3. ABS control unit, speed sensor | 719 |
| 4. ABS control unit, TCS and ESP button, ESP sensor unit, ESP and TCS warning lamp 2 | 720 |
| 5. ABS control unit, tyre pressure monitor display button, brake pressure sender 1 | 721 |
| 6. Steering angle sender, steering column electronics control unit, onboard supply control unit | 722 |
| 7. Control unit in dash panel insert, data bus diagnostic interface, tyre pressure monitor warning lamp, self-diagnosis connection | 723 |
| 8. Handbrake warning switch, brake fluid level warning contact, front left brake pad wear sender, control unit in dash panel insert, warning lamps | 724 |
| 077 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation programme (ESP) | 725-732 |
| 1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation programme (ESP) | 725 |
| 2. Brake light switch, ABS control unit, fuses | 726 |
| 3. ABS control unit, speed sensor | 727 |
| 4. ABS control unit, TCS and ESP button, ESP sensor unit, ESP and TCS warning lamp 2 | 728 |
| 5. ABS control unit, tyre pressure monitor display button, brake pressure sender 1 | 729 |
| 6. Steering angle sender, steering column electronics control unit, onboard supply control unit | 730 |
| 7. Control unit in dash panel insert. data bus diagnostic interface. tyre pressure monitor warning | 731 |

| | |
|---|---------|
| lamp, self-diagnosis connection | |
| 8. Handbrake warning switch, brake fluid level warning contact, front left brake pad wear sender, control unit in dash panel insert, warning lamps | 732 |
| 078 - 1.4 I - Motronic/90 kW, engine code CAXA | 733-750 |
| 1. 1.4 I - Motronic/90 kW, engine code CAXA | 733 |
| 2. Battery, alternator, starter, fuses | 734 |
| 3. Onboard supply control unit, terminal 15 voltage supply relay 2, terminal 50 voltage supply relay, fuses | 735 |
| 4. Fuel gauge sender, fuel pump, onboard supply control unit, engine components current supply relay, fuel pump control unit | 736 |
| 5. Motronic current supply relay, fuses | 737 |
| 6. Engine control unit | 738 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 739 |
| 8. Engine control unit, throttle valve module, fuel pressure sender, coolant circulation pump | 740 |
| 9. Hall sender, intake air temperature sender, intake manifold pressure sender, knock sensor, engine control unit | 741 |
| 10. Engine speed sender, charge air pressure sender, coolant temperature sender, intake air temperature sender 2, engine control unit | 742 |
| 11. Injectors, engine control unit | 743 |
| 12. Accelerator position sender, accelerator position sender 2, engine control unit, charge pressure control solenoid valve | 744 |
| 13. Coolant temperature display sender, activated charcoal filter solenoid valve 1, inlet camshaft control valve 1, turbocharger air recirculation valve, fuel pressure regulating valve | 745 |
| 14. Lambda probe, Lambda probe heater after catalytic converter, engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter | 746 |
| 15. Brake light switch, brake pedal switch, onboard supply control unit, engine control unit | 747 |
| 16. Clutch position sender, onboard supply control unit, engine control unit | 748 |
| 17. Multifunction display, control unit in dash panel insert, onboard supply control unit, data bus diagnostic interface | 749 |
| 18. Oil pressure switch, fuel gauge, charge air pressure gauge, coolant shortage indicator sender, oil level and oil temperature sender, control unit in dash panel insert | 750 |
| 079 - Multimedia socket MEDIA-IN | 751-752 |
| 1. Multimedia socket MEDIA-IN | 751 |
| 2. Multimedia control unit | 752 |
| 080 - Radio navigation system Midline "RNS 510" | 753-757 |
| 1. Radio navigation system Midline "RNS 510" | 753 |
| 2. Control unit with display for radio and navigation system, CD changer | 754 |
| 3. Control unit with display for radio and navigation system, aerial connection, front loudspeaker | 755 |
| 4. Control unit with display for radio and navigation system, rear left and right loudspeaker | 756 |
| 5. Aerials, control unit with display for radio and navigation system | 757 |
| 081 - Universal cellphone preparation (UHV) - Premium Light | 758-761 |
| 1. Universal cellphone preparation (UHV) - Premium Light | 758 |
| 2. Control unit for cellphone operating electronics, telephone microphone, telephone aerial, emergency call button | 759 |
| 3. Cellphone operating electronics control unit, control unit with display for radio and navigation system | 760 |
| 4. Data bus diagnosis interface, control unit in dash panel insert, multifunction display, multifunction buttons on left in steering wheel | 761 |
| 082 - 2.0 I - 147 kW, engine code CCTA | 762-778 |
| 1. 2.0 I - 147 kW, engine code CCTA | 762 |
| 2. Battery, alternator, starter | 763 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2 | 764 |
| 4. Engine component current supply relay, fuel pump control unit, fuel gauge sender, fuel pump | 765 |
| 5. Motronic current supply relay | 766 |
| 6. Engine control unit, additional coolant pump relay, coolant circulation pump | 767 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 768 |
| 8. Engine control unit, throttle valve module, intake air temperature sender, coolant temperature sender | 769 |
| 9. Engine control unit, knock sensor 1, Hall sender, charge pressure sender | 770 |
| 10. Engine control unit, intake manifold flap potentiometer, engine speed sender, injectors | 771 |
| 11. Turbocharger air recirculation valve, activated charcoal filter solenoid valve 1, charge pressure control solenoid valve, valve for intake manifold flap and camshaft control, fuel pressure regulating valve | 772 |
| 12. Engine control unit, Lambda probe, accelerator position sender | 773 |
| 13. Engine control unit, radiator outlet coolant temperature sender, lambda probe, air mass meter | 774 |
| 14. Engine control unit, brake light switch, fuel system diagnostic pump | 775 |

| | |
|---|---------|
| 15. Engine control unit, clutch position sender | 776 |
| 16. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 777 |
| 17. Dash panel insert, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 778 |
| 083 - 2.0 l - 147 kW, engine code CBFA | 779-797 |
| 1. 2.0 l - 147 kW, engine code CBFA | 779 |
| 2. Battery, alternator, starter | 780 |
| 3. Terminal 50 voltage supply relay, terminal 15 voltage supply relay 2 | 781 |
| 4. Engine component current supply relay, fuel pump control unit, fuel gauge sender, fuel pump, secondary air pump | 782 |
| 5. Motronic current supply relay | 783 |
| 6. Engine control unit, additional coolant pump relay, coolant circulation pump | 784 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 785 |
| 8. Engine control unit, throttle valve module, intake air temperature sender, coolant temperature sender | 786 |
| 9. Engine control unit, knock sensor 1, Hall sender, charge pressure sender | 787 |
| 10. Engine control unit, intake manifold flap potentiometer, injectors | 788 |
| 11. Engine control unit, engine speed sender, sender for secondary air pressure, secondary air inlet valve | 789 |
| 12. Turbocharger air recirculation valve, activated charcoal filter solenoid valve 1, charge pressure control solenoid valve, valve for intake manifold flap and camshaft control, fuel pressure regulating valve | 790 |
| 13. Engine control unit, Lambda probe, accelerator position sender | 791 |
| 14. Engine control unit, Lambda probe, Lambda probe 2 | 792 |
| 15. Engine control unit, air mass meter, radiator identification sensor, fuel system diagnosis pump | 793 |
| 16. Engine control unit, brake light switch, radiator outlet coolant temperature sender | 794 |
| 17. Engine control unit, clutch position sender | 795 |
| 18. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, electronic power control fault lamp, multifunction display | 796 |
| 19. Dash panel insert, exhaust emissions warning lamp, fuel gauge, coolant temperature gauge, oil pressure switch, oil pressure warning lamp, warning buzzer | 797 |
| 084 - Basic equipment | 798-820 |
| 1. Basic equipment | 798 |
| 2. Onboard supply control unit, left headlight, front left side marker bulb | 799 |
| 3. Onboard supply control unit, right headlight, front right side marker bulb | 800 |
| 4. Switches and instruments illumination regulator, headlight range control regulator, left and right fog light bulb | 801 |
| 5. Light switch, fog light switch, rear fog light switch | 802 |
| 6. Left and right tail light, rear left fog light, rear turn signal, brake light, rear left and right side marker bulb | 803 |
| 7. Right reversing light, high level brake light bulb, licence plate light | 804 |
| 8. Steering column electronics control unit, wiper switch, washer pump switch, intermittent wiper regulator | 805 |
| 9. Steering column electronics control unit, cruise control system switch, multifunction display call-up button, cruise control system (CCS) button, steering angle sender | 806 |
| 10. Ignition/starter switch, turn signal switch, headlight dipper and flasher switch, coil connector, horn plate, ignition key withdrawal lock solenoid | 807 |
| 11. Dual tone horn relay, treble horn, bass horn, rain and light sensor, wiper motor | 808 |
| 12. Washer pump, washer pump relay, front left and right footwell lighting bulbs | 809 |
| 13. Tank filler flap locking motor, luggage compartment light, glove compartment light, convenience system central control unit | 810 |
| 14. Heated rear window, interior light, ambient lighting, heated rear window relay | 811 |
| 15. Driver vanity mirror contact switch, illuminated vanity mirror, cigarette lighter, 12 V socket, hazard warning light switch | 812 |
| 16. X-contact relief relay, air conditioning system control unit, fresh air blower switch, fresh air blower, fresh air blower series resistor with overheating fuse | 813 |
| 17. Dash panel insert, handbrake warning switch, brake fluid level warning contact, immobilizer reader coil, warning lamps | 814 |
| 18. Ambient temperature sensor, coolant shortage indicator sender, washer fluid level warning lamp, brake pad wear sender, warning lamps | 815 |
| 19. Oil pressure switch, dash panel insert, warning lamps | 816 |
| 20. Dash panel insert, data bus diagnostic interface, warning lamps | 817 |
| 21. Data bus diagnostic interface, self-diagnosis connection | 818 |
| 22. Driver and front passenger side exterior mirror turn signal bulb, driver and front passenger door control unit | 819 |

| | |
|---|---------|
| 23. Brake light switch, reversing light switch, heater element for spray jet, bonnet contact switch | 820 |
| 085 - Convenience system | 821-834 |
| 1. Convenience system | 821 |
| 2. Driver door control unit, window regulator switch in driver door | 822 |
| 3. Driver door control unit, central switch for window regulators in driver door, interior locking button, central locking deadlock function warning lamp, interior locking warning lamp | 823 |
| 4. Driver door control unit, mirror adjustment switch, exterior mirror heater button, fold-in mirror switch, key operated switch to block release of rear lid remote, rear lid remote release button, fuel tank flap release button | 824 |
| 5. Driver door control unit, electric exterior mirror on driver side with mirror adjustment, automatically dimming and heated, fold-in mirrors, entrance light, turn signal light | 825 |
| 6. Driver door control unit, driver side central locking lock unit, driver door contact switch | 826 |
| 7. Front passenger door control unit, window regulator switch in front passenger door, front passenger side central locking lock unit, front passenger door contact switch, microswitch for window lowering | 827 |
| 8. Front passenger door control unit, front passenger side electric exterior mirror with mirror adjustment, fold-in mirror, entry light, front passenger side interior locking button | 828 |
| 9. Interior monitoring deactivation switch, convenience system central control unit, fuse, alarm horn, alarm horn relay | 829 |
| 10. Rear lid lock unit, luggage compartment light switch, rear lid handle release button, tank filler flap locking motor | 830 |
| 11. Interior monitor send and receive module 1 and 2, alarm horn, vehicle inclination sender | 831 |
| 12. Convertible roof actuation control unit, fuses, rear left and right door control unit, data bus diagnosis interface | 832 |
| 13. Sliding sunroof adjustment control unit, button to operate convertible roof and sliding sunroof, convertible roof actuation control unit, fuses | 833 |
| 14. Bonnet contact switch, automatic anti-dazzle interior mirror | 834 |
| 089 - 2.0 l/103 kW - turbo diesel with common rail, engine code CBAB | 835-851 |
| 1. 2.0 l/103 kW - turbo diesel with common rail, engine code CBAB | 835 |
| 2. Starter, battery, alternator, fuses | 836 |
| 3. Terminal 15 voltage supply relay 2, terminal 50 voltage supply relay, fuses | 837 |
| 4. Fuel gauge sender, fuel system pressurisation pump, fuel pump relay, electric fuel pump 2 relay, fuel pump 2 | 838 |
| 5. Terminal 30 voltage supply relay, fuses | 839 |
| 6. Engine control unit | 840 |
| 7. Exhaust gas pressure sensor 1, Lambda probe, engine control unit, fuel pressure regulating valve, fuel metering valve | 841 |
| 8. Exhaust gas temperature sender, Hall sender, radiator outlet coolant temperature sender, engine control unit | 842 |
| 9. Intake air temperature sender, fuel temperature sender, coolant temperature sender, charge air pressure sender, air mass meter, engine speed sender, engine control unit | 843 |
| 10. Exhaust gas recirculation valve, throttle valve potentiometer, throttle valve module, intake manifold flap motor, exhaust gas recirculation potentiometer, intake manifold flap potentiometer | 844 |
| 11. Injectors, fuel pressure sender, engine control unit | 845 |
| 12. Accelerator position sender, accelerator position sender 2, charge pressure control solenoid valve, engine control unit, driving program switch, exhaust gas recirculation cooler changeover valve | 846 |
| 13. Brake light switch, engine control unit, position sender for charge pressure positioner | 847 |
| 14. Clutch position sender, engine control unit | 848 |
| 15. Glow plugs for engine, coolant circulation pump 2, automatic glow period control unit | 849 |
| 16. Data bus diagnosis interface, electronic power control fault lamp, glow period warning lamp, dash panel insert | 850 |
| 17. Exhaust emissions warning lamp, coolant shortage indicator sender, oil pressure warning lamp, fuel gauge, charge air pressure gauge, oil pressure switch, dash panel insert | 851 |
| 091 - Parking aid (PDC) | 852-855 |
| 1. Parking aid (PDC) | 852 |
| 2. Parking aid control unit, rear parking aid warning buzzer, self-diagnosis connection | 853 |
| 3. Parking aid control unit, rear left parking aid sender, rear centre left parking aid sender | 854 |
| 4. Parking aid control unit, rear centre right parking aid sender, rear right parking aid sender | 855 |
| 092 - Radio system "Premium 7" with satellite digital radio tuner SDARS | 856-860 |
| 1. Radio system "Premium 7" with satellite digital radio tuner SDARS | 856 |
| 2. Voltage supply, radio, CD changer, connection for external audio sources | 857 |
| 3. Radio, satellite digital radio tuner, front left and right treble loudspeaker, front left and right bass loudspeaker | 858 |
| 4. Radio, rear left and right loudspeaker | 859 |
| 5. Radio. aerials | 860 |

| | |
|--|---------|
| 093 - Radio navigation system RNS 510 | 861-865 |
| 1. Radio navigation system RNS 510 | 861 |
| 2. Voltage supply, control unit with display for radio and navigation system, CD changer, connection for external audio sources | 862 |
| 3. Control unit with display for radio and navigation, satellite digital radio tuner, front left and right treble loudspeakers, front left and right bass loudspeakers | 863 |
| 4. Control unit with display for radio and navigation system, rear left and right loudspeaker | 864 |
| 5. Control unit with display for radio and navigation system, aerials | 865 |
| 094 - Radio system RCD 310/RCD 510 | 866-870 |
| 1. Radio system RCD 310/RCD 510 | 866 |
| 2. Voltage supply, radio, CD changer, connection for external audio sources | 867 |
| 3. Radio, front left and right treble loudspeaker, front left and right bass loudspeaker | 868 |
| 4. Radio, rear left and right loudspeaker | 869 |
| 5. Radio, aerials | 870 |
| 096 - Convenience system | 871-884 |
| 1. Convenience system | 871 |
| 2. Window regulator switch in driver door, driver door control unit | 872 |
| 3. Central switch for window regulators in driver door, interior locking button, driver door control unit, central locking deadlock function warning lamp, interior locking warning lamp | 873 |
| 4. Driver door control unit, mirror adjustment switch, exterior mirror heater button, fold-in mirror switch, rear lid remote release button, fuel tank flap release button | 874 |
| 5. Driver door control unit, electric exterior mirror on driver side with mirror adjustment, automatically dimming and heated, power up mirrors, entrance light, turn signal light | 875 |
| 6. Driver door control unit, driver side central locking lock unit, driver door contact switch | 876 |
| 7. Front passenger door control unit, window regulator switch in front passenger door, front passenger side central locking lock unit, front passenger door contact switch | 877 |
| 8. Front passenger door control unit, front passenger side electric exterior mirror with mirror adjustment, fold-in mirror, entry light, front passenger side interior locking button | 878 |
| 9. Interior monitoring deactivation switch, convenience system central control unit, fuse, alarm horn, alarm horn relay | 879 |
| 10. Rear lid lock unit, luggage compartment light switch, rear lid handle release button, tank filler flap locking motor | 880 |
| 11. Interior monitor send and receive module 1 and 2, alarm horn, vehicle inclination sender | 881 |
| 12. Convertible roof actuation control unit, fuses, rear left and right door control unit, data bus diagnosis interface | 882 |
| 13. Sliding sunroof adjustment control unit, convertible roof actuation and sunroof button, convertible roof actuation control unit | 883 |
| 14. Bonnet contact switch, automatic anti-dazzle interior mirror | 884 |
| 098 - 2.0 l/147 kW - Motronic, engine code CAWB | 885-901 |
| 1. 2.0 l/147 kW - Motronic, engine code CAWB | 885 |
| 2. Battery, alternator, starter, fuses | 886 |
| 3. Onboard supply control unit, terminal 15 voltage supply relay 2, terminal 50 voltage supply relay, fuses | 887 |
| 4. Engine component current supply relay, fuel pump control unit, fuel gauge sender, fuel pump | 888 |
| 5. Motronic current supply relay | 889 |
| 6. Engine control unit, additional coolant pump relay, coolant circulation pump | 890 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 891 |
| 8. Engine control unit, throttle valve module, intake air temperature sender, coolant temperature sender | 892 |
| 9. Engine control unit, knock sensor 1, Hall sender, charge pressure sender | 893 |
| 10. Engine control unit, intake manifold flap potentiometer, engine speed sender, injectors | 894 |
| 11. Turbocharger air recirculation valve, activated charcoal filter solenoid valve 1, charge pressure control solenoid valve, valve for intake manifold flap and camshaft control | 895 |
| 12. Accelerator position sender, engine control unit, fuel pressure regulating valve | 896 |
| 13. Engine control unit, radiator outlet coolant temperature sender, Lambda probe, air mass meter | 897 |
| 14. Brake light switch, onboard supply control unit, engine control unit | 898 |
| 15. Clutch position sender, onboard supply control unit, engine control unit | 899 |
| 16. Multifunction display, control unit in dash panel insert, onboard supply control unit, data bus diagnostic interface | 900 |
| 17. Oil pressure switch, fuel gauge, charge air pressure gauge, coolant shortage indicator sender, oil level and oil temperature sender, control unit in dash panel insert | 901 |
| 101 - 1.4 l/118 kW - Motronic, engine code CAVD | 902-919 |
| 1. 1.4 l/118 kW - Motronic, engine code CAVD | 902 |
| 2. Battery, alternator, starter, fuses | 903 |
| 3. Onboard supply control unit, terminal 15 voltage supply relay 2, terminal 50 voltage supply relay, fuses | 904 |

| | |
|--|---------|
| 4. Fuel gauge sender, fuel pump, onboard supply control unit, engine components current supply relay, fuel pump control unit | 905 |
| 5. Motronic current supply relay, fuses | 906 |
| 6. Engine control unit, additional coolant pump relay, coolant circulation pump | 907 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 908 |
| 8. Knock sensor 1, throttle valve module, fuel pressure sender, engine control unit | 909 |
| 9. Intake air temperature sender, intake manifold pressure sender, intake manifold flap potentiometer, intake air temperature sender 3, intake manifold pressure sender 3, engine control unit | 910 |
| 10. Engine speed sender, charge air pressure sender, Hall sender, intake air temperature sender 2, engine control unit | 911 |
| 11. Injectors, engine control unit | 912 |
| 12. Accelerator position sender, accelerator position sender 2, engine control unit, charge pressure control solenoid valve | 913 |
| 13. Coolant temperature sender, activated charcoal filter solenoid valve 1, inlet camshaft control valve 1, turbocharger air recirculation valve, fuel pressure regulating valve | 914 |
| 14. Lambda probe, Lambda probe heater after catalytic converter, engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter | 915 |
| 15. Brake light switch, brake pedal switch, radiator outlet coolant temperature sender, onboard supply control unit, engine control unit | 916 |
| 16. Clutch position sender, onboard supply control unit, engine control unit | 917 |
| 17. Multifunction display, control unit in dash panel insert, onboard supply control unit, data bus diagnostic interface | 918 |
| 18. Oil pressure switch, fuel gauge, charge air pressure gauge, coolant shortage indicator sender, oil level and oil temperature sender, control unit in dash panel insert | 919 |
| 102 - 1.4 l/90 kW - Motronic, engine code CAXA | 920-937 |
| 1. 1.4 l/90 kW - Motronic, engine code CAXA | 920 |
| 2. Battery, alternator, starter, fuses | 921 |
| 3. Onboard supply control unit, terminal 15 voltage supply relay 2, terminal 50 voltage supply relay, fuses | 922 |
| 4. Fuel gauge sender, fuel pump, onboard supply control unit, engine components current supply relay, fuel pump control unit | 923 |
| 5. Motronic current supply relay, fuses | 924 |
| 6. Engine control unit | 925 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 926 |
| 8. Engine control unit, throttle valve module, fuel pressure sender, coolant circulation pump | 927 |
| 9. Hall sender, intake air temperature sender, intake manifold pressure sender, knock sensor, engine control unit | 928 |
| 10. Engine speed sender, charge air pressure sender, coolant temperature sender, intake air temperature sender 2, engine control unit | 929 |
| 11. Engine control unit, injectors | 930 |
| 12. Accelerator position sender, accelerator position sender 2, engine control unit, charge pressure control solenoid valve | 931 |
| 13. Coolant temperature display sender, activated charcoal filter solenoid valve 1, inlet camshaft control valve 1, turbocharger air recirculation valve, fuel pressure regulating valve | 932 |
| 14. Lambda probe, Lambda probe heater after catalytic converter, engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter | 933 |
| 15. Brake light switch, brake pedal switch, onboard supply control unit, engine control unit | 934 |
| 16. Clutch position sender, onboard supply control unit, engine control unit | 935 |
| 17. Multifunction display, control unit in dash panel insert, onboard supply control unit, data bus diagnostic interface | 936 |
| 18. Oil pressure switch, fuel gauge, charge air pressure gauge, coolant shortage indicator sender, oil level and oil temperature sender, control unit in dash panel insert | 937 |
| 105 - 2.0 l/147 kW - Motronic, engine code CCTA | 938-954 |
| 1. 2.0 l/147 kW - Motronic, engine code CCTA | 938 |
| 2. Battery, alternator, starter, fuses | 939 |
| 3. Onboard supply control unit, terminal 15 voltage supply relay 2, terminal 50 voltage supply relay, fuses | 940 |
| 4. Engine component current supply relay, fuel pump control unit, fuel gauge sender, fuel pump | 941 |
| 5. Motronic current supply relay | 942 |
| 6. Engine control unit, additional coolant pump relay, coolant circulation pump | 943 |
| 7. Engine control unit, ignition coils with output stage, spark plugs | 944 |
| 8. Engine control unit, throttle valve module, intake air temperature sender, coolant temperature sender | 945 |
| 9. Engine control unit, knock sensor 1, Hall sender, charge pressure sender | 946 |
| 10. Engine control unit, intake manifold flap potentiometer, engine speed sender, injectors | 947 |

| | |
|---|---------|
| 11. Turbocharger air recirculation valve, activated charcoal filter solenoid valve 1, charge pressure control solenoid valve, valve for intake manifold flap and camshaft control | 948 |
| 12. Lambda probe, accelerator position sender, engine control unit, Lambda probe heater | 949 |
| 13. Air mass meter, radiator outlet coolant temperature sender, Lambda probe after catalytic converter, engine control unit, Lambda probe 1 heater after catalytic converter | 950 |
| 14. Brake light switch, onboard supply control unit, engine control unit, fuel system diagnostic pump | 951 |
| 15. Clutch position sender, onboard supply control unit, engine control unit | 952 |
| 16. Multifunction display, control unit in dash panel insert, onboard supply control unit, data bus diagnostic interface | 953 |
| 17. Oil pressure switch, fuel gauge, charge air pressure gauge, coolant shortage indicator sender, oil level and oil temperature sender, control unit in dash panel insert | 954 |
| 107 - Dual clutch gearbox 02E | 955-962 |
| 1. Dual clutch gearbox 02E | 955 |
| 2. Fuses | 956 |
| 3. Terminal 15 voltage supply relay 2, mechatronics for dual clutch gearbox, fuses | 957 |
| 4. Mechatronics for dual clutch gearbox, hydraulic pressure sender, gearbox input speed sender, solenoid valves, clutch temperature sender | 958 |
| 5. Mechatronics for dual clutch gearbox, selector lever locked in position P switch, selector lever lock solenoid, selector lever sensors control unit, pressure regulating valves | 959 |
| 6. Mechatronics for dual clutch gearbox, selector lever lock solenoid, selector lever sensors control unit, selector lever position display, gear selector movement sensors, reversing light switch | 960 |
| 7. Mechatronics for dual clutch gearbox, input shaft speed sender, gearbox output speed sender, gearbox oil temperature sender, temperature sender in control unit | 961 |
| 8. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, multifunction display | 962 |
| 108 - Convertible top control, electrohydraulic | 963-970 |
| 1. Convertible top control, electrohydraulic | 963 |
| 2. Convertible roof actuation control unit, fuses, rear left and right door control unit | 964 |
| 3. Convertible roof actuation switch and sunroof, convertible roof actuation switch, power latching control unit, power latching motor | 965 |
| 4. Luggage cover contact switch, front sender for position of left and right roof member, convertible roof actuation control unit | 966 |
| 5. Central switch for window regulators in driver door, left sender for rear window frame locked, sender for rear window frame open, convertible roof actuation control unit | 967 |
| 6. Sender for left and right roof member locked, right sender for rear window frame locked, sender for roof stowed, convertible roof actuation control unit | 968 |
| 7. Left and right sender for rear shelf locked, sender for left and right roof member flap open, convertible roof actuation control unit | 969 |
| 8. Convertible roof actuation hydraulic pump, power operated convertible roof valves, hydraulic pump temperature sender, convertible roof actuation control unit, sliding roof control unit | 970 |
| 109 - Radio navigation system RNS 300 | 971-975 |
| 1. Radio navigation system RNS 300 | 971 |
| 2. Voltage supply, control unit with display for radio and navigation system, CD changer, connection for external audio sources | 972 |
| 3. Control unit with display for radio and navigation system, digital radio tuner, front left and right treble loudspeakers, front left and right bass loudspeakers | 973 |
| 4. Control unit with display for radio and navigation system, rear left and right loudspeaker | 974 |
| 5. Control unit with display for radio and navigation system, aerials | 975 |
| 110 - Radio navigation system Midline RNS 510 | 976-980 |
| 1. Radio navigation system Midline RNS 510 | 976 |
| 2. Voltage supply, control unit with display for radio and navigation system, CD changer, connection for external audio sources | 977 |
| 3. Control unit with display for radio and navigation system, digital radio tuner, front left and right treble loudspeakers, front left and right bass loudspeakers | 978 |
| 4. Control unit with display for radio and navigation system, rear left and right loudspeaker | 979 |
| 5. Control unit with display for radio and navigation system, aerials | 980 |
| 112 - Universal preparation for mobile telephone - Premium | 981-983 |
| 1. Universal preparation for mobile telephone - Premium | 981 |
| 2. Emergency assistance call button, telephone transmitter and receiver unit | 982 |
| 3. Control unit with display for radio and navigation system, telephone transmitter and receiver unit, telephone microphone | 983 |
| 113 - Radiator fan, infinitely variable speed single or dual fan system for radiator | 984-986 |
| 1. Radiator fan, infinitely variable speed single or dual fan system for radiator | 984 |
| 2. Terminal 30 voltage supply relay, battery | 985 |

| | |
|---|---------|
| 3. Radiator fan control unit, radiator fan | 986 |
| 134 - Multifunction steering wheel | 987-992 |
| 1. Multifunction steering wheel | 987 |
| 2. Steering column electronics control unit | 988 |
| 3. Steering column electronics control unit, multifunction steering wheel control unit, cruise control system switch, igniter for driver airbag, horn plate | 989 |
| 4. Control unit for steering column electronics, control unit for multifunction steering wheel, ignition/starter switch, multifunction buttons in steering wheel | 990 |
| 5. Multifunction steering wheel control unit, multifunction buttons on right in steering wheel, Tiptronic switch in steering wheel | 991 |
| 6. Dash panel insert, data bus diagnostic interface, self-diagnosis connection | 992 |
| 135 - Garage door opener | 993-994 |
| 1. Garage door opener | 993 |
| 2. Garage door operating unit, garage door opener button, garage door opener warning lamp | 994 |
| 136 - Radio navigation system RNS 310 | 995-999 |
| 1. Radio navigation system RNS 310 | 995 |
| 2. Voltage supply, control unit with display for radio and navigation system, CD changer, connection for external audio sources | 996 |
| 3. Control unit with display for radio and navigation system, digital radio tuner, front left and right treble loudspeakers, front left and right bass loudspeakers | 997 |
| 4. Control unit with display for radio and navigation system, rear left and right loudspeaker | 998 |
| 5. Control unit with display for radio and navigation system, aerials | 999 |