



Contents

27 - Starter, current supply, CCS	1
1 Battery A	1
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery terminal connection	1
2 Checking battery	2
3 Disconnecting and reconnecting battery	3
3.1 Assembly overview	3
3.2 Disconnecting battery	4
3.3 Reconnecting battery	5
4 Removing and installing battery	7
4.1 Assembly overview	7
4.2 Removing and installing battery	7
5 Starter, vehicles with manual gearbox	10
5.1 Checking starter B	10
5.2 Starter, vehicles with 1.4 l, 90 kW TSI engine and manual gearbox MQ200-6F	10
5.3 Starter, vehicles with 1.4 l, 118 kW TSI engine and manual gearbox MQ250-6F	13
5.4 Starter, vehicles with 2.0 l TSI engine, 147 kW or 155 kW, manual gearbox MQ250-6F	16
5.5 Starter, vehicles with 2.0 l TDI engine, 103 kW, manual gearbox MQ350	20
6 Starter, vehicles with dual clutch gearbox (DSG)	24
6.1 Starter, 2.0 l TSI engine, 147 kW or 155 kW, dual clutch gearbox DQ250-6F	24
6.2 Starter, 2.0 l TDI engine with 103 kW, dual clutch gearbox DQ250-6F	28
7 Alternator	32
7.1 Securing B+ (battery positive) wire to alternator	32
7.2 Checking alternator -C-	32
7.3 Checking poly V-belt	32
7.4 Voltage regulator for alternator	33
7.5 Alternator, 1.4 l, 90 kW TSI engine	35
7.6 Alternator, 1.4 l, 118 kW TSI engine	38
7.7 Alternator, 2.0 l TSI engine with 147 kW or 155 kW	43
7.8 Alternator, 2.0 l TDI engine with 100 kW or 103 kW	47
7.9 Removing and installing poly V-belt pulley on alternator	52
8 Cruise control system (CCS)	57
9 Start/stop system	58
9.1 General description	58
9.2 Start/stop operation switch E693	59
9.3 Voltage stabiliser J532	59
90 - Gauges, instruments	61
1 Dash panel insert	61
1.1 General description	61
1.2 Renewing dash panel insert	61
1.3 Removing and installing dash panel insert	62
1.4 Description of back of dash panel insert	63
1.5 Pin assignment of connectors on dash panel insert	63
1.6 Warning lamp symbols in dash panel insert	63
2 Service interval display	66
2.1 Resetting service interval display	66
92 - Windscreen wash/wipe system	67
1 Windscreen wiper system	67



1.1	General description	67
1.2	Deactivating APP function of wiper motor	67
1.3	Assembly overview - windscreen wiper system	68
1.4	Removing and installing wiper arms	69
1.5	Removing and installing windscreen wiper system	70
1.6	Removing wiper motor from wiper frame and installing	72
1.7	Adjusting wiper blade park position	74
1.8	Removing and installing joint-free wipers	75
1.9	Rain and light sensor G397	77
2	Windscreen washer system	82
2.1	General description	82
2.2	Assembly overview, windscreen washer system	82
2.3	Washer fluid reservoir	83
2.4	Washer pump V5	88
2.5	Windscreen washer fluid level sender G33	89
2.6	Spray jets for windscreen washer system	90
3	Headlight washer system	92
3.1	General description	92
3.2	Assembly overview - headlight washer system	92
3.3	Headlight washer system pump V11	93
3.4	Spray jet pop-up cylinder	94
3.5	Bleeding headlight washer system	96
4	Washer fluid line hose couplings	97
5	Hose repair	98
94	Lights, bulbs, switches - exterior	99
1	Operation and safety notes for gas discharge bulbs	99
2	Headlight with halogen bulbs	102
2.1	General description	102
2.2	Assembly overview - headlights with halogen bulbs	102
2.3	Removing and installing headlight	104
2.4	Adjusting headlight installation position	105
2.5	Replacing bulbs of headlights with halogen bulbs	107
2.6	Headlight range control motor	114
2.7	Repairing headlight retaining tabs	116
2.8	Converting headlights for driving on the left or right	120
2.9	Adjusting headlights	123
3	Headlights with gas discharge bulbs and cornering lights	124
3.1	General description	124
3.2	Assembly overview - headlights with gas discharge bulbs and cornering lights	125
3.3	Removing and installing headlight	126
3.4	Adjusting headlight installation position	128
3.5	Renewing gas discharge bulbs and cornering light bulbs in headlights	129
3.6	Headlight range control motor	133
3.7	Headlight holder	135
3.8	Dynamic cornering light control motor	135
3.9	Swivel module position sensor	135
3.10	Power output module for headlight	136
3.11	Gas discharge bulb control unit	137
3.12	Cornering light and headlight range control unit J745	138
3.13	Vehicle level sender	142
3.14	Repairing headlight retaining tabs	142
3.15	Converting headlights for driving on the left or right	142
3.16	Adjusting headlights	143
4	Fog lights	144



4.1	Assembly overview - fog lights	144
4.2	Removing and installing fog light	145
4.3	Removing and installing fog light bulb	146
4.4	Adjusting fog lights	147
5	Side marker lights	148
5.1	Front side marker lights	148
5.2	Rear side marker lights	149
6	Turn signal repeater and entry light in exterior mirror	150
6.1	General description	150
6.2	Turn signal repeater bulb	150
6.3	Entry light in exterior mirror	151
7	Tail lights (tail light cluster)	153
7.1	Tail light (tail light cluster) with LEDs in side panel	153
7.2	Tail light (tail light cluster) in rear lid	157
8	Number plate light	161
8.1	Clipped Number plate light X	161
9	Additional brake light	163
9.1	Additional brake light bulb M25	163
10	Steering column switch	164
10.1	General description	164
10.2	Assembly overview - steering column switch	164
10.3	Removal and installation sequence of components of steering column switch	165
10.4	Steering column electronics control unit J527	166
10.5	Steering column combination switch E595	170
10.6	Steering column switch base	171
11	Steering column switch, vehicles with entry and start authorisation (KESY)	176
11.1	General description	176
11.2	Assembly overview - steering column switch, vehicles with entry and start authorisation (KESY)	176
11.3	Removal and installation sequence of components of steering column switch	178
11.4	Steering column electronics control unit J527	178
11.5	Steering column combination switch E595	182
11.6	Steering column switch base	183
11.7	Electronic steering column lock control unit J764	188
12	Ignition/starter switch and lock cylinder	190
12.1	Steering lock housing	190
12.2	Lock cylinder	190
12.3	Ignition/starter switch	192
12.4	Ignition/starter switch, vehicles with entry and start authorisation (KESY)	194
12.5	Ignition key withdrawal lock solenoid N376	194
13	Entry and start authorisation (KESY)	196
13.1	General description	196
13.2	Assembly overview - entry and start authorisation	197
13.3	Entry and start authorisation control unit J518	199
13.4	Entry and start authorisation aerials and sensors	202
13.5	Checking entry and start authorisation aerials and sensors	205
13.6	Starter button E378	207
14	Boot lid assist	209
14.1	General description	209
14.2	Checking electronic roof control components	210
14.3	Electronic roof control functions	210
15	Parking aid (PDC)	212
15.1	General description	212
15.2	Assembly overview - parking aid	213



15.3	Parking aid control unit J446	214
15.4	Parking aid senders	214
15.5	Parking aid warning buzzer	219
15.6	Renewing PDC sender brackets in bumper cover	221
15.7	Parking aid button E266	222
16	Park assist steering (PAS)	224
16.1	General description	224
16.2	Assembly overview - park assist steering	225
16.3	Park assist steering control unit J791	227
16.4	Park assist steering senders	228
16.5	Parking aid warning buzzer	232
16.6	Renewing park assist steering system sender brackets in bumper cover	233
16.7	Park assist steering button	236
17	Main beam assist (MBA)	237
17.1	General description	237
17.2	Main beam assist control unit J844	238
17.3	Light sensor G399	238
96	Lights, bulbs, switches - interior	240
1	Interior lights and switches	240
1.1	Footwell lights	240
2	Lights and switches in engine compartment	242
2.1	Contact switch for bonnet F266	242
3	Lights and switches in dash panel	243
3.1	Light switch E1	243
3.2	Headlight range control regulator E102 and switches and instruments illumination regulator E20	244
3.3	Glove compartment light W6	245
3.4	Front passenger side airbag deactivated warning lamp K145	247
3.5	Hazard warning light switch E229	248
3.6	Key operated switch to deactivate front passenger side airbag E224	248
3.7	Tyre pressure monitor button E226	249
4	Lights and switches in doors	250
4.1	Driver side window regulator switch	250
4.2	Window regulator switch in front passenger door E107	251
4.3	Switch element for mirror adjustment	252
4.4	Driver side interior locking button for central locking system E308	254
4.5	Fuel tank flap release button E319	254
4.6	Rear lid remote release button E233	255
4.7	Button for deactivating interior monitoring and vehicle inclination sensor E616	255
4.8	Removing and installing central locking deadlock function warning lamp -SAFE- K133	257
4.9	Door lock components	258
5	Lights and switches in luggage compartment	259
5.1	Luggage compartment light W3	259
5.2	Luggage cover contact switch F364	260
6	Lights and switches in roof trim	262
6.1	Interior light	262
6.2	Light for illuminated vanity mirror	264
6.3	Garage door opener	265
7	Lights and switches in centre console	267
7.1	Switches in centre console	267
7.2	Convertible roof actuation button E137	268
7.3	Sunroof button E325	269
7.4	Cigarette lighter U1	270



8	Horn	271
8.1	Treble horn H2 and bass horn H7	271
9	Immobilizer	272
9.1	General description	272
9.2	Immobilizer control unit J362	273
9.3	Immobilizer reader coil D2	273
9.4	Ignition key	273
9.5	New identity on renewing all components	274
9.6	Online system test	274
10	Anti-theft alarm (ATA) to 05/2011	275
10.1	General description	275
10.2	Assembly overview - anti-theft alarm system	275
10.3	Activating and deactivating anti-theft alarm	277
10.4	Button for deactivating interior monitoring and vehicle inclination sensor E616	277
10.5	Interior monitor send and receive module 1 G303	277
10.6	Interior monitor send and receive module 2 G305	278
10.7	Vehicle inclination sender G384	279
10.8	Central locking and anti-theft alarm system aerial R47	281
10.9	Alarm horn H12	281
10.10	Adaptations of anti-theft alarm	283
11	Anti-theft alarm (ATA) from 06/2011	285
11.1	General description	285
11.2	Assembly overview - anti-theft alarm (ATA)	285
11.3	Activating and deactivating anti-theft alarm	287
11.4	Button for deactivating interior monitoring and vehicle inclination sensor E616	287
11.5	Anti-theft alarm system sensor G578	288
11.6	Vehicle inclination sender G384	289
11.7	Interior monitoring sensor G273	289
11.8	Central locking and anti-theft alarm system aerial R47	289
11.9	Alarm horn H12	289
11.10	Adaptations of anti-theft alarm	291
97 - Wiring		294
1	Vehicle diagnosis, testing and information systems	294
2	Fuse holder	295
2.1	Fuse holder in dash panel	295
2.2	Fuse holder in E-box	296
3	Relay carrier	297
3.1	Relay carrier on left of dash panel	297
3.2	Relay carrier on onboard supply control unit J519	298
4	Electronics boxes	300
4.1	Electronics box on left side of engine compartment	300
5	Control units	304
5.1	Onboard supply control unit J519	304
5.2	Data bus diagnostic interface J533	310
5.3	Convenience system central control unit J393	312
5.4	Driver door control unit J386	312
5.5	Front passenger door control unit J387	313
5.6	Trailer detector control unit J345	315
5.7	Garage door operation control unit J530	317
6	Wiring harness and connector repairs	318