



Contents

00 - Technical data	1
1 Notes on safety	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when using testing and measuring instruments during a road test	2
1.4 Safety precautions when working on the coolant system	2
2 Repair instructions	3
2.1 Contact corrosion	3
2.2 Routing and securing wiring	3
27 - Starter, current supply, CCS	4
1 Battery	4
1.1 Assembly overview - battery	4
1.2 Removing and installing battery	5
1.3 Disconnecting and reconnecting battery	6
1.4 Removing and installing battery tray	9
1.5 Checking battery	10
1.6 Charging battery	10
1.7 Removing and installing earth wire with battery monitor control unit J367	10
1.8 Adapting battery monitor control unit J367	11
2 Alternator	12
2.1 Alternator	12
3 Starter	13
3.1 Starter	13
4 Cruise control system (CCS)	14
4.1 Cruise control system (CCS)	14
90 - Gauges, instruments	15
1 Dash panel insert	15
1.1 General notes	15
1.2 Assembly overview - dash panel insert K	15
1.3 Removing and installing dash panel insert K	18
2 Horn	21
2.1 Assembly overview - horn	21
2.2 Removing and installing treble horn H2 / bass horn H7	22
92 - Windscreen wash/wipe system	23
1 Windscreen wiper system	23
1.1 Assembly overview - windscreen wiper system	23
1.2 Moving wipers to service position	24
1.3 Removing and installing wiper blade	24
1.4 Removing and installing wiper arms	25
1.5 Adjusting wiper arms	27
1.6 Renewing windscreen wiper rubber	28
1.7 Removing and installing wiper motor V	29
1.8 Renewing wiper motor V	31
2 Windscreen washer system	34
2.1 Assembly overview - windscreen washer system	34
2.2 Removing and installing washer fluid reservoir	35
2.3 Removing and installing windscreen and rear window washer pump V59	36
2.4 Removing and installing washer jets	36
2.5 Adjusting spray jets	37



3	Rear window wiper system	38
3.1	Assembly overview - rear window wiper system	38
3.2	Removing and installing wiper blade	39
3.3	Removing and installing wiper arm	39
3.4	Adjusting wiper arm	40
3.5	Removing and installing rear window wiper motor V12	40
4	Rear window washer system	42
4.1	Assembly overview - rear window washer system	42
4.2	Removing and installing washer jet	42
4.3	Adjusting spray jet	43
5	Washer fluid lines	44
5.1	Repairing washer fluid lines	44
94	Lights, bulbs, switches - exterior	45
1	Headlight	45
1.1	Assembly overview - headlight	45
1.2	Removing and installing headlight	46
1.3	Adjusting headlights	48
1.4	Adjusting headlight installation position	48
1.5	Removing and installing front turn signal bulb M5 / M7	50
1.6	Installing repair kit for headlight housing	51
1.7	Changing headlights over from driving on right to driving on left	53
1.8	Changing headlights over from driving on left to driving on right	53
1.9	Removing and installing headlight range control actuator V48 / V49	53
1.10	Removing and installing headlight dipped beam bulb M29 / M31 and headlight main beam bulb M30 / M32	55
1.11	Removing and installing side light bulb M1 / M3	56
2	Daytime running lights	58
2.1	Assembly overview - daytime running lights	58
2.2	Removing and installing daytime running light bulb L174 / L175	59
2.3	Removing and installing light strip for daytime running light	60
3	Turn signal repeater	61
3.1	Removing and installing turn signal repeater	61
3.2	Removing and installing turn signal repeater bulb M18 / M19	62
4	Tail lights	63
4.1	Assembly overview - tail lights in body	63
4.2	Removing and installing bulb carrier	64
4.3	Removing and installing tail light bulb M2 / M4	64
4.4	Removing and installing tail light	64
4.5	Removing and installing rear fog light bulb L46 / L47	65
4.6	Removing and installing brake and tail light bulb M21 / M22	66
4.7	Removing and installing reversing light bulb M16 / M17	66
4.8	Removing and installing turn signal bulb M6 / M8	67
5	High-level brake light	68
5.1	Removing and installing high-level brake light	68
6	Number plate light	70
6.1	Removing and installing number plate light X	70
6.2	Removing and installing bulb for number plate light X	70
7	Steering column switch module (SCSM)	72
7.1	Removing and installing steering column switch module (SCSM)	72
8	Parking aid system	75
8.1	Overview of fitting locations - parking aid system	75
8.2	Removing and installing parking aid control unit J446	76
8.3	Removing and installing rear parking aid warning buzzer H15	76



8.4	Adapting volume and frequency of rear parking aid warning buzzer H15	77
8.5	Removing and installing rear parking aid senders G203 / G206 / G796	77
8.6	Coding parking aid control unit J446	79
8.7	Adapting parking aid control unit J446	79
9	Emergency braking function	80
9.1	Removing and installing emergency braking function sensor unit J939	80
96	Lights, bulbs, switches - interior	82
1	Lights	82
1.1	Removing and installing central locking SAFELOCK function warning lamp K133	82
1.2	Checking central locking SAFELOCK function warning lamp K133	82
1.3	Renewing bulbs for front interior light W1	83
1.4	Removing and installing warning lamp for airbag deactivated on front passenger side K145	84
2	Controls	85
2.1	Removing and installing light switch E1	85
2.2	Removing and installing headlight range control adjuster E102	86
2.3	Removing and installing hazard warning light button E229	87
2.4	Removing and installing switch module in middle of dash panel	87
2.5	Removing and installing pushbutton for heated rear window E230	88
2.6	Removing and installing button for seat heating E654 / E653	88
2.7	Removing and installing key-operated switch to deactivate front passenger side airbag E224	88
2.8	Removing and installing operating unit for window regulator in driver door E512	89
2.9	Removing and installing front window regulator switch E40 / E41	91
2.10	Removing and installing mirror adjustment switch E43	92
2.11	Removing and installing driver side interior locking button for central locking system E308	92
2.12	Removing and installing front interior light W1	93
2.13	Removing and installing reading light bulbs W13 / W19	96
2.14	Removing and installing centre console switch module EX23	97
2.15	Removing and installing pushbutton for emergency braking function E773	98
2.16	Removing and installing sliding sunroof adjustment regulator EX4	98
3	Other interior lights and controls	100
3.1	Removing and installing horn plate	100
3.2	Removing and installing ignition/starter switch D	100
3.3	Checking ignition/starter switch D	101
3.4	Removing and installing lock cylinder	101
3.5	Removing and installing steering lock housing	103
4	Immobiliser	106
4.1	Removing and installing immobiliser control unit	106
4.2	Removing and installing reader coil	107
5	Cigarette lighter, sockets	108
5.1	Removing and installing cigarette lighter	108
5.2	Removing and installing bulb for illuminating cigarette lighter	108
5.3	Removing and installing 12 V socket	108
97	Wiring	109
1	Relay carriers, fuse holders, electronics boxes	109
1.1	Removing and installing electronics box (electronics box)	109
1.2	Removing and installing relay and fuse holder in electronics box	110
1.3	Removing and installing relay and fuse holder behind dash panel on driver side	113
2	Control units	119
2.1	Removing and installing onboard supply control unit	119
2.2	Removing and installing data bus diagnostic interface	122



3	Connectors	123
3.1	Repairing electrical wiring harnesses and plug-in connections	123
4	Releasing and dismantling connector housings	124
4.1	Releasing and dismantling connector housings	124
5	Repair of aerial wires	125
5.1	Repair of aerial wires	125
6	Repair of fibre optic cables	126
6.1	Repair of fibre optic cables	126
7	Vehicle diagnostic, testing and information systems	127
7.1	Vehicle diagnostic, testing and information systems	127