



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on a high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
2 Repair instructions	3
2.1 Contact corrosion	3
2.2 Routing and attachment of lines	3
2.3 Rules for cleanliness when working on high-voltage system	3
3 Hazard classification of high-voltage system	5
93 - Electric drive systems	12
1 High-voltage components	12
1.1 Overview of fitting locations - high-voltage components	12
1.2 Testing high-voltage components and high-voltage cables	14
2 Warning stickers	15
2.1 Checking warning stickers	15
3 High-voltage battery unit	20
3.1 Assembly overview - high-voltage battery	20
3.2 Visual inspection of high-voltage battery 1 AX2	26
3.3 Diagnosis of high-voltage battery 1 AX2	27
3.4 Removing and installing high-voltage battery 1 AX2	27
3.5 Raising high-voltage battery 1 AX2	35
3.6 Leakage test of high-voltage battery 1 AX2	39
3.7 Searching for leaks from high-voltage battery	39
3.8 Opening high-voltage battery 1 AX2	40
3.9 Voltage and insulation measurement	45
3.10 Opening electrical circuit	49
3.11 Closing high-voltage battery 1 AX2	52
3.12 Removing and installing module monitor control unit for batteries J497	56
3.13 Removing and installing switching unit for high-voltage battery SX6	58
3.14 Removing and installing battery regulation control unit J840	62
3.15 Removing and installing charge voltage control unit for high-voltage battery J966	65
3.16 Removing and installing high-voltage battery 1 AX2 wiring guide	65
3.17 Visual check of wiring harness	70
3.18 Removing and installing test lead for high-voltage battery 1 AX2	71
3.19 Discharging and charging capacitor	75
3.20 Removing and installing condenser	76
3.21 Charging and discharging battery modules	77
3.22 Removing and installing battery modules	79
3.23 Removing and installing crash bar	124
4 Power and control electronics for electric drive	126
4.1 Assembly overview - power and control electronics for electric drive	126
4.2 Removing and installing power and control electronics for electric drive	128
4.3 Removing and installing high-voltage system fuse 3 S353	133
5 Electric drive motor	137
5.1 Assembly overview - electric drive motor	137
5.2 Removing and installing engine cover	139
5.3 Removing and installing three-phase current drive VX54	140
5.4 Renewing three-phase current drive VX54	150
5.5 Calibrating three-phase current drive VX54	150



5.6	Removing and installing gearbox	151
5.7	Removing and installing drive motor temperature sender G712	151
5.8	Removing and installing drive motor rotor position sender 1 G713	153
6	Engine control unit	157
6.1	Assembly overview - engine control unit	157
6.2	Removing and installing engine control unit J623	158
6.3	Removing and installing bracket for engine/motor control unit J623	161
7	High-voltage cables	163
7.1	General description - high-voltage cables	163
7.2	Overview of fitting locations - high-voltage cables	163
7.3	Removing and installing high-voltage wiring harness for drive motor	164
8	Cooling system for high-voltage system	169
8.1	Assembly overview - high-voltage system cooling components	169
8.2	Coolant hose connection diagram	171
8.3	Checking cooling system for leaks	172
8.4	Draining and adding coolant	174
9	Coolant pump, regulation of cooling system	181
9.1	Assembly overview - coolant regulator unit	181
9.2	Removing and installing power and control electronics for electric drive V508	183
9.3	Removing and installing coolant pump for high temperature circuit V467	184
9.4	Removing and installing temperature sender after electric drive motor G788	185
10	Radiator, radiator fan	187
10.1	Assembly overview - radiator/radiator fan	187
10.2	Removing and installing radiator	189
10.3	Removing and installing cowling with radiator fan	192
10.4	Removing and installing radiator fan V7	193
11	High-voltage heater (PTC)	195
12	Electrical air conditioner compressor	196
13	De-energising high-voltage system	197
14	Re-energise high-voltage system	199
15	Potential equalisation lines	200
15.1	Overview of fitting locations - potential equalisation lines	200
15.2	Potential equalisation lines - high-voltage battery 1 AX2	201
15.3	Potential equalisation lines - power and control electronics for electric drive JX1	202
15.4	Potential equalisation lines - charging unit 1 for high-voltage battery AX4	202
15.5	Potential equalisation lines - three-phase current drive VX54	203
15.6	Potential equalisation lines - high-voltage heater (PTC) Z115	203
15.7	Potential equalisation lines - electrical air conditioner compressor V470	204
16	Charging socket	205
16.1	Assembly overview - charging socket	205
16.2	Removing and installing high-voltage battery charging socket 1 UX4	206
16.3	Removing and installing actuator for high-voltage charging socket lock 1 F498	213
16.4	Manual release mechanism for charging socket	216
17	Charging unit for high-voltage battery	218
17.1	Assembly overview - charging unit for high-voltage battery	218
17.2	Removing and installing charging unit 1 for high-voltage battery AX4	219
17.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	223
18	Driving sound and engine sound	225
18.1	Overview of fitting locations - driving sound and engine sound	225
18.2	Removing and installing engine sound generator control unit J943	226
18.3	Removing and installing actuator 1 for engine sound generator R257	227
19	Accelerator pedal	230
19.1	Assembly overview - accelerator module	230



19.2	Removing and installing accelerator pedal module	230
------	--	-----