

001 - Electric drive system , EABA	1-21
1. Electric drive system , EABA	1
2. Battery, Battery monitor control unit, Onboard supply control unit, Fuse holder A, Fuse holder B	2
3. Ignition/starter switch, Bonnet contact switch, Onboard supply control unit, Ignition key withdrawal lock solenoid valve	3
4. Fuse holder C	4
5. Main relay, Fuse holder C	5
6. Power and control electronics for electric drive, Electric drive control unit	6
7. Power and control electronics for electric drive, Electric drive control unit, Electric drive motor	7
8. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit	8
9. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit	9
10. High-voltage battery 1, Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Battery regulation control unit, Electric drive control unit, Control unit for air conditioner compressor, Control unit for high-voltage battery charging unit, Electrical air conditioner compressor	10
11. High-voltage battery 1, Battery regulation control unit, Maintenance connector for high-voltage system	11
12. High-voltage battery 1, Battery regulation control unit, High-voltage battery charging socket 1	12
13. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	13
14. Switch module 1 in centre console, Charge voltage control unit for high-voltage battery	14
15. Engine/motor control unit, Charge voltage control unit for high-voltage battery, Radiator fan	15
16. Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Accelerator pedal module, Engine/motor control unit	16
17. Engine/motor control unit, Coolant pump for high-temperature circuit, Coolant circulation pump before power and control electronics for electric drive	17
18. Temperature sender after electric drive motor, Brake servo control unit, Engine/motor control unit	18
19. Brake fluid level warning contact, Brake pedal position sender, Brake servo control unit, Brake system pressure accumulator	19
20. Selector lever, Brake servo control unit, Selector lever position display	20
21. Speedometer, Charge level display, Operating range display, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	21
002 - Charging sockets for high-voltage system	22-26
1. Charging sockets for high-voltage system	22
2. Charging unit 1 for high-voltage battery, Charge voltage control unit for high-voltage battery	23
3. Charging unit 1 for high-voltage battery, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	24
4. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	25
5. Switch module 1 in centre console, Charge voltage control unit for high-voltage battery	26
003 - Climatronic	27-34
1. Climatronic	27
2. Fresh air blower control unit, Climatronic relay, Climatronic control unit, Blower relay	28
3. Climatronic control unit, Control unit for air conditioner compressor, Control unit for high-voltage battery charging unit, Electrical air conditioner compressor	29
4. Climatronic control unit, High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit, Maintenance connector for high-voltage system	30
5. High-pressure sender, Sunlight penetration photosensor, Rain and light sensor, Climatronic control unit, Onboard supply control unit	31
6. Centre vent temperature sender, Footwell vent temperature sender, Climatronic control unit, Temperature flap control motor, Centre flap control motor	32
7. Evaporator output temperature sender, Climatronic control unit, Air flow flap control motor, Defroster flap control motor, Air recirculation flap control motor	33
8. Climatronic control unit	34
004 - Fuse assignment	35-49
1. Fuse assignment	35
2. Battery, Battery monitor control unit, Fuse holder A	36
3. Ignition/starter switch, Fuse holder A, Fuse holder B	37
4. Fuse holder C	38
5. Fuse holder C	39
6. Fuse holder C	40
7. Terminal 15 voltage supply relav. Terminal 75 voltage supply relav 1. Fuse holder C	41

8. Main relay, Fuse holder C	42
9. Fuse holder C	43
10. Fuse holder C	44
11. Fuse holder C	45
12. Fuse holder C	46
13. Climatronic relay, Blower relay, Fuse holder D	47
14. Fuse holder D	48
15. Heated windscreen relay, Heated windscreen relay 2, Fuse holder D, Heated windscreen	49
005 - Earthing concept	50-62
1. Earthing concept	50
2. Earth point, on right in engine compartment, Earth connection 10, in main wiring harness	51
3. Earth point, lower part of right A-pillar, Earth connection, in front passenger door wiring harness, Earth connection 17, in main wiring harness, Earth point, on right A-pillar, Earth point, on left A-pillar	52
4. Earth point, lower part of left A-pillar, Earth point, on left of front cross member, Earth connection 1, in air conditioner compressor wiring harness, Earth connection 1, in main wiring harness, Earth connection 12, in main wiring harness, Earth connection 15, in main wiring harness, Earth connection 17, in main wiring harness	53
5. Earth point, on centre of front cross member, Earth connection, in rear lid wiring harness, Earth connection 1, in air conditioner compressor wiring harness, Earth connection 11, in main wiring harness, Earth connection 18, in main wiring harness, Earth connection 21, in main wiring harness, Earth point, on top end of steering column, Earth point 1, on front of right longitudinal member, Earth point on front right of cross member	54
6. Earth connection, in rear lid wiring harness, Earth connection 11, in main wiring harness, Earth connection 14, in main wiring harness	55
7. Earth connection, in driver door wiring harness, Earth connection 14, in main wiring harness, Earth connection 19, in main wiring harness	56
8. Steering column combination switch, Front camera for driver assist systems, Earth connection 13, in main wiring harness, Earth connection 19, in main wiring harness	57
9. Earth connection 2, in engine compartment wiring harness, Earth connection 22, in main wiring harness, Earth connection 24, in main wiring harness, Earth connection 30, in main wiring harness, Earth point (audio), front below centre console, Earth point 1, on front of left longitudinal member, Earth point, at front, central in roof	58
10. Earth connection 22, in main wiring harness, Earth connection 23, in main wiring harness, Earth connection 24, in main wiring harness	59
11. Earth point 2, on front of left longitudinal member, Earth point 1, on right rear wheel housing, Earth point on front left of underbody, Earth point, on rear right of underbody	60
12. Earth connection 20, in main wiring harness, Earth point 3, on front of left longitudinal member, Earth point, on left rear wheel housing	61
13. Chip card reader control unit, Chip card reader unit	62
006 - Basic equipment	63-77
1. Basic equipment	63
2. Onboard supply control unit, Terminal 75 voltage supply relay 1, Heated exterior mirror on driver side, Heated exterior mirror on passenger side	64
3. Heated windscreen relay, Onboard supply control unit, Heated windscreen relay 2, Heated rear window, Heated windscreen	65
4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump	66
5. Steering column combination switch, Onboard supply control unit	67
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Treble horn, Bass horn, Onboard supply control unit, Airbag igniter on driver side	68
7. Wiper motor control unit, Onboard supply control unit, Front interior light, Luggage compartment light, Front passenger reading light, Driver side reading light	69
8. Rotary light switch, Onboard supply control unit	70
9. Hazard warning lights button, Onboard supply control unit	71
10. Heated rear window button, Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, Left turn signal repeater bulb, Left headlight main beam bulb	72
11. Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Right side light bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor	73
12. Onboard supply control unit, Rear left fog light bulb, Right daytime running light bulb, Left tail light cluster, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversina liiht bulb. Riht turn sianal repeater bulb	74

13. Onboard supply control unit, Right tail light bulb, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Cigarette lighter, Diagnostic connection	75
14. Immobiliser reader coil, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Diagnostic connection	76
15. Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Dash panel insert	77
007 - Radio system	78-82
1. Radio system	78
2. Radio, Front left loudspeaker, Front left treble loudspeaker	79
3. Radio, Front right loudspeaker, Rear left loudspeaker, Rear right loudspeaker, Front right treble loudspeaker	80
4. Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Radio, Roof aerial, Aerial, GPS aerial, Digital radio aerial	81
5. Portable navigation and infotainment system, Interface for portable navigation and infotainment system, Radio	82
008 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	83-87
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	83
2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	84
3. ABS control unit, Emergency braking function sensor unit	85
4. Tyre Pressure Monitoring System button, Button for emergency braking function, Onboard supply control unit	86
5. Brake fluid level warning contact, Parking brake contact switch, Control unit in dash panel insert, ABS warning lamp, Brake system warning lamp, Handbrake warning lamp, Warning lamp for electronic stabilisation program and TCS	87
009 - High-voltage battery system	88-112
1. High-voltage battery system	88
2. High-voltage battery 1, Module monitor control unit for batteries, Battery module 1	89
3. High-voltage battery 1, Module monitor control unit for batteries, Battery module 2	90
4. High-voltage battery 1, Module monitor control unit for batteries, Battery module 3	91
5. High-voltage battery 1, Module monitor control unit for batteries, Battery module 4	92
6. High-voltage battery 1, Module monitor control unit for batteries, Battery module 5	93
7. High-voltage battery 1, Module monitor control unit for batteries, Battery module 6	94
8. High-voltage battery 1, Module monitor control unit for batteries, Battery module 7	95
9. High-voltage battery 1, Module monitor control unit for batteries, Battery module 8	96
10. High-voltage battery 1, Module monitor control unit for batteries, Battery module 9	97
11. High-voltage battery 1, Module monitor control unit for batteries, Battery module 10	98
12. High-voltage battery 1, Module monitor control unit for batteries, Battery module 11	99
13. High-voltage battery 1, Module monitor control unit for batteries, Battery module 12	100
14. High-voltage battery 1, Module monitor control unit for batteries, Battery module 13	101
15. High-voltage battery 1, Module monitor control unit for batteries, Battery module 14	102
16. High-voltage battery 1, Module monitor control unit for batteries, Battery module 15	103
17. High-voltage battery 1, Module monitor control unit for batteries, Battery module 16	104
18. High-voltage battery 1, Module monitor control unit for batteries, Battery module 17	105
19. High-voltage battery 1, Module monitor control unit for batteries, Battery regulation control unit	106
20. High-voltage battery 1, Battery regulation control unit, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery, High-voltage system fuse 1	107
21. High-voltage battery 1, Battery regulation control unit, DC charge contactor 1, DC charge contactor 2, High-voltage battery power contactor 1, Switching unit for high-voltage battery	108
22. High-voltage battery 1, Current sensor for high-voltage battery, Battery regulation control unit, High-voltage battery power contactor 2, Switching unit for high-voltage battery	109
23. High-voltage battery 1, Battery regulation control unit	110
24. High-voltage battery 1, Battery regulation control unit, Maintenance connector for high-voltage system	111
25. High-voltage battery 1, Battery regulation control unit	112
010 - Convenience system	113-119
1. Convenience system	113
2. Driver side central locking lock unit, Onboard supply control unit	114
3. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	115
4. Mirror adjustment switch, Onboard supply control unit	116
5. Front right window regulator switch, Front passenger side central locking lock unit, Onboard supply control unit, Front passenger side exterior mirror	117

6. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	118
7. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	119
011 - Power assisted steering	120-121
1. Power assisted steering	120
2. Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Onboard supply control unit, Electromechanical power steering warning lamp, Electromechanical power steering motor	121
012 - Panoramic sliding sunroof , (3FB)	122-123
1. Panoramic sliding sunroof , (3FB)	122
2. Sliding sunroof adjustment, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	123
013 - Parking aid (PDC)	124-125
1. Parking aid (PDC)	124
2. Rear left parking aid sender, Rear right parking aid sender, Rear centre parking aid sender, Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface	125
014 - Seat heating	126-128
1. Seat heating	126
2. Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	127
3. Centre switch module in dash panel, Centre switch module 2 in dash panel, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit	128
015 - Airbag systems	129-134
1. Airbag systems	129
2. Steering column combination switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	130
3. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	131
4. Driver side belt switch, Front passenger side belt switch, Key-operated switch to deactivate airbag on front passenger side, Rear belt switch, driver side, Rear belt switch, passenger side, Seat occupied sensor on front passenger side, Airbag control unit	132
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Airbag control unit	133
6. Airbag control unit, Dash panel insert, Airbag warning lamp	134
016 - Data bus network	135-142
1. Data bus network	135
2. Onboard supply control unit, Fuse holder C, Diagnostic connection	136
3. Seat occupied sensor on front passenger side, ABS control unit, Airbag control unit, Parking aid control unit, Onboard supply control unit, Brake servo control unit, Emergency braking function sensor unit, Brake system pressure accumulator	137
4. High-voltage battery 1, Selector lever, Power steering control unit, Onboard supply control unit, Engine/motor control unit, Battery regulation control unit, Charge voltage control unit for high-voltage battery	138
5. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Onboard supply control unit, Engine sound generator control unit	139
6. Onboard supply control unit, Chip card reader control unit, Emergency call module control unit and communication unit, Portable navigation and infotainment system, Radio	140
7. Humidity sender for air conditioning system, Rain and light sensor, Fresh air blower control unit, Sliding sunroof adjustment control unit, Climatronic control unit, Battery monitor control unit, Onboard supply control unit, High-voltage heater (PTC) control unit, Electrical air conditioner compressor	141
8. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Front camera for driver assist systems	142
017 - Engine sound generator , (GM2),(GM4)	143-144
1. Engine sound generator , (GM2),(GM4)	143
2. Engine sound generator control unit, Actuator 1 for engine sound generator	144
018 - Electric drive system , EABA	145-167
1. Electric drive system , EABA	145
2. Battery, Battery monitor control unit, Onboard supply control unit, Fuse holder A, Fuse holder B	146
3. Ignition/starter switch, Bonnet contact switch, Onboard supply control unit, Ignition key withdrawal lock solenoid valve	147
4. Fuse holder C	148
5. Main relav. Fuse holder C	149

6. Power and control electronics for electric drive, Electric drive control unit	150
7. Power and control electronics for electric drive, Electric drive control unit, Electric drive motor	151
8. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit	152
9. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit	153
10. High-voltage battery 1, Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Battery regulation control unit, Electric drive control unit, Control unit for air conditioner compressor, Control unit for high-voltage battery charging unit, Electrical air conditioner compressor	154
11. High-voltage battery 1, Battery regulation control unit, Maintenance connector for high-voltage system	155
12. High-voltage battery 1, Battery regulation control unit, High-voltage battery charging socket 1	156
13. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	157
14. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	158
15. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	159
16. Switch module 1 in centre console, Charge voltage control unit for high-voltage battery	160
17. Temperature sender after electric drive motor, Engine/motor control unit, Charge voltage control unit for high-voltage battery, Radiator fan	161
18. Accelerator pedal module, Engine/motor control unit	162
19. Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Brake servo control unit, Engine/motor control unit, Coolant pump for high-temperature circuit, Coolant circulation pump before power and control electronics for electric drive	163
20. Brake fluid level warning contact, Brake pedal position sender, Brake servo control unit	164
21. Brake servo control unit, Brake system pressure accumulator	165
22. Selector lever, Selector lever position display	166
23. Speedometer, Charge level display, Operating range display, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	167
019 - Charging sockets for high-voltage system, Japan only	168-173
1. Charging sockets for high-voltage system, Japan only	168
2. Charging unit 1 for high-voltage battery, Charge voltage control unit for high-voltage battery	169
3. Charging unit 1 for high-voltage battery, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	170
4. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	171
5. Switch module 1 in centre console, Charge voltage control unit for high-voltage battery	172
6. Charge voltage control unit for high-voltage battery	173
020 - Fuse assignment	174-188
1. Fuse assignment	174
2. Battery, Battery monitor control unit, Fuse holder A	175
3. Ignition/starter switch, Fuse holder A, Fuse holder B	176
4. Fuse holder C	177
5. Fuse holder C	178
6. Fuse holder C	179
7. Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Fuse holder C	180
8. Main relay, Fuse holder C	181
9. Fuse holder C	182
10. Fuse holder C	183
11. Fuse holder C	184
12. Fuse holder C	185
13. Climatronic relay, Blower relay, Fuse holder D	186
14. Fuse holder D	187
15. Heated windscreen relay, Heated windscreen relay 2, Fuse holder D, Heated windscreen	188
021 - Convenience system	189-199
1. Convenience system	189
2. Front passenger side central locking lock unit, Onboard supply control unit	190
3. Driver side central locking lock unit, Onboard supply control unit	191
4. Driver side interior locking button for central locking system, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	192
5. Mirror adjustment switch, Onboard supply control unit	193
6. Front passenger side central locking lock unit, Onboard supply control unit	194
7. Driver side central locking lock unit, Onboard supply control unit, Front passenger side exterior mirror	195

8. Front right window regulator switch, Onboard supply control unit, Right window regulator motor	196
9. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	197
10. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	198
11. Operating unit for window regulator in driver door, Left window regulator motor	199
022 - Multifunction steering wheel , (2ZH)	200-202
1. Multifunction steering wheel , (2ZH)	200
2. Steering column combination switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Airbag igniter on driver side, Fuse holder C	201
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	202
023 - Radio system , (I6V)	203-208
1. Radio system , (I6V)	203
2. Onboard supply control unit, Radio, Fuse holder C	204
3. Radio, Internal microphone	205
4. Radio, Front left loudspeaker, Front left treble loudspeaker, USB connection 1	206
5. Radio, Front right loudspeaker, Rear left loudspeaker, Rear right loudspeaker, Front right treble loudspeaker	207
6. Radio, Roof aerial, Radio aerial 2, Left aerial module	208
024 - Reversing camera (Rear Assist) , (KA1)	209-210
1. Reversing camera (Rear Assist) , (KA1)	209
2. Onboard supply control unit, Radio, Reversing camera, Fuse holder C	210
025 - Basic equipment	211-227
1. Basic equipment	211
2. Daytime running light switch-on relay, Fuse holder B, Fuse holder C, Relay and fuse carrier 1	212
3. Fuse holder C	213
4. Onboard supply control unit, Fuse holder C, Fuse holder D	214
5. Heated windscreen relay, Onboard supply control unit, Heated windscreen relay 2, Heated windscreen	215
6. Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	216
7. Steering column combination switch, Onboard supply control unit	217
8. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Onboard supply control unit, Airbag igniter on driver side	218
9. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Front interior light, Luggage compartment light, Front passenger reading light, Driver side reading light	219
10. Rotary light switch, Centre switch module 2 in dash panel, Hazard warning lights button, Onboard supply control unit	220
11. Centre switch module in dash panel, Heated rear window button, Onboard supply control unit, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	221
12. Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor	222
13. Treble horn, Bass horn, Onboard supply control unit, Left daytime running light bulb, Right daytime running light bulb	223
14. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left number plate light, Right number plate light	224
15. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Right tail light cluster, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb, Cigarette lighter	225
16. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	226
17. Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	227
026 - Fuse assignment	228-243
1. Fuse assignment	228
2. Battery, Battery monitor control unit, Fuse holder A	229
3. Steering column combination switch, Fuse holder A, Fuse holder B	230
4. Fuse holder C	231
5. Fuse holder C	232
6. Fuse holder C	233
7. Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Front camera for driver assist systems. Fuse holder C	234

8. Charging unit 1 for high-voltage battery, Main relay, Fuse holder C	235
9. Fuse holder C	236
10. Fuse holder C, Relay and fuse carrier 1	237
11. Fuse holder C	238
12. Fuse holder C	239
13. Climatronic relay, Blower relay, Fuse holder D	240
14. Rain and light sensor, Fuse holder D	241
15. Heated windscreen relay, Heated windscreen relay 2, Fuse holder D, Heated windscreen	242
16. Chip card reader control unit, Chip card reader unit, Fuse carrier 2	243
027 - Convenience system	244-254
1. Convenience system	244
2. Front passenger side central locking lock unit, Onboard supply control unit	245
3. Driver side central locking lock unit, Onboard supply control unit	246
4. Driver side interior locking button for central locking system, Onboard supply control unit, Central locking SAFELock function warning lamp	247
5. Mirror adjustment switch, Onboard supply control unit	248
6. Front passenger side central locking lock unit, Onboard supply control unit	249
7. Driver side central locking lock unit, Onboard supply control unit	250
8. Front right window regulator switch, Onboard supply control unit, Right window regulator motor	251
9. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Front interior light	252
10. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	253
11. Operating unit for window regulator in driver door, Left window regulator motor	254
028 - Emergency call module , (EL1)	255-256
1. Emergency call module , (EL1)	255
2. Onboard supply control unit, Emergency call module control unit and communication unit, Roof aerial, Fuse holder D	256
029 - Basic equipment	257-274
1. Basic equipment	257
2. Daytime running light switch-on relay, Fuse holder B, Fuse holder C, Relay and fuse carrier 1	258
3. Fuse holder C	259
4. Onboard supply control unit, Fuse holder C, Fuse holder D	260
5. Heated windscreen relay, Onboard supply control unit, Heated windscreen relay 2, Heated windscreen	261
6. Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Heated rear window	262
7. Steering column combination switch, Onboard supply control unit, Windscreen and rear window washer pump	263
8. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Onboard supply control unit, Airbag igniter on driver side	264
9. Steering column combination switch, Onboard supply control unit	265
10. Rotary light switch, Onboard supply control unit, Front interior light, Luggage compartment light, Front passenger reading light, Driver side reading light	266
11. Centre switch module 2 in dash panel, Hazard warning lights button, Wiper motor control unit, Onboard supply control unit	267
12. Centre switch module in dash panel, Heated rear window button, Onboard supply control unit, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	268
13. Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor	269
14. Treble horn, Bass horn, Onboard supply control unit, Left daytime running light bulb, Right daytime running light bulb	270
15. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left number plate light, Right number plate light	271
16. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb, Cigarette lighter	272
17. Immobiliser reader coil, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	273
18. Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender. Control unit in dash panel insert. Dash panel insert	274

030 - Pilot line for high-voltage system	275-277
1. Pilot line for high-voltage system	275
2. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, High-voltage heater (PTC) control unit, Maintenance connector for high-voltage system, Electric drive motor	276
3. Battery regulation control unit, High-voltage battery charging connection 1, High-voltage battery charging connection 2	277
031 - Convenience system	278-289
1. Convenience system	278
2. Front passenger side central locking lock unit, Onboard supply control unit	279
3. Driver side central locking lock unit, Onboard supply control unit	280
4. Driver side interior locking button for central locking system, Driver side central locking lock unit, Onboard supply control unit, Central locking SAFELOCK function warning lamp	281
5. Mirror adjustment switch, Onboard supply control unit	282
6. Front passenger side central locking lock unit, Onboard supply control unit	283
7. Driver side central locking lock unit, Onboard supply control unit	284
8. Front right window regulator switch, Onboard supply control unit, Right window regulator motor	285
9. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Front interior light	286
10. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	287
11. Operating unit for window regulator in driver door, Rear right central locking lock unit, Onboard supply control unit, Left window regulator motor	288
12. Operating unit for window regulator in driver door	289
032 - High-voltage battery system	290-315
1. High-voltage battery system	290
2. High-voltage battery 1, Module monitor control unit for batteries, Battery module 1	291
3. High-voltage battery 1, Module monitor control unit for batteries, Battery module 2	292
4. High-voltage battery 1, Module monitor control unit for batteries, Battery module 3	293
5. High-voltage battery 1, Module monitor control unit for batteries, Battery module 4	294
6. High-voltage battery 1, Module monitor control unit for batteries, Battery module 5	295
7. High-voltage battery 1, Module monitor control unit for batteries, Battery module 6	296
8. High-voltage battery 1, Module monitor control unit for batteries, Battery module 7	297
9. High-voltage battery 1, Module monitor control unit for batteries, Battery module 8	298
10. High-voltage battery 1, Module monitor control unit for batteries, Battery module 9	299
11. High-voltage battery 1, Module monitor control unit for batteries, Battery module 10	300
12. High-voltage battery 1, Module monitor control unit for batteries, Battery module 11	301
13. High-voltage battery 1, Module monitor control unit for batteries, Battery module 12	302
14. High-voltage battery 1, Module monitor control unit for batteries, Battery module 13	303
15. High-voltage battery 1, Module monitor control unit for batteries, Battery module 14	304
16. High-voltage battery 1, Module monitor control unit for batteries, Battery module 15	305
17. High-voltage battery 1, Module monitor control unit for batteries, Battery module 16	306
18. High-voltage battery 1, Module monitor control unit for batteries, Battery module 17	307
19. High-voltage battery 1, Module monitor control unit for batteries, Battery regulation control unit	308
20. High-voltage battery 1, Battery regulation control unit, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery, High-voltage system fuse 1	309
21. High-voltage battery 1, Battery regulation control unit, DC charge contactor 1, DC charge contactor 2, High-voltage battery power contactor 1, Switching unit for high-voltage battery	310
22. High-voltage battery 1, Current sensor for high-voltage battery, Battery regulation control unit, High-voltage battery power contactor 2, Switching unit for high-voltage battery	311
23. High-voltage battery 1, Battery regulation control unit	312
24. High-voltage battery 1, Battery regulation control unit	313
25. High-voltage battery 1, Battery regulation control unit	314
26. Fuse holder C, Maintenance connector for high-voltage system	315
033 - Pilot line for high-voltage system	316-318
1. Pilot line for high-voltage system	316
2. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, High-voltage heater (PTC) control unit, Maintenance connector for high-voltage system, Electric drive motor	317
3. Battery regulation control unit, High-voltage battery charging connection 1, High-voltage battery charging connection 2	318
034 - Airbag systems , (4UF)	319-328
1. Airbag systems , (4UF)	319
2. Kev-operated switch to deactivate airbaa on front passenger side. Airbaa control unit. Onboard	320

supply control unit, Data bus diagnostic interface, Fuse holder C, Diagnostic connection	
3. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	321
4. Steering column combination switch, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Airbag igniter on driver side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	322
5. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Front airbag crash sensor for driver side, Airbag control unit	323
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	324
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side	325
8. Rear belt switch, driver side, Airbag control unit, Rear belt tensioner igniter on passenger side	326
9. Rear belt switch, passenger side, Rear seat occupied sensor on driver side, Airbag control unit	327
10. Rear seat occupied sensor on passenger side	328
035 - Electric drive system , EBMA	329-357
1. Electric drive system , EBMA	329
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	330
3. Fuse holder C	331
4. Main relay, Fuse holder C	332
5. Ignition/starter switch, Bonnet contact switch, Onboard supply control unit, Ignition key withdrawal lock solenoid valve	333
6. Onboard supply control unit	334
7. Coupling point in engine compartment, left	335
8. Power and control electronics for electric drive, Electric drive control unit, Coupling point in engine compartment, left, Electric drive motor	336
9. Power and control electronics for electric drive, Electric drive control unit, Electric drive motor	337
10. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit	338
11. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, Control unit for air conditioner compressor, Control unit for high-voltage battery charging unit, Electrical air conditioner compressor	339
12. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electric drive control unit, Control unit for high-voltage battery charging unit	340
13. Power and control electronics for electric drive, Electric drive control unit, Coupling point in engine compartment, left, Maintenance connector for high-voltage system	341
14. Coupling point in engine compartment, left	342
15. High-voltage battery 1, Battery regulation control unit	343
16. High-voltage battery 1, Battery regulation control unit	344
17. High-voltage battery 1, Battery regulation control unit, High-voltage battery charging socket 1	345
18. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	346
19. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	347
20. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	348
21. Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	349
22. Switch module 1 in centre console, Charge voltage control unit for high-voltage battery	350
23. Engine/motor control unit, Charge voltage control unit for high-voltage battery	351
24. Accelerator pedal module, Engine/motor control unit	352
25. Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Temperature sender after electric drive motor, Engine/motor control unit, Coolant pump for high-temperature circuit, Coolant circulation pump before power and control electronics for electric drive	353
26. Speedometer, Charge level display, Operating range display, Multifunction indicator, Control unit in dash panel insert, Engine/motor control unit, Dash panel insert, Radiator fan	354
27. Brake servo control unit, Brake system pressure accumulator	355
28. Brake fluid level warning contact, Brake pedal position sender, Brake servo control unit	356
29. Selector lever, Selector lever position display	357
036 - Front camera for driver assist systems , (QK1)	358-359
1. Front camera for driver assist systems , (QK1)	358
2. Onboard supply control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	359
037 - High-voltage battery system	360-382
1. High-voltage battery system	360
2. High-voltage battery 1, Module monitor control unit for batteries, Battery module 1	361
3. High-voltage battery 1, Module monitor control unit for batteries, Battery module 2	362

4. High-voltage battery 1, Module monitor control unit for batteries, Battery module 3	363
5. High-voltage battery 1, Module monitor control unit for batteries, Battery module 4	364
6. High-voltage battery 1, Module monitor control unit for batteries, Battery module 5	365
7. High-voltage battery 1, Module monitor control unit for batteries, Battery module 6	366
8. High-voltage battery 1, Module monitor control unit for batteries, Battery module 7	367
9. High-voltage battery 1, Module monitor control unit for batteries, Battery module 8	368
10. High-voltage battery 1, Module monitor control unit for batteries, Battery module 9	369
11. High-voltage battery 1, Module monitor control unit for batteries, Battery module 10	370
12. High-voltage battery 1, Module monitor control unit for batteries, Battery module 11	371
13. High-voltage battery 1, Module monitor control unit for batteries, Battery module 12	372
14. High-voltage battery 1, Module monitor control unit for batteries, Battery module 13	373
15. High-voltage battery 1, Module monitor control unit for batteries, Battery module 14	374
16. High-voltage battery 1, Module monitor control unit for batteries, Battery regulation control unit	375
17. High-voltage battery 1, Battery regulation control unit, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery, High-voltage system fuse 1	376
18. High-voltage battery 1, Battery regulation control unit, DC charge contactor 1, DC charge contactor 2, High-voltage battery power contactor 1, Switching unit for high-voltage battery	377
19. High-voltage battery 1, Current sensor for high-voltage battery, Battery regulation control unit, High-voltage battery power contactor 2, Switching unit for high-voltage battery	378
20. High-voltage battery 1, Battery regulation control unit	379
21. High-voltage battery 1, Battery regulation control unit	380
22. High-voltage battery 1, Battery regulation control unit	381
23. Fuse holder C, Maintenance connector for high-voltage system	382
038 - Electronic logbook, chip card reader unit , (FOQ),(LOL)	383-385
1. Electronic logbook, chip card reader unit , (FOQ),(LOL)	383
2. Chip card reader control unit, Chip card reader unit, Fuse carrier 2	384
3. Onboard supply control unit, Chip card reader control unit	385
039 - Fuse assignment	386-405
1. Fuse assignment	386
2. Battery, Battery monitor control unit, Fuse holder A	387
3. Steering column combination switch, Fuse holder A, Fuse holder B	388
4. Fuse holder C	389
5. Fuse holder C	390
6. Front camera for driver assist systems, Fuse holder C	391
7. Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Fuse holder C	392
8. Main relay, Fuse holder C	393
9. Fuse holder C	394
10. Fuse holder C	395
11. Charging unit 1 for high-voltage battery, Fuse holder C	396
12. Fuse holder C	397
13. Fuse holder C	398
14. Fuse holder C	399
15. Climatronic relay, Blower relay, Fuse holder D	400
16. Rain and light sensor, Fuse holder D	401
17. Heated windscreen relay, Heated windscreen relay 2, Fuse holder D, Heated windscreen	402
18. Chip card reader control unit, Chip card reader unit, Fuse carrier 2	403
19. Onboard supply control unit	404
20. Onboard supply control unit	405
801 - - Fitting locations: Earth points - 3	406-410
1. Earth points	406-410
1.1 Overview of earth points	406-410
802 - -Fitting locations: Fuses - 3	411-452
1. Fuses	411-452
1.1 Overview of fuses	411-412
1.2 Fitting location of fuse holder A -SA-	413
1.3 Fuse assignment for fuse holder A -SA-, from July 2013	414
1.4 Fuse assignment for fuse holder A -SA-, from May 2014	414
1.5 Fuse assignment for fuse holder A -SA-, from November 2020	415
1.6 Fitting location of fuse holder B -SB-	415
1.7 Fuse assignment for fuse holder B -SB-, from July 2013	416
1.8 Fuse assignment for fuse holder B -SB-, from November 2019	417
1.9 Fuse assignment for fuse holder B -SB-, from November 2021	418
1.10 Fitting location of fuse holder C -SC-	418-419
1.10.1 Fitting location of fuse holder C -SC-. LHD models	418

1.10.2 Fitting location of fuse holder C -SC-, RHD models	419
1.11 Fuse assignment for fuse holder C -SC-, from July 2013	420-421
1.12 Fuse assignment for fuse holder C -SC-, from November 2013	422-424
1.13 Fuse assignment for fuse holder C -SC-, from May 2014	425-427
1.14 Fuse assignment for fuse holder C -SC-, from November 2014	428-430
1.15 Fuse assignment for fuse holder C -SC-, from August 2016	431-433
1.16 Fuse assignment for fuse holder C -SC-, from November 2016	434-436
1.17 Fuse assignment for fuse holder C -SC-, from November 2017	437-439
1.18 Fuse assignment for fuse holder C -SC-, from July 2018	440-442
1.19 Fuse assignment for fuse holder C -SC-, from August 2019	443-445
1.20 Fitting location of fuse holder D -SD-	446
1.21 Fuse assignment for fuse holder D -SD-, from July 2013	447
1.22 Fuse assignment for fuse holder D -SD-, from May 2014	447
1.23 Fuse assignment of fuse holder D -SD-, from August 2016	448
1.24 Fitting location fuse carrier 2 -ST2-	449-450
1.24.1 Fitting location of fuse carrier 2 -ST2-, left-hand drive models	449
1.24.2 Fitting location of fuse carrier 2 -ST2-, right-hand drive models	450
1.25 Fuse assignment for fuse carrier 2 -ST2- , from November 2020	451-452
803 - - Fitting locations: Relays - 3	453-458
1. Relays	453-458
1.1 Overview of relay carriers	453-454
1.2 Location and position of relays Relay and fuse carrier 1 -SR1-	455-458
1.2.1 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, left-hand drive models, from July 2013	455
1.2.2 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, left-hand drive models, from August 2016	456
1.2.3 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, right-hand drive models, from July 2013	457
1.2.4 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, right-hand drive models, from August 2016	458
804 - -Fitting locations: Control units in front part of vehicle - 3	459-480
1. Control units in front part of vehicle	459-480
1.1 Overview of control units	459
1.2 Power and control electronics for electric drive -JX1-	460
1.3 Engine/motor control unit -J623-	461-462
1.4 Brake servo control unit -J539-, left-hand drive models	463
1.5 Brake servo control unit -J539-, right-hand drive models	464-465
1.6 Wiper motor control unit -J400-, left-hand drive models	466-467
1.7 Wiper motor control unit -J400-, right-hand drive models	468
1.8 ABS control unit -J104-	469-470
1.9 High-voltage heater (PTC) -Z115-	471-472
1.10 Charging unit 1 for high-voltage battery -AX4-, with 28-pin connector -T28-	473-474
1.11 Charging unit 1 for high-voltage battery -AX4-, with 60-pin connector -T60-	475-477
1.12 Control unit for air conditioning compressor -J842-	478-480
805 - - Fitting locations: Control units in middle part of vehicle - 3	481-523
1. Control units in middle part of vehicle	481-523
1.1 Overview of control units	481-482
1.2 Radio -R-	483-485
1.3 Portable navigation and infotainment system -J982-	486-487
1.4 Emergency braking function sensor unit -J939-	488-489
1.5 Front camera for driver assist systems -R242-	490-491
1.6 Climatronic control unit -J255-	492-493
1.7 Control unit in dash panel insert -J285-	494-495
1.8 Steering column combination switch -E595-	496
1.9 Battery regulation control unit -J840-	497
1.10 Switching unit for high-voltage battery -SX6-	498
1.11 Module monitor control unit for batteries -J497-	499
1.12 Charge voltage control unit for high-voltage battery -J966-	500-502
1.13 Engine sound generator control unit -J943-	503
1.14 Onboard supply control unit -J519-	504-508
1.14.1 Onboard supply control unit -J519-, left-hand drive models	504
1.14.2 Onboard supply control unit -J519-, right-hand drive models	505
1.14.3 Onboard supply control unit -J519-	506-508
1.15 Emergency call module control unit and communication unit -J949-	509-510
1.16 Heated front seats control unit -J774-, left-hand drive models	511-512
1.17 Heated front seats control unit -J774-. riahrt-hand drive models	513-514

1.18 Airbag control unit -J234-	515
1.19 Power steering control unit -J500-, left-hand drive models	516-517
1.20 Power steering control unit -J500-, right-hand drive models	518
1.21 Fresh air blower control unit -J126-	519-520
1.22 Chip card reader control unit -J676-	521-523
806 - - Fitting locations: Control units in rear part of vehicle - 3	524-529
1. Control units in rear part of vehicle	524-529
1.1 Overview of control units in rear part of vehicle	524
1.2 Sliding sunroof adjustment control unit -J245-	525
1.3 Rear window wiper motor -V12-	526-527
1.4 Parking aid control unit -J446-	528-529
807 - -Fitting locations: Coupling points - 3	530-552
1. Coupling points	530-552
1.1 Coupling point in engine compartment, left -TML-	530
1.2 Coupling point in engine compartment, right -TMR-, right-hand drive models	531
1.3 Coupling point on charging socket in engine compartment -TMM-, right-hand drive models	532
1.4 Coupling point in interior, below right -TIUR-, right-hand drive models	533
1.5 Coupling point on front right door -TTVR-	534-535
1.6 Coupling point for roof -TH-	536
1.7 Coupling point for front right seat -TSVR-	537-538
1.7.1 Coupling point for front right seat -TSVR-, LHD models	537
1.7.2 Coupling point for front right seat -TSVR-, RHD models	538
1.8 Coupling point for front left seat -TSVL-	539-540
1.8.1 Coupling point for front left seat -TSVL-, LHD models	539
1.8.2 Coupling point for front left seat -TSVL-, RHD models	540
1.9 Diagnostic connection -U31-	541-542
1.9.1 Diagnostic connection -U31-, LHD models	541
1.9.2 Diagnostic connection -U31-, RHD models	542
1.10 Coupling point on front left door -TTVL-	543
1.11 Coupling point on rear left door -TTHL-	544
1.12 Coupling point on rear right door -TTHR-	545
1.13 Coupling point on rear lid -THK-	546-548
1.13.1 Coupling point on rear lid -THK-, from July 2013	546
1.13.2 Coupling point for rear lid -THK-, from August 2016	547
1.13.3 Coupling point for rear lid -THK-, from November 2017	548
1.14 Coupling point on rear left bumper -TSFHL-	549
1.15 Coupling point at rear right on charging socket -TCR-	550
1.16 Coupling point on high-voltage battery -TAHV-	551-552