



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
2 Evaluating accident vehicles	2
2.1 Check list for evaluating running gear on accident vehicles	2
3 Repair notes	4
3.1 Leaks at shock absorbers	4
3.2 Noises from shock absorbers	4
3.3 Checking shock absorbers when removed	5
3.4 Steering rack	5
3.5 Gaskets and seals	6
3.6 Nuts and bolts	6
3.7 Electrical components	6
3.8 Raising suspension to unladen position (vehicles with coil springs)	7
4 Disposal	10
4.1 Releasing gas and draining front gas-filled shock absorbers	10
4.2 Releasing gas and draining rear gas-filled shock absorbers	12
40 - Front suspension	14
1 Front axle	14
1.1 Overview - front axle	14
2 Subframe	15
2.1 Assembly overview – subframe	15
2.2 Fixing subframe in position	17
2.3 Lowering subframe	20
2.4 Removing and installing subframe without steering rack	21
2.5 Removing and installing anti-roll bar	23
2.6 Renewing anti-roll bar bushes	25
3 Suspension strut, upper suspension link	27
3.1 Assembly overview – suspension strut, upper suspension link	27
3.2 Removing and installing suspension strut	27
3.3 Repairing suspension strut	36
4 Lower suspension link, swivel joint	41
4.1 Assembly overview – lower suspension link, swivel joint	41
4.2 Removing and installing lower suspension link	41
4.3 Renewing bonded rubber bush for lower suspension link	44
4.4 Checking swivel joint	50
4.5 Removing and installing swivel joint	51
5 Wheel bearing	58
5.1 Assembly overview – wheel bearing assembly	58
5.2 Renewing wheel bearing	58
5.3 Removing and installing wheel bearing housing	71
6 Drive shaft	79
6.1 Assembly overview – drive shaft	79
6.2 Removing and installing drive shaft	81
6.3 Removing and installing intermediate steering shaft	86
6.4 Dismantling and assembling drive shaft	90
6.5 Checking outer constant velocity joint	96
42 - Rear suspension	99
1 Rear axle	99



1.1	Overview of fitting locations – rear axle	99
1.2	Lowering rear axle	99
1.3	Removing and installing rear axle	103
2	Axle beam	113
2.1	Assembly overview – axle beam	113
2.2	Renewing bonded rubber bush for axle beam	115
3	Suspension strut, shock absorber, spring	120
3.1	Assembly overview – suspension strut, shock absorber, spring	120
3.2	Removing and installing shock absorber	121
3.3	Repairing shock absorber	124
3.4	Removing and installing spring	126
4	Wheel bearing assembly, trailing arm	128
4.1	Assembly overview – wheel bearing assembly	128
4.2	Removing and installing wheel bearing unit	129
44	- Wheels, tyres, vehicle geometry	132
1	Wheel alignment	132
1.1	Notes for wheel alignment	132
1.2	Conditions for testing	133
1.3	Preparations for testing	133
1.4	Specifications for wheel alignment	134
1.5	Wheel alignment procedure	137
1.6	Necessity of wheel alignment	138
1.7	Vehicle data sticker	139
1.8	Adjusting camber at front wheels	139
1.9	Adjusting camber on rear axle	140
1.10	Adjusting toe at rear axle	141
1.11	Adjusting front axle toe	141
1.12	Wheel runout compensation	141
1.13	Checking maximum steering wheel angle	142
48	- Steering	144
1	Steering wheel	144
1.1	Assembly overview – steering wheel	144
1.2	Removing and installing steering wheel	145
2	Steering column	148
2.1	Assembly overview – steering column	148
2.2	Removing and installing steering column	158
2.3	Handling and transporting steering column	190
2.4	Removing and installing power steering control unit J500	191
2.5	Removing and installing intermediate steering shaft	205
3	Steering rack	207
3.1	Assembly overview – steering rack	207
3.2	Removing and installing steering rack	208
3.3	Repairing steering rack	213
3.4	Removing and installing track rod	214
3.5	Removing and installing track rod ball joint	217
3.6	Adjusting steering rack	218