



## Contents

<b>50 - Body - front</b> .....	<b>1</b>
<b>1 Lock carrier</b> .....	<b>1</b>
1.1 Assembly overview – lock carrier .....	1
1.2 Moving to and back from service position .....	1
1.3 Removing and installing lock carrier .....	5
<b>2 Wings</b> .....	<b>8</b>
2.1 Assembly overview – wing .....	8
2.2 Removing and installing wing .....	8
<b>3 Bulkhead</b> .....	<b>14</b>
3.1 Assembly overview – bulkhead .....	14
3.2 Assembly overview – plenum chamber cover .....	14
3.3 Removing and installing plenum chamber cover .....	15
<b>55 - Bonnet, rear lid</b> .....	<b>19</b>
<b>1 Bonnet</b> .....	<b>19</b>
1.1 Assembly overview – bonnet .....	19
1.2 Removing and installing bonnet .....	22
1.3 Adjusting bonnet .....	26
1.4 Removing and installing hinges .....	31
1.5 Removing and installing bonnet stay .....	33
1.6 Removing and installing bonnet seals .....	35
1.7 Removing and installing rear lid lock .....	36
1.8 Removing and installing bonnet lock operating lever .....	39
<b>2 Rear lid</b> .....	<b>42</b>
2.1 Assembly overview – rear lid .....	42
2.2 Removing and installing rear lid .....	44
2.3 Adjusting rear lid .....	47
2.4 Removing and installing hinges .....	54
2.5 Removing and installing gas strut .....	57
2.6 Removing and installing operating mechanism .....	60
2.7 Removing and installing rear lid lock .....	62
2.8 Removing and installing rear lid seal .....	65
<b>3 Tank flap unit</b> .....	<b>68</b>
3.1 Assembly overview – tank flap unit .....	68
3.2 Removing and installing tank flap unit .....	68
<b>4 Charging flap unit</b> .....	<b>71</b>
4.1 Assembly overview – charging flap unit .....	71
4.2 Removing and installing charging flap unit .....	72
<b>57 - Front doors, door components, central locking</b> .....	<b>76</b>
<b>1 Door</b> .....	<b>76</b>
1.1 Assembly overview – door .....	76
1.2 Removing and installing door .....	78
1.3 Adjusting door .....	82
1.4 Adjusting striker pin .....	86
<b>2 Door components</b> .....	<b>89</b>
2.1 Assembly overview - components .....	89
2.2 Assembly overview – door handle and door lock .....	92
2.3 Removing and installing components .....	94
2.4 Removing and installing door handle .....	100
2.5 Removing and installing door lock .....	113
2.6 Removing and installing door seal .....	116



<b>3</b>	<b>Central locking</b> .....	<b>119</b>
3.1	Assembly overview - central locking .....	119
3.2	Removing and installing ignition key battery .....	122
<b>58</b>	<b>Rear doors, door components</b> .....	<b>125</b>
<b>1</b>	<b>Door</b> .....	<b>125</b>
1.1	Assembly overview – door .....	125
1.2	Removing and installing door .....	127
1.3	Adjusting door .....	131
1.4	Adjusting striker pin .....	133
<b>2</b>	<b>Door components</b> .....	<b>137</b>
2.1	Assembly overview - components .....	137
2.2	Assembly overview – door handle and door lock .....	138
2.3	Removing and installing components .....	139
2.4	Removing and installing door handle .....	146
2.5	Removing and installing door lock .....	152
2.6	Removing and installing door seal .....	155
<b>60</b>	<b>Sunroof</b> .....	<b>158</b>
<b>1</b>	<b>Sliding sunroof</b> .....	<b>158</b>
1.1	Assembly overview – sliding sunroof .....	158
1.2	Assembly overview – sunroof roller blind .....	161
1.3	Assembly overview - sliding sunroof frame .....	162
1.4	Assembly overview - front trim .....	163
1.5	Removing sunroof panel .....	164
1.6	Adjusting sunroof panel .....	171
1.7	Removing and installing sliding sunroof adjustment control unit J245 .....	172
1.8	Adapting sliding sunroof adjustment control unit J245 .....	177
1.9	Removing and installing cover .....	178
1.10	Removing and installing wind deflector .....	179
1.11	Removing and installing sunroof roller blind .....	181
1.12	Removing and installing slotted guide .....	188
1.13	Removing and installing sliding sunroof seals .....	192
1.14	Removing and installing sliding sunroof frame .....	195
1.15	Removing and installing front trim for sliding sunroof .....	205
<b>2</b>	<b>Water drain hoses</b> .....	<b>215</b>
2.1	Assembly overview - water drain hoses .....	215
2.2	Cleaning water drain hoses .....	215
<b>63</b>	<b>Bumpers</b> .....	<b>218</b>
<b>1</b>	<b>Bumper, front</b> .....	<b>218</b>
1.1	Assembly overview – bumper cover .....	218
1.2	Removing and installing bumper cover .....	224
1.3	Repairing bumper cover .....	227
<b>2</b>	<b>Bumper, rear</b> .....	<b>228</b>
2.1	Assembly overview – bumper cover .....	228
2.2	Removing and installing bumper cover .....	234
2.3	Installing holder for parking aid sender .....	237
2.4	Repairing bumper cover .....	242
<b>64</b>	<b>Glazing</b> .....	<b>243</b>
<b>1</b>	<b>Repair notes</b> .....	<b>243</b>
1.1	Minimum drying times for bonded windows .....	243
1.2	Window repair .....	244
1.3	Installation instructions for bonded windows .....	244



1.4	Preparing old undamaged windows for installing	246
1.5	Preparing new windows for installing	247
1.6	Preparing body flange for installing	247
1.7	Cleaning off excess adhesive	249
<b>2</b>	<b>Windscreen</b>	<b>250</b>
2.1	Assembly overview – windscreen	250
2.2	Removing and installing windscreen	250
<b>3</b>	<b>Rear windscreen</b>	<b>257</b>
3.1	Assembly overview – rear window	257
3.2	Removing and installing rear window	257
<b>4</b>	<b>Side windows</b>	<b>262</b>
4.1	Assembly overview - rear side windows	262
4.2	Removing and installing rear side window	262
<b>5</b>	<b>Door windows</b>	<b>266</b>
5.1	Assembly overview - front door window	266
5.2	Assembly overview - rear door window	266
5.3	Removing and installing front door window	267
5.4	Removing and installing rear door window	271
<b>6</b>	<b>Window regulator</b>	<b>275</b>
6.1	Removing and installing front window regulator	275
6.2	Removing and installing front window regulator motor	277
6.3	Removing and installing front window regulator drive	280
6.4	Removing and installing front window crank	282
6.5	Removing and installing rear window regulator	283
<b>7</b>	<b>Window channels and seals</b>	<b>286</b>
7.1	Removing and installing front window channel	286
7.2	Guide rail	289
7.3	Removing and installing rear window channel	293
7.4	Removing and installing front window slot seal	295
7.5	Removing and installing rear window slot strip	299
7.6	Removing and installing window seal	301
<b>66</b>	<b>Exterior equipment</b>	<b>302</b>
<b>1</b>	<b>Radiator grille and front trim</b>	<b>302</b>
1.1	Assembly overview – radiator grille	302
1.2	Removing and installing radiator grille	302
<b>2</b>	<b>Spoiler</b>	<b>305</b>
2.1	Assembly overview - spoiler, GTI	305
2.2	Removing and installing spoiler, GTI	305
<b>3</b>	<b>Mouldings, trims, extensions</b>	<b>311</b>
3.1	Assembly overview – side member trim	311
3.2	Assembly overview - A-pillar trim	312
3.3	Removing and installing side member trim	313
3.4	Removing and installing B-pillar trim	325
3.5	Removing and installing wheel arch covers	328
3.6	Removing and installing trim strips	332
3.7	Removing and installing step moulding	336
3.8	Removing and installing trim strip	339
<b>4</b>	<b>Underbody cladding</b>	<b>341</b>
4.1	Assembly overview - gas tank cover	341
4.2	Overview of fitting locations – trims	341
4.3	Assembly overview - bracing on underbody	344
4.4	Removing and installing underbody cladding	345
<b>5</b>	<b>Roof moulding and roof railing</b>	<b>348</b>



5.1	Assembly overview - roof railing	348
5.2	Removing and installing roof railing	348
<b>6</b>	<b>Exterior mirror</b>	<b>350</b>
6.1	Assembly overview – exterior mirror	350
6.2	Removing and installing mirror glass	354
6.3	Removing and installing mirror cover	356
6.4	Removing and installing mirror frame	362
6.5	Removing and installing mirror adjustment unit	364
6.6	Removing and installing exterior mirror	369
<b>7</b>	<b>Wheel housing liner</b>	<b>375</b>
7.1	Assembly overview – front wheel housing liner	375
7.2	Assembly overview – rear wheel housing liner	375
7.3	Removing and installing front wheel housing liner	376
7.4	Removing and installing rear wheel housing liner	379
<b>8</b>	<b>Lettering and badges</b>	<b>384</b>
8.1	Dimensions - lettering and badges on rear	384
8.2	Renewing lettering and badges on sides	387
8.3	Removing and installing lettering and emblems for radiator grille	391
8.4	Renewing lettering and badges at rear	395
<b>9</b>	<b>Protective films/decorative films</b>	<b>399</b>
9.1	Renewing protective films/decorative films	399
<b>10</b>	<b>Special add-on parts</b>	<b>405</b>
10.1	Assembly overview – special add-on parts	405
<b>11</b>	<b>Heat shields</b>	<b>408</b>
11.1	Removing and installing underbody heat shield	408