



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety precautions when handling refrigerants	1
1.3 Safety precautions when working on high-voltage system	2
1.4 Safety precautions when working in the vicinity of high-voltage components	3
1.5 Safety precautions when working on the cooling system	3
2 General information	4
2.1 Notes concerning odours in air conditioned vehicles	4
2.2 Type plates	4
3 Repair instructions	6
3.1 Working on refrigerant circuit	6
3.2 General repair instructions	6
3.3 Refrigerant circuit seals	6
4 Technical data	8
4.1 Refrigerant capacity	8
4.2 Refrigerant oil	8
4.3 Oil distribution	9
80 - Heating	10
1 Heating	10
87 - Air conditioning system	11
1 Overview of fitting locations - air conditioning system	11
1.1 Overview of fitting locations - components not located in passenger compartment	11
1.2 Overview of fitting locations - components located in front section of passenger compartment	15
2 Refrigerant circuit	17
2.1 System overview - refrigerant circuit	17
2.2 Removing and installing high-pressure sender G65	19
2.3 Removing and installing expansion valve	21
2.4 Removing and installing condenser	23
2.5 Removing and installing desiccant bag or cartridge	26
2.6 Removing and installing evacuating and charging valves on low and high-pressure side	28
3 Air conditioner compressor	32
3.1 Assembly overview - drive unit of air conditioner compressor	32
3.2 Removing electrical air conditioner compressor V470 from and attaching to bracket	32
3.3 Removing and installing electrical air conditioner compressor V470	34
3.4 Removing and installing high-voltage system fuse 3 S353	37
4 Control motors	38
4.1 Overview of fitting locations – front control motors	38
4.2 Removing and installing temperature flap control motor V68	39
4.3 Removing and installing centre flap control motor V70	42
4.4 Removing and installing air flow flap control motor V71	44
4.5 Removing and installing defroster flap control motor V107	47
5 Front heater and air conditioning unit	51
5.1 Assembly overview - add-on parts of heater and air conditioning unit and of air intake box	51
5.2 Assembly overview – evaporator housing	55
5.3 Removing and installing evaporator	57
5.4 Removing and installing evaporator output temperature sender G263	64
5.5 Removing and installing heater and air conditioning unit	66
5.6 Dismantling and assembling heater and air conditioning unit	77



5.7	Removing and installing dust and pollen filter	79
5.8	Removing and installing fresh air blower V2	80
5.9	Removing and installing fresh air blower control unit J126	84
5.10	Removing and installing heat exchanger	87
5.11	Removing and installing condensation drain	89
5.12	Checking condensation drain	90
6	Air duct	91
6.1	Assembly overview - air duct and air distribution in passenger compartment	91
6.2	Removing and installing centre vent	92
6.3	Removing and installing defroster vent	92
6.4	Removing and installing dash panel vent, side	93
6.5	Removing and installing right or left vent	93
6.6	Removing and installing air duct for defroster vent	93
6.7	Removing and installing air duct for centre vent	94
6.8	Removing and installing footwell air vents on driver and front passenger sides	95
6.9	Checking forced ventilation for passenger compartment	95
6.10	Removing and installing forced ventilation for passenger compartment	95
6.11	Removing and installing fresh air intake	96
7	Coolant circuit	99
7.1	Overview of fitting locations – coolant circuit	99
7.2	Removing and installing high-voltage heater (PTC) Z115 / high-voltage heater (PTC) J848	99
8	Operating and display unit	103
8.1	Overview of operating and display unit	103
8.2	Removing and installing operating and display unit	104
9	Other controlling and regulating components	105
9.1	Removing and installing ambient temperature sensor G17	105
9.2	Removing and installing sunlight penetration photosensor G107	105
9.3	Removing and installing humidity sender for air conditioning system G260	106
9.4	Repairing humidity sender for air conditioning system G260	108
9.5	Removing and installing centre vent temperature sender G191	110
9.6	Removing and installing footwell vent temperature sender G192	111